

HOOD SUPPORT REPLACEMENT

BO1J9-01

1. REMOVE SUPPORT FROM HOOD


Remove the bolt and support from the hood.

HINT:

While supporting the hood by hand, remove the hood.

2. REMOVE SUPPORT FROM BODY

Remove the bolt and support.

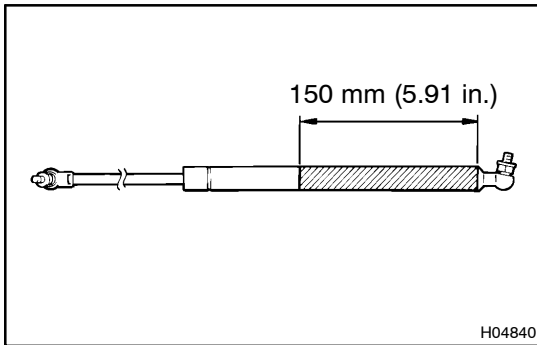

3. IF NECESSARY, REPLACE HOOD SUPPORT

NOTICE:

Handling the support

- Do not disassemble the support as the cylinder is filled with pressurized gas.
- If the support is to be replaced, drill a 2.0 – 3.0 mm (0.079 – 0.118 in.) hole in the area shown in the illustration to completely release the high pressure gas before disposing of it.
- When drilling, chips may fly out so work carefully.
- The gas is colorless, odorless and non – toxic.
- When working, handle the support carefully. Never score or scratch the exposed part of the piston rod, and allow any paint or oil to get on it.
- Do not turn the piston rod and cylinder with the support fully extended.

4. INSTALL HOOD SUPPORT

Install the hood support.