



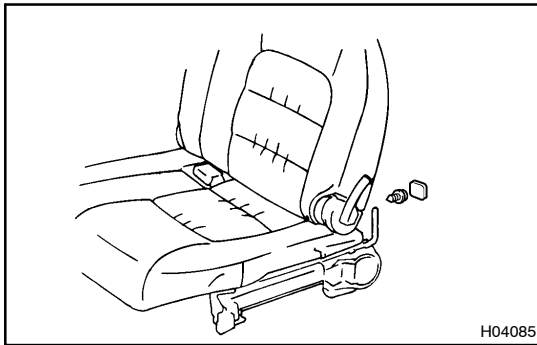

DISASSEMBLY


1. REMOVE RECLINING ADJUSTER RELEASE HANDLE

- (a) Using a screwdriver, remove the cover.
- (b) Remove the screw and reclining adjuster release handle.

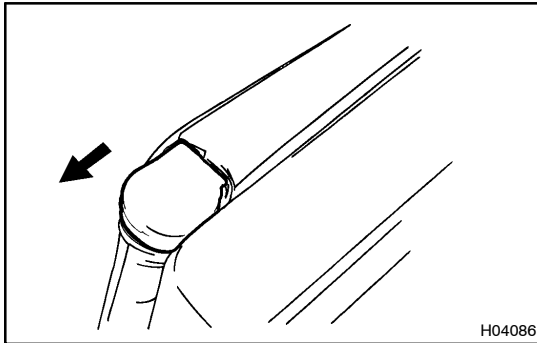


2. REMOVE REAR NO.2 SEAT RECLINING ADJUSTER COVERS

Remove the No.2 rear seat reclining covers.

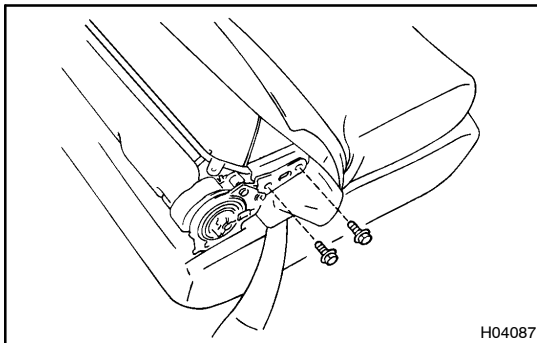

3. REMOVE SEATBACK ASSEMBLY

- (a) disengage the hook.
- (b) Remove the 4 bolts and seatback assembly.
Torque: 41 N·m(420 kgf·cm, 30 ft·lbf)

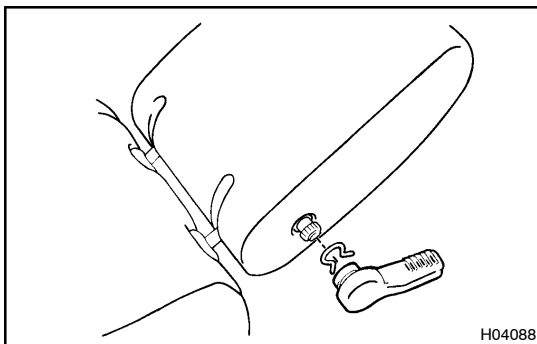

4. REMOVE HEADREST


- (a) Remove the headrest adjuster knob.
- (b) Remove the headrest.

5. REMOVE SEATBACK COVER

- (a) Remove the headrest supports.
- (b) Remove the seatback cover with pad from the seatback frame.
- (c) Remove the seatback cover from the seatback pad.

6. REMOVE THESE PARTS:

- (a) Rear No.2 lap type center with inner belt
- (b) Rear seat lock control cable

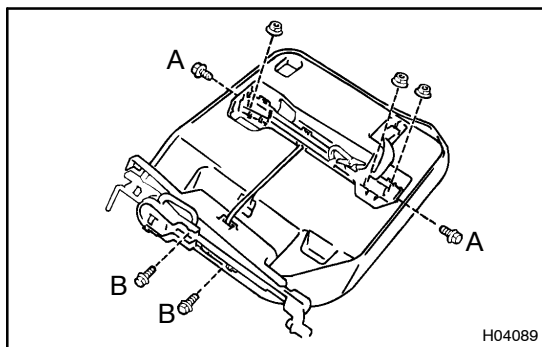**7. REMOVE ADJUSTER**

- (a) Remove the 3 nuts.
- (b) Remove the 4 bolts.

Torque:


A bolt: 18 N·m (185 kgf·cm, 13 ft·lbf)

B bolt: 37 N·m (380 kgf·cm, 27 ft·lbf)

- (c) Remove the adjuster.
- (d) Remove the 2 screws and seat leg No.1 stay.

8. REMOVE THESE PARTS:


- (a) Seat leg bracket
- (b) Seat leg rear cover
- (c) Seat leg cover

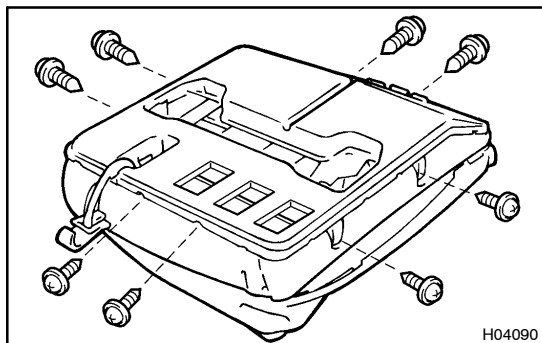**9. REMOVE SEAT CUSHION UNDER COVER**

- (a) Using a screwdriver, disengage the hooks.
- (b) Remove the 8 screws.
- (c) Remove the seat cushion under cover.

10. REMOVE THESE PARTS:


- (a) Seat adjuster control cable
- (b) Rear seat reclining inner covers

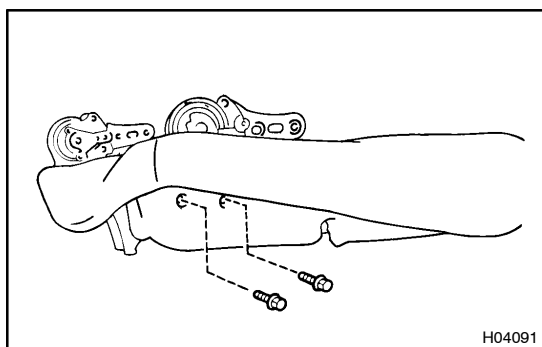**11. REMOVE REAR NO.2 SEAT RECLINING ADJUSTERS**

- (a) Remove the 4 bolts.
- Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**
- (b) Remove the rear No.2 seat reclining adjusters.

12. REMOVE SEAT CUSHION COVER

- (a) Remove hog rings and seat cushion frame.
- (b) Remove the seat cushion cover from the seat cushion pad.

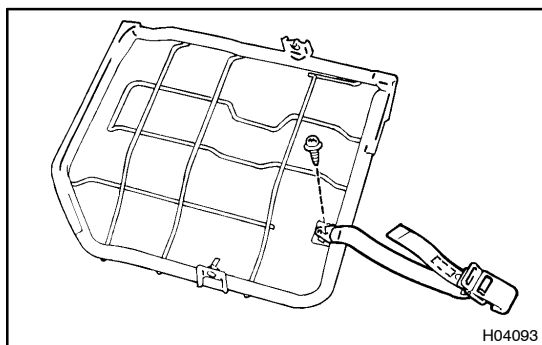**13. REMOVE HOLD SEAT STOPPER NO.2 BAND**

- (a) Remove the screw.
- (b) Remove the hold seat stopper No.2 band.