


REMOVAL

1. w/ Rear No.2 Seat:
REMOVE REAR NO.2 SEAT

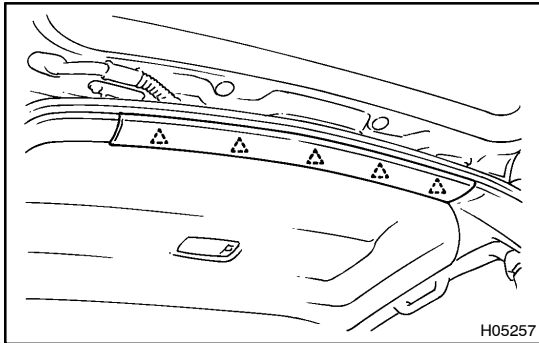


2. **REMOVE ROOF HEADLINING REAR TRIM**

Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape the screwdriver tip before use.

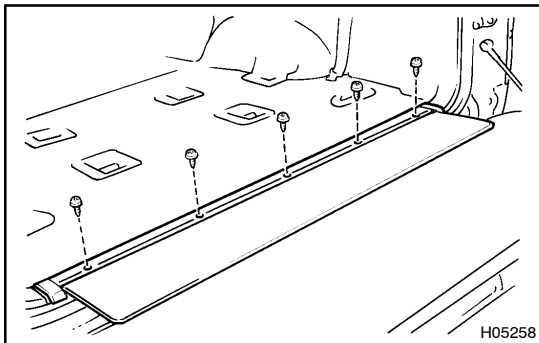


3. **REMOVE REAR MAT SET PLATE**

- (a) Remove the 5 screws.

- (b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape the screwdriver tip before use.

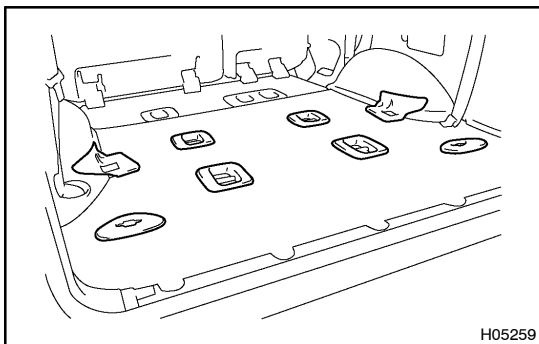

4. w/ Rear No.2 Seat:

REMOVE STRIKER PLATE

Using a screwdriver, remove the striker plates.

5. **REMOVE THESE PARTS:**

- (a) w/ Tonneau cover:

Tonneau cover

- (b) Rear mat

- (c) w/ Rear No.2 Seat:

Rear No.2 seat outer belt floor anchors


Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

- (d) Rear No.1 seat outer belt floor anchors


Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

- (e) Rear door scuff plates

- (f) Rear door opening trims

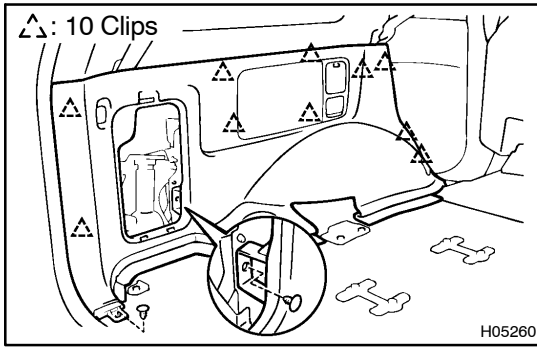**6. REMOVE LH QUARTER TRIM PANEL**


- Remove the quarter trim jack cover.
- Using a clip remover, remove the 2 clips.
- Remove the LH quarter trim panel, then disconnect the connector.

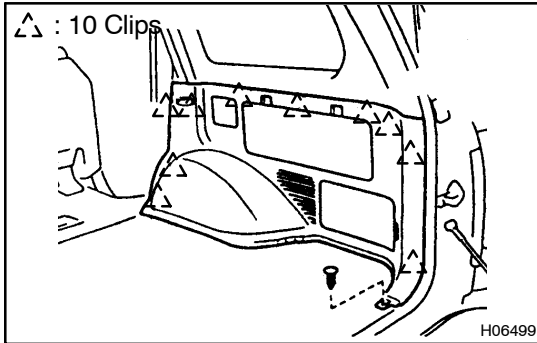**7. REMOVE RH QUARTER TRIM PANEL**

- Using a clip remover, remove the clip.
- Remove the RH quarter trim panel.

8. REMOVE THESE PARTS:

- w/ Rear No.2 Seat:
Rear No.2 seat outer belt shoulder anchors
Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)
- Rear No.1 seat outer belt shoulder anchors
Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

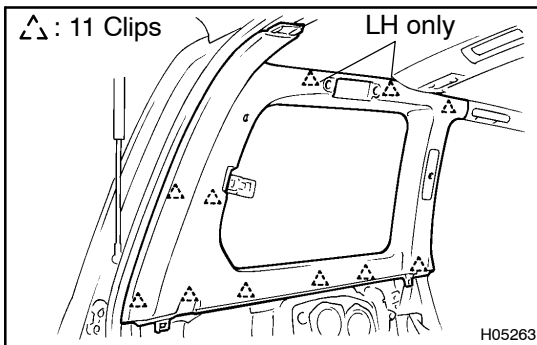**9. REMOVE UPPER ROOF SIDE INNER GARNISH**

- w/ Rear No.2 Seat:
Using a screwdriver, remove the assist grip plugs, then remove the 4 screws and assist grips.

HINT:

Tape the screwdriver tip before use.

- Using a clip remover, remove the clip.
- Using a screwdriver, remove the upper roof side inner garnishes.

HINT:

Tape the screwdriver tip before use.

10. REMOVE THESE PARTS:

- Front door scuff plates
- Cowl side trims
- Front door opening trims

11. REMOVE FRONT PILLAR GARNISH

- Using a screwdriver, remove the assist grip plugs, then remove the 6 screws and 3 assist grips.


HINT:


Tape the screwdriver tip before use.

- Using a screwdriver, remove the front pillar garnishes.

HINT:

Tape the screwdriver tip before use.

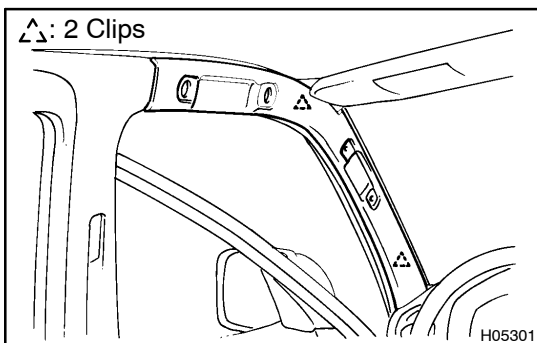


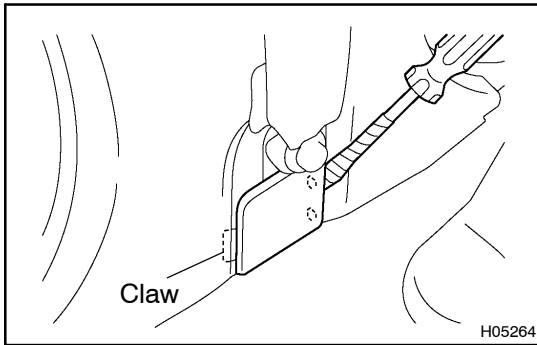**12. REMOVE CENTER PILLAR LOWER GARNISH**

- (a) Using a screwdriver, remove the center pillar garnish covers.

HINT:


Tape the screwdriver tip before use.

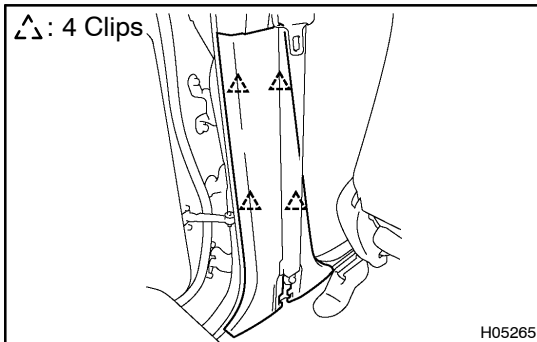

- (b) Using a screwdriver, remove the center pillar lower garnishes as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

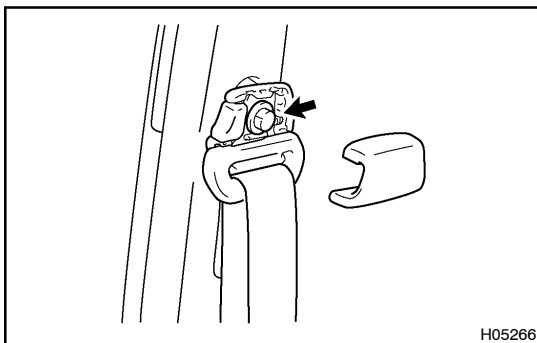**13. REMOVE CENTER PILLAR GARNISH**

- (a) Using a screwdriver, remove the seat belt anchor cover caps.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the bolts and front seat outer belt shoulder anchors.

Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

- (c) Using a screwdriver, remove the 8 assist grip plugs, then remove the 8 screws and 4 assist grips.

HINT:

Tape the screwdriver tip before use.

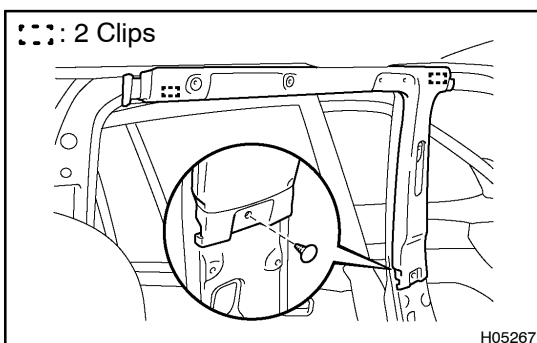


- (d) Using a clip remover, remove the clips.

- (e) Using a screwdriver, remove the center pillar garnishes.

14. REMOVE THESE PARTS:

- (a) Sun visors
- (b) Double visors
- (c) Holders

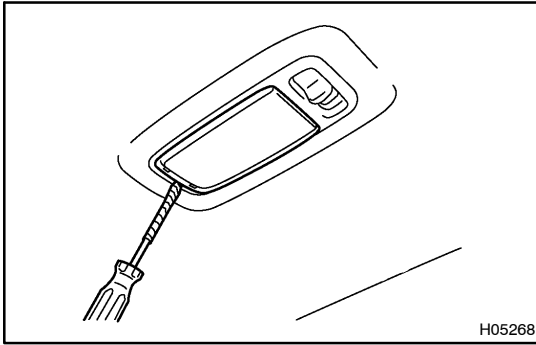


15. REMOVE DOME LIGHT

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and dome light, then disconnect the connector.

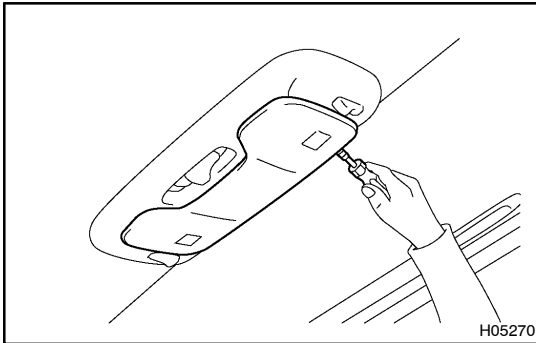

16. w/ sliding Roof:


REMOVE MAP LIGHT

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and map light, then disconnect the connector.

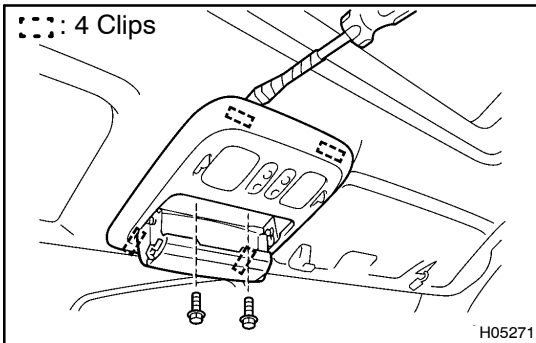


17. w/ Sliding Roof:

REMOVE OVERHEAD CONSOLE BOX

- (a) Remove the 2 bolts.
- (b) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:


Tape the screwdriver tip before use.

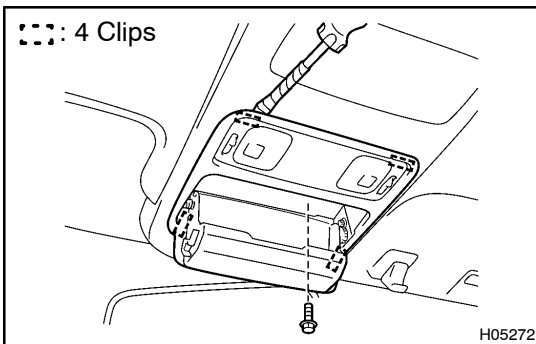

18. w/o Sliding Roof:

REMOVE OVERHEAD CONSOLE BOX


- (a) Remove the bolt.
- (b) Using a screwdriver, remove the map light assembly, then disconnect the connector.

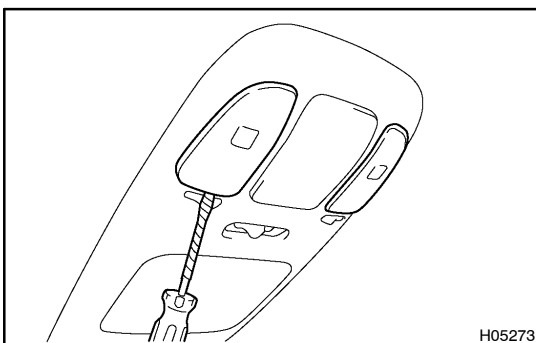

- (c) Using a screwdriver, remove the 2 lenses.

HINT:

Tape the screwdriver tip before use.

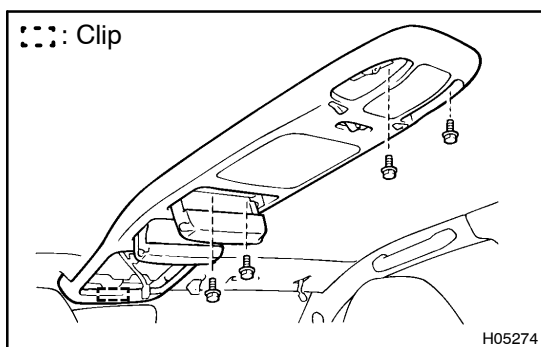

(d) Remove the 4 bolts.


(e) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

19. w/ Sliding Roof:

REMOVE SLIDING ROOF OPENING TRIM

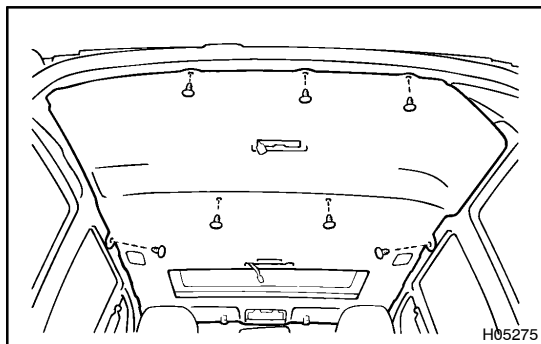

20. REMOVE ROOF HEADLINING

Using a clip remover, remove the 7 clips and roof headlining.