

INSTALLATION

NOTICE:

Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.

1. INSTALL FRONT SEAT OUTER BELT

- (a) Install the front seat belt parts by following the reverse order of removal and torque the following bolts.

- (1) Front seat outer belt retractor

Torque:

Upper bolt: 4.9 N·m (50 kgf·cm, 43 in·lbf)


Lower bolt: 41 N·m (420 kgf·cm, 30 ft·lbf)

- (2) Seat belt shoulder anchor

Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

NOTICE:

- **Make sure that the front seat outer belt is installed to the specified torque.**
- **If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.**
- **When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.**

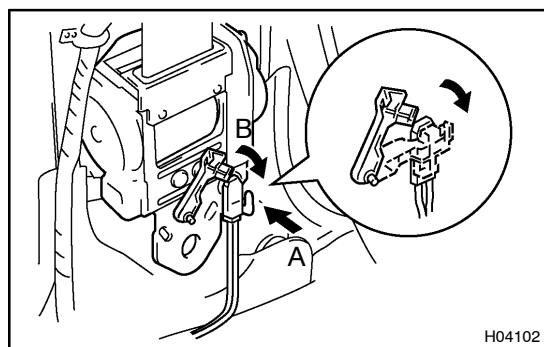

- (b) Connect the pretensioner connector in the order A and B as shown in the illustration.

2. INSTALL THESE PARTS:

- (a) Anchor caps
 (b) Center pillar lower garnish
 (c) Rear door scuff plate
 (d) Rear door opening trim
 (e) Front door scuff plate
 (f) Front door opening trim