

## SEAT BELT PRETENSIONER REMOVAL

B01LJ-01

**NOTICE:**

- If the wiring connector of the seat belt pretensioner is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use seat belt pretensioner from another vehicle. When replacing seat belt pretensioner, replace it with new.

**1. REMOVE THESE PARTS:**

- (a) Front door scuff plate
- (b) Front door opening trim
- (c) Rear door scuff plate
- (d) Rear door opening trim
- (e) Center pillar lower garnish

**2. REMOVE FRONT SEAT OUTER BELT****CAUTION:**

Never disassemble the front seat outer belt.

**NOTICE:**


When removing the front outer seat belt, take care not to pull the seat belt pretensioner wire harness.

- (a) Using a screwdriver, remove the anchor caps.

**HINT:**

Tape the screwdriver tip before use.

- (b) Remove the bolt and shoulder anchor.

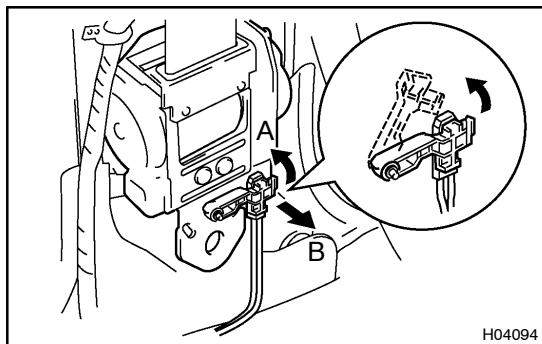

H04094

- (c) Disconnect the pretensioner connector in the order A and B as shown in the illustration.
- (d) Remove the 2 bolts and front seat outer belt.