

## REPLACEMENT

### REPLACE REQUIREMENTS

In the following cases, replace the seat belt pretensioner.

- If the seat belt pretensioner has been activated.
- If the seat belt pretensioner has been found to be faulty in troubleshooting.
- If the front seat outer belt has been found to be faulty during the check in items 1–(b) or 2–(b).
- If the front seat outer belt has been dropped.

### CAUTION:

**For removal and installation of the seat belt pretensioner, see page [BO-135](#) and [BO-143](#).**

**Be sure to follow the correct procedure.**