


CIRCUIT DESCRIPTION

Blinking light	Detection Item	Trouble Area
RrDEF FRS	• Open in pressure sensor circuit. • Abnormal refrigerant pressure. below 196 kPa (2.0 kg/cm², 28 psi) over 3,140 kPa (32.0 kgf/cm², 455 psi)	• Pressure switch. • Harness or connector between pressure switch and A/C amplifier • Refrigerant pipe line. • A/C amplifier

[illegible]

INSPECTION PROCEDURE

1	Check voltage between terminal PSW and GND of A/C amplifier.
---	--

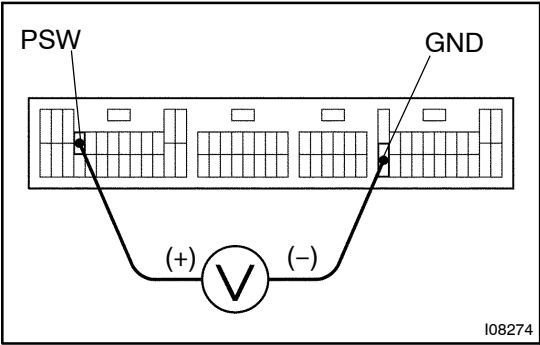

PREPARATION:

Install the manifold gauge set.

CHECK:

- (a) Turn ignition switch ON.
- (b) Check voltage between terminal PRE of ECM connector and body ground when A/C gas pressure is changed.

OK:

The voltage changes with gas pressure, as shown in the diagram below.


Low Pressure Cut Side	Reference : High Pressure Cut Side
ON (0V) 196 kPa OFF (12V)	ON (0V) 2,550 kPa 3,140 kPa OFF (12V)

NG	Go to step 2.
----	---------------

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-630). However, if RrDEF and FRS indicator light is light up, check and replace A/C amplifier.

2 Check pressure switch.

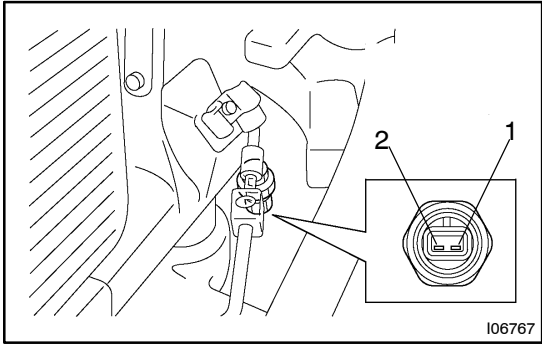

PREPARATION:

Disconnect pressure switch connector.

CHECK:

- (a) Turn ignition switch ON.
- (b) Check continuity between terminals 1 and 2 of pressure switch when A/C gas pressure is changed.

OK:

The continuity changes with gas pressure as shown below.

Low Pressure Cut Side	Reference : High Pressure Cut Side
ON (continuity) 196 kPa OFF (continuity)	ON (continuity) 2,550 kPa 3,140 kPa OFF (continuity)

NG

Replace pressure switch.

OK

3 Check harness and connector between A/C amplifier and pressure switch
(See page IN-34).

NG

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.