


CIRCUIT DESCRIPTION

If the A/T.P. indicator light goes on, the transfer shift lever should be shifted to the positions other than N position.

WIRING DIAGRAM

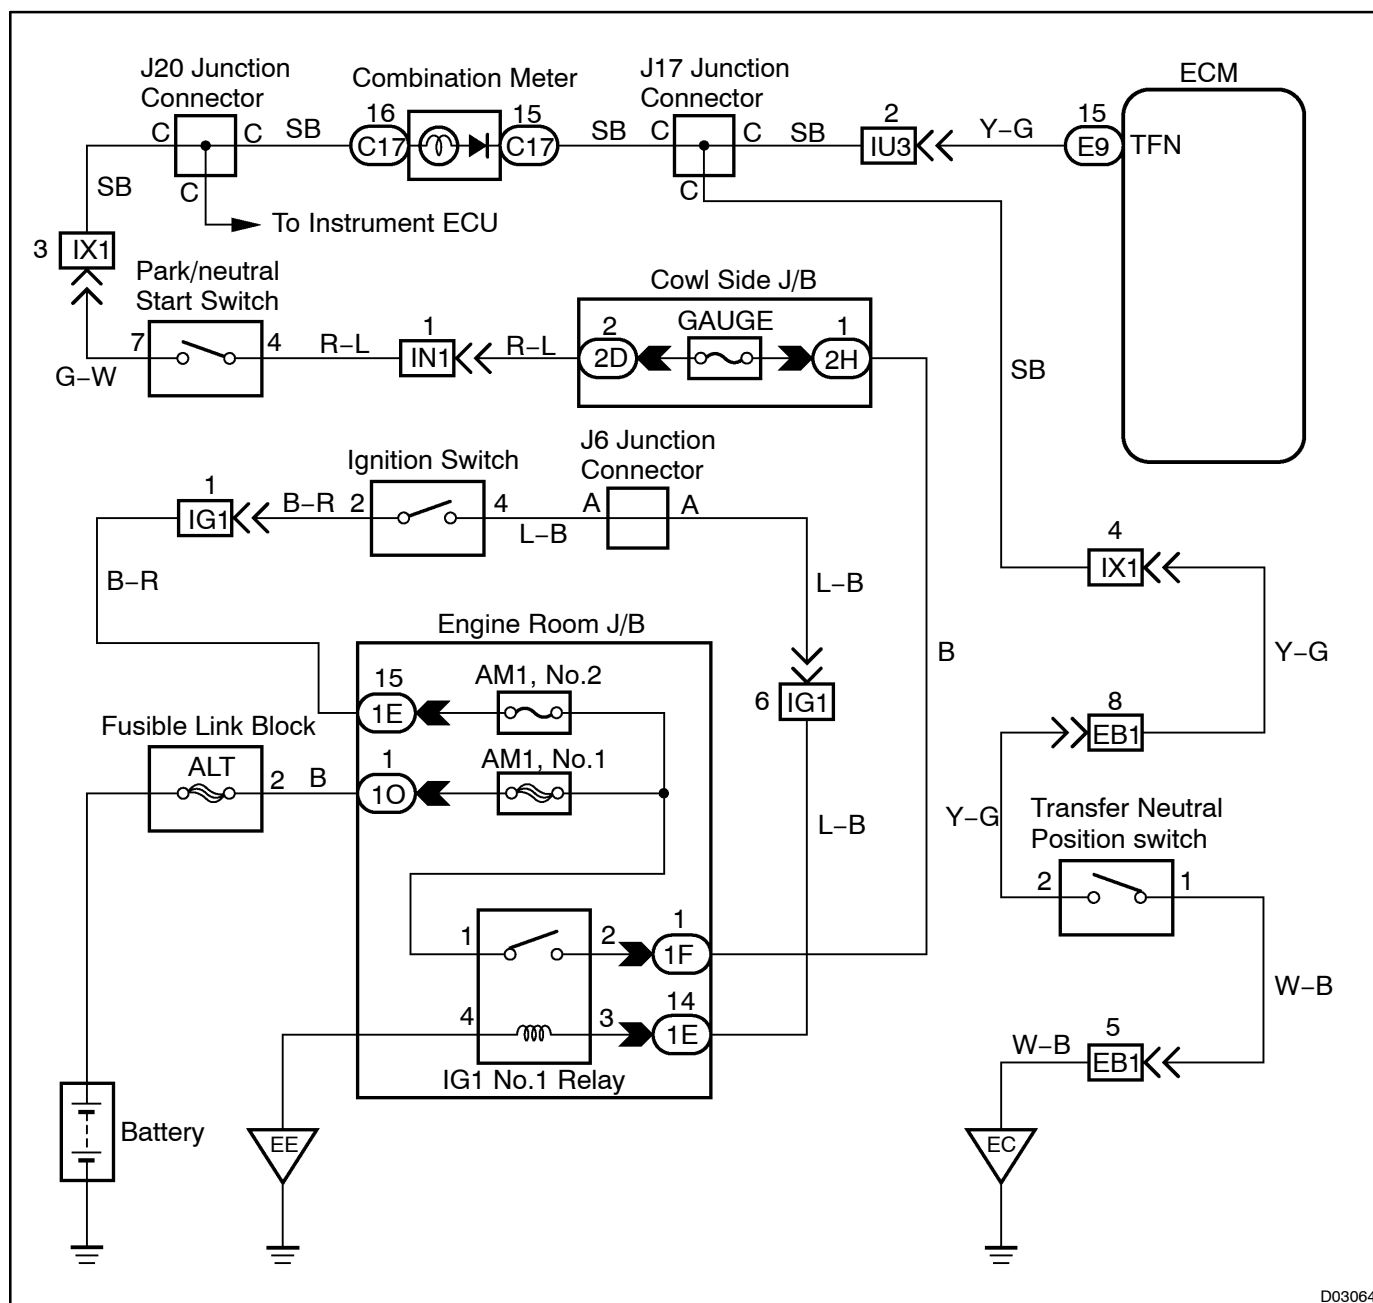

1	Check park/neutral position switch (See page DI-200).
OK	
NG	Replace the park/neutral position switch.
2	Check transfer neutral position switch (See page TR-48).
OK	
NG	Replace the transfer neutral position switch.
3	Check combination meter (See page BE-52).
OK	
NG	Repair or replace the combination meter.
Check and replace the harness and connector (See page IN-34).	