


Door courtesy switch circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

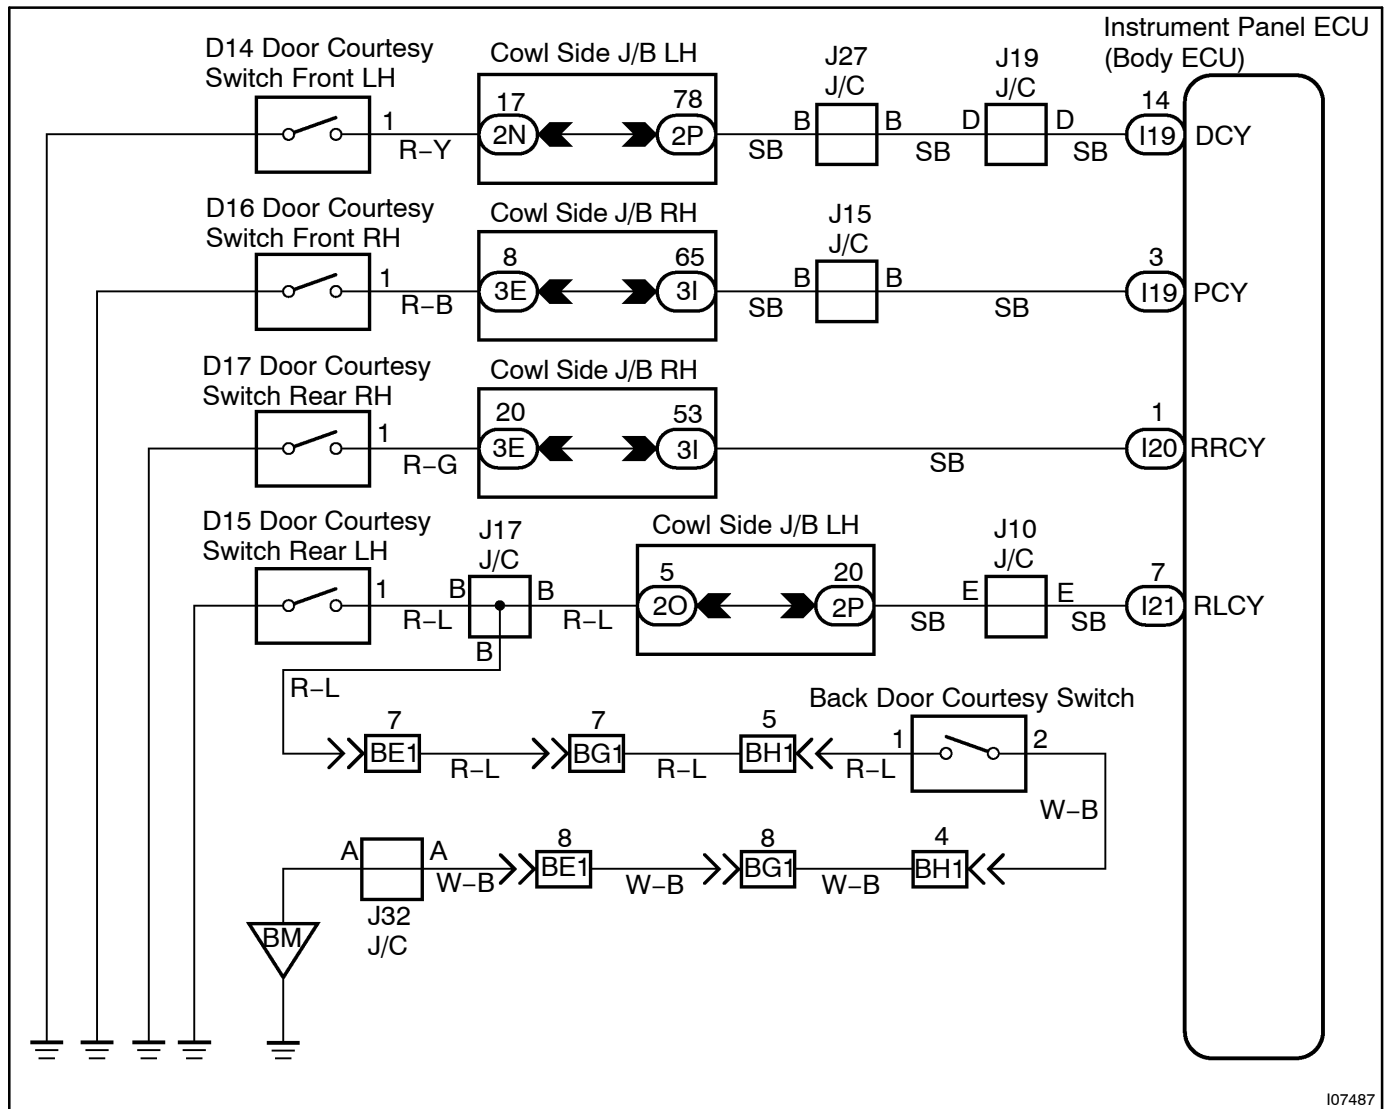

I07487

INSPECTION PROCEDURE

1	Check courtesy switch. (See page BE-38)
---	--

NG

Replace the courtesy switch.

OK

2	Check wireharness and connector between courtesy light and body ECU, courtesy switch and body ECU.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-567](#))