


Illumination circuit

CIRCUIT DESCRIPTION

Receiving the courtesy signal from the Body ECU will make the interior light, ignition light, and courtesy light come on.

WIRING DIAGRAM

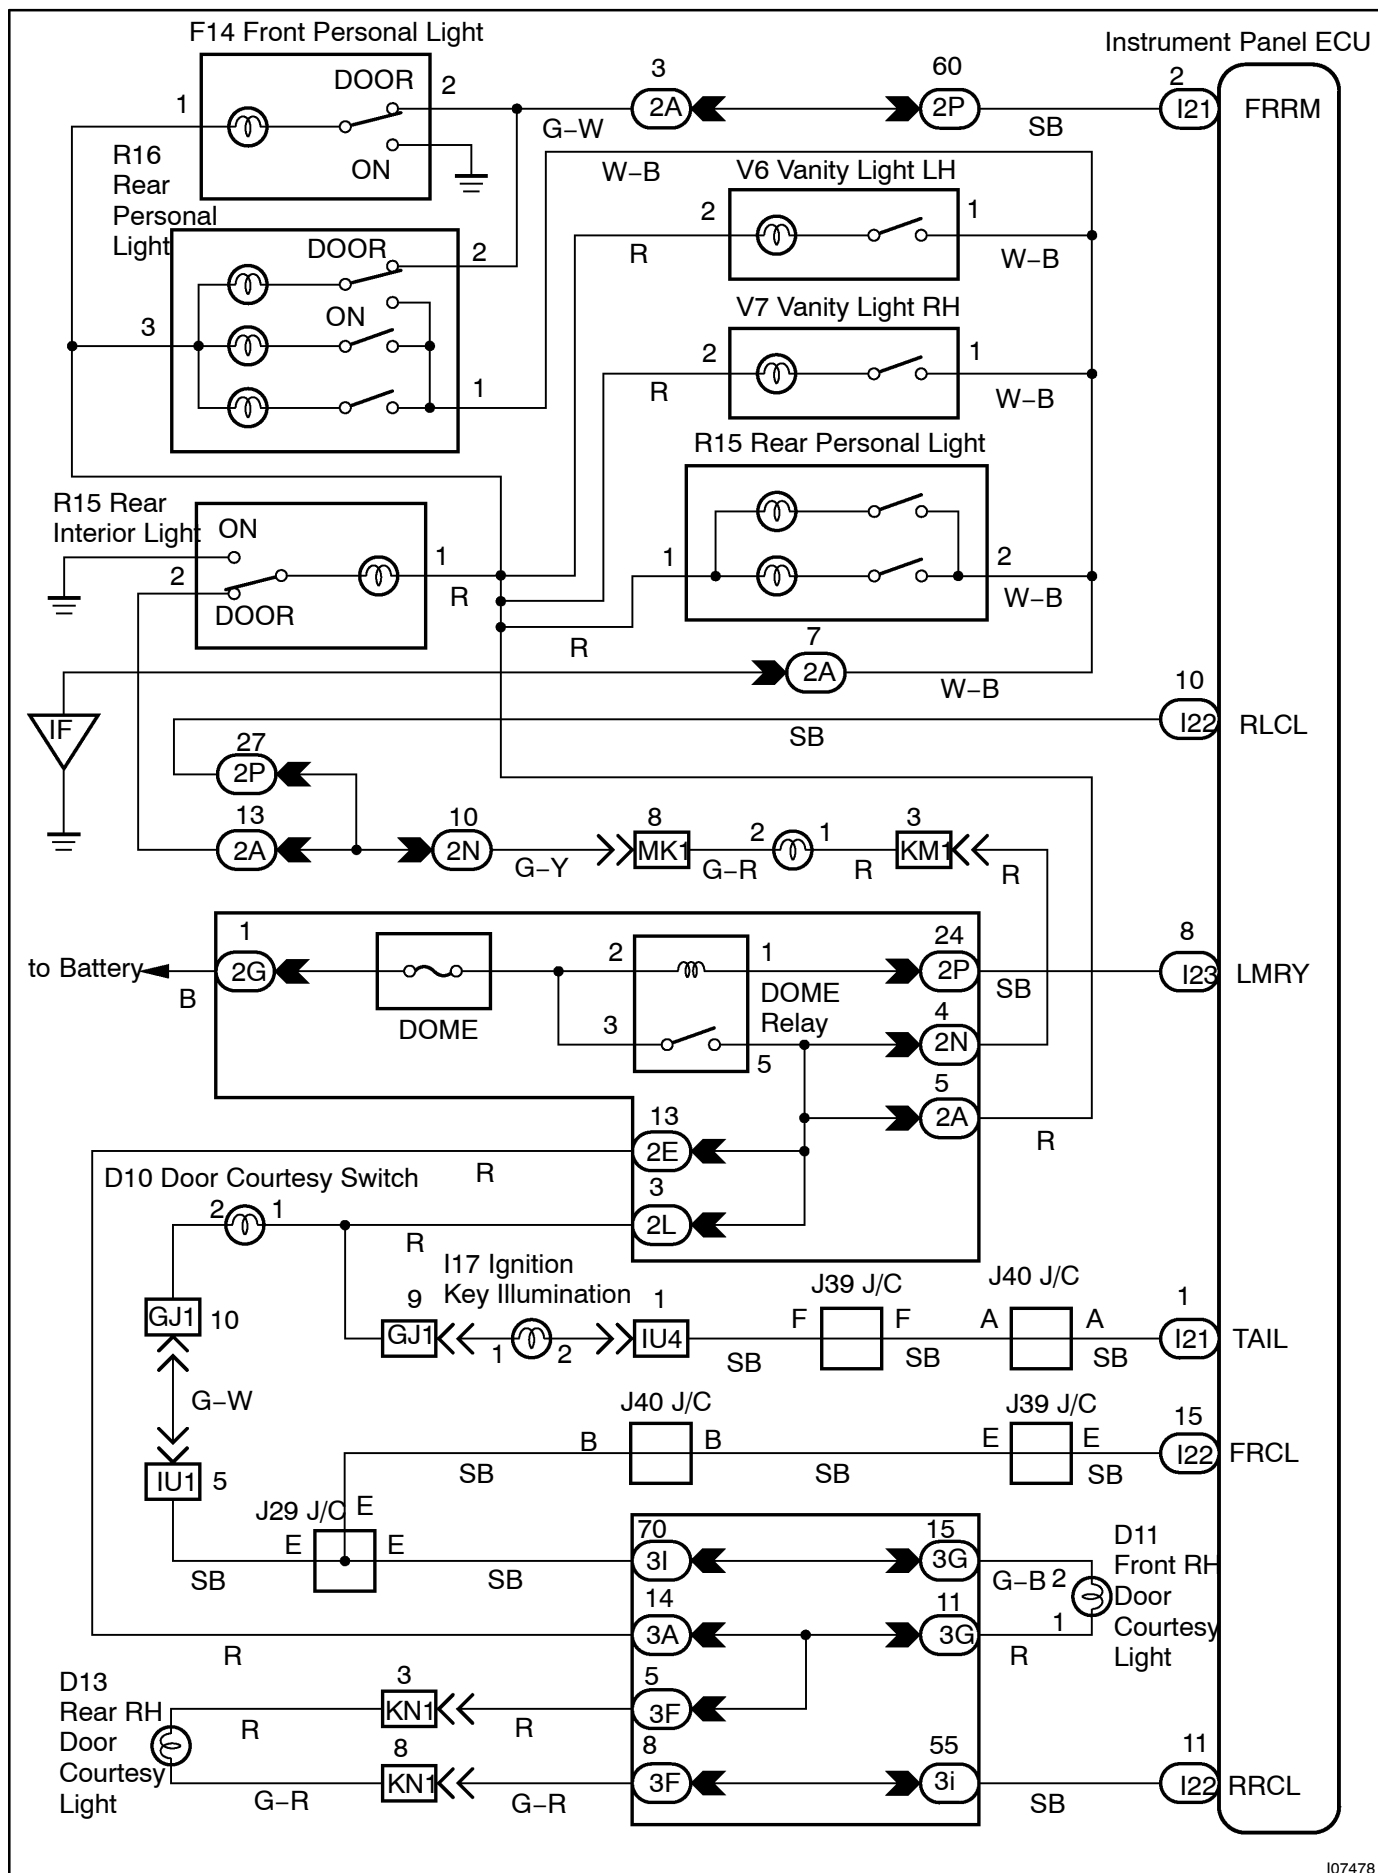

107478

INSPECTION PROCEDURE

1	Check DOME fuse.
	NG Replace the fuse.
	OK
2	Check illumination light.
	NG Replace the failure light.
	OK
3	Check wireharness and connector between each illumination light and Body ECU, battery and each illumination light .
	NG Repair or replace wireharness or connector.
	OK
Proceed to next circuit inspection shown on problem symptoms table. (See page DI-567)	