


Light control switch circuit

WIRING DIAGRAM

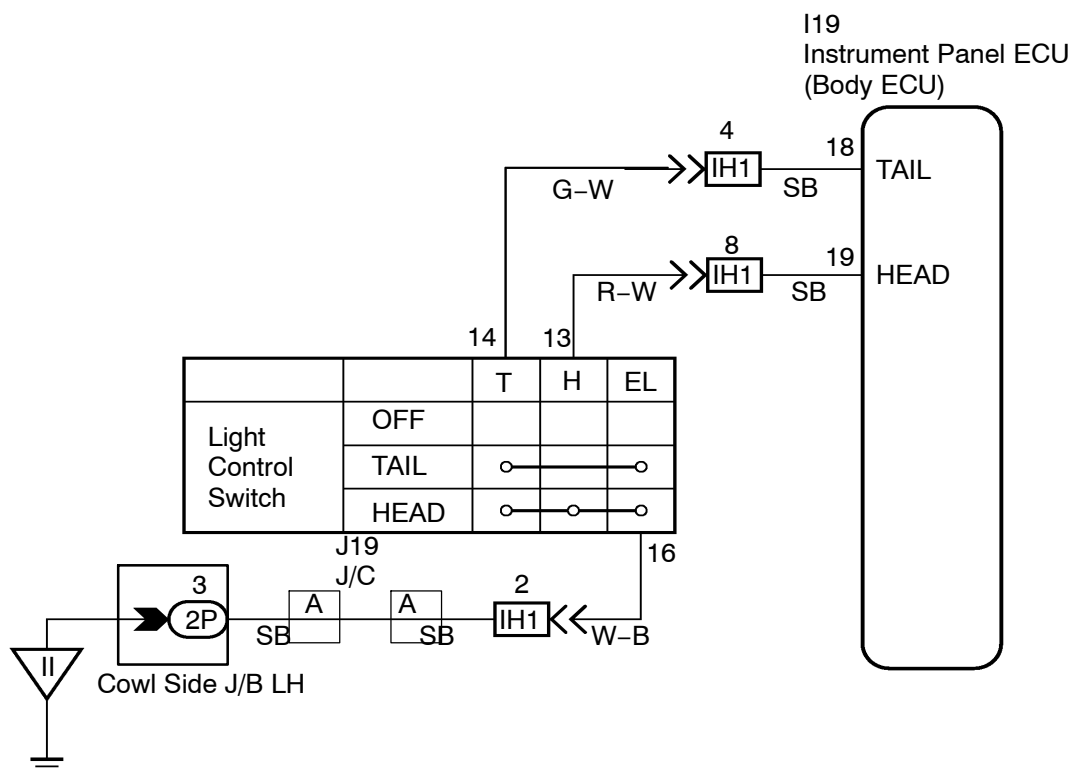

I07481

INSPECTION PROCEDURE

1	Check headlight control switch (See page BE-23)
---	--

NG

Replace the headlight control switch.

OK

2	Check wireharness and connector between headlight control switch and Body ECU.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-567](#))