


Power main relay circuit

CIRCUIT DESCRIPTION

Power main relay will be "ON" by operating the power window switch.

WIRING DIAGRAM

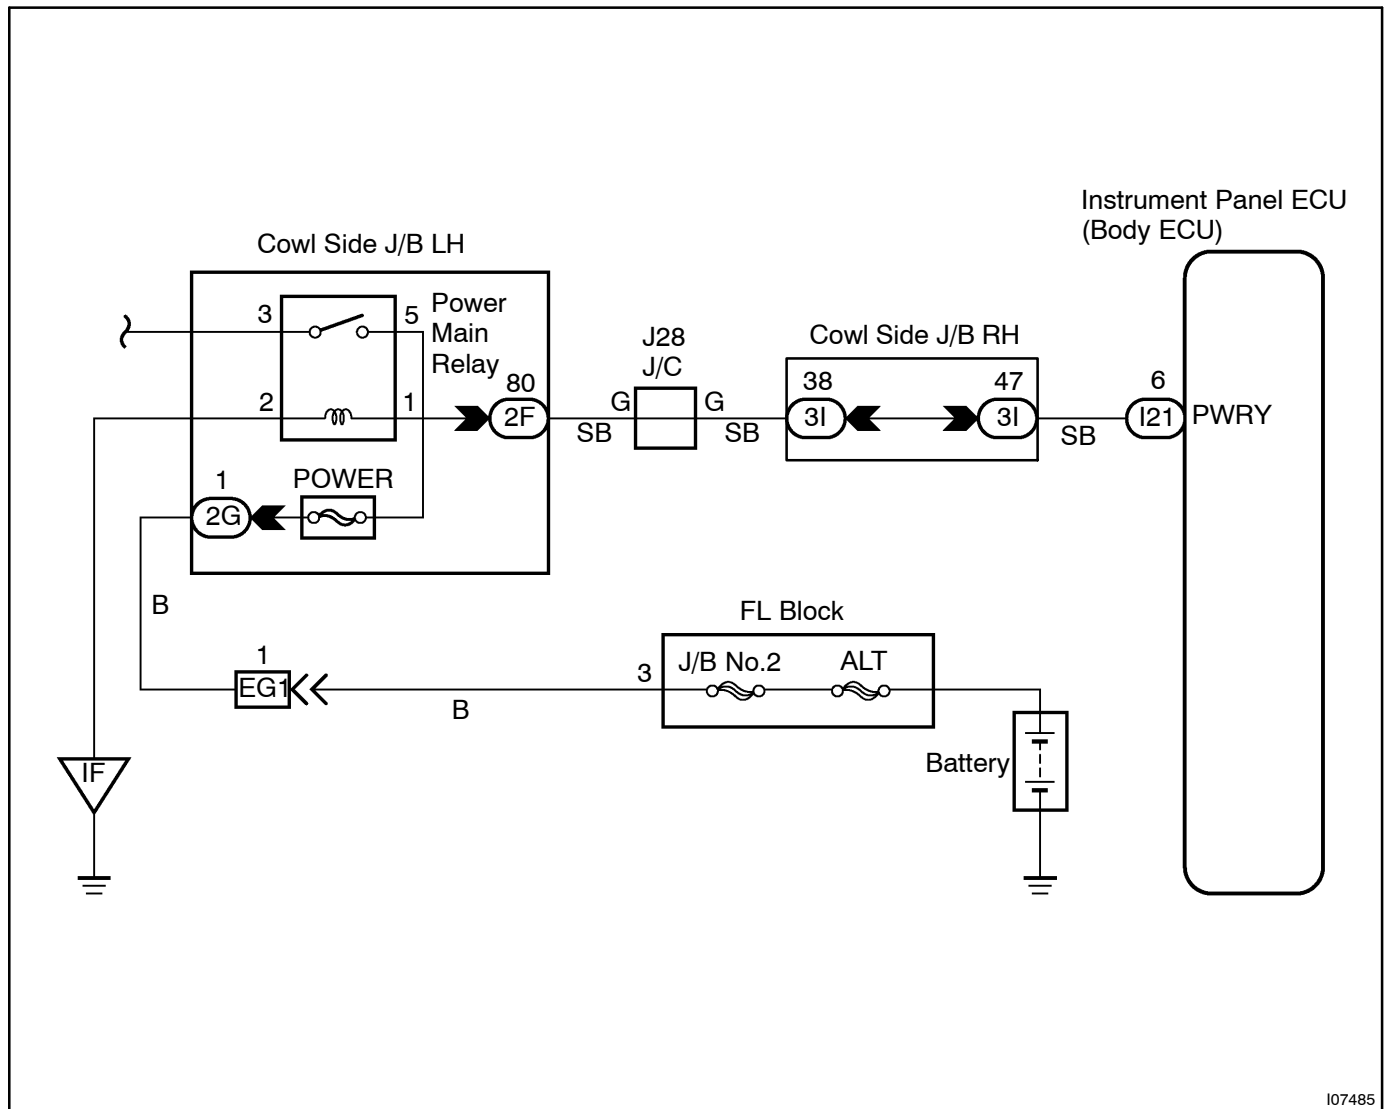

I07485

INSPECTION PROCEDURE

1	Check power main relay. (See page BE-23)
---	---

NG

Replace the power main relay.

OK

2	Check wireharness and connector between power main relay and Body ECU, battery and power main relay.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-567](#))