


## Stop light switch circuit

### CIRCUIT DESCRIPTION

The Body ECU is detecting the condition of the stop light switch.

### WIRING DIAGRAM

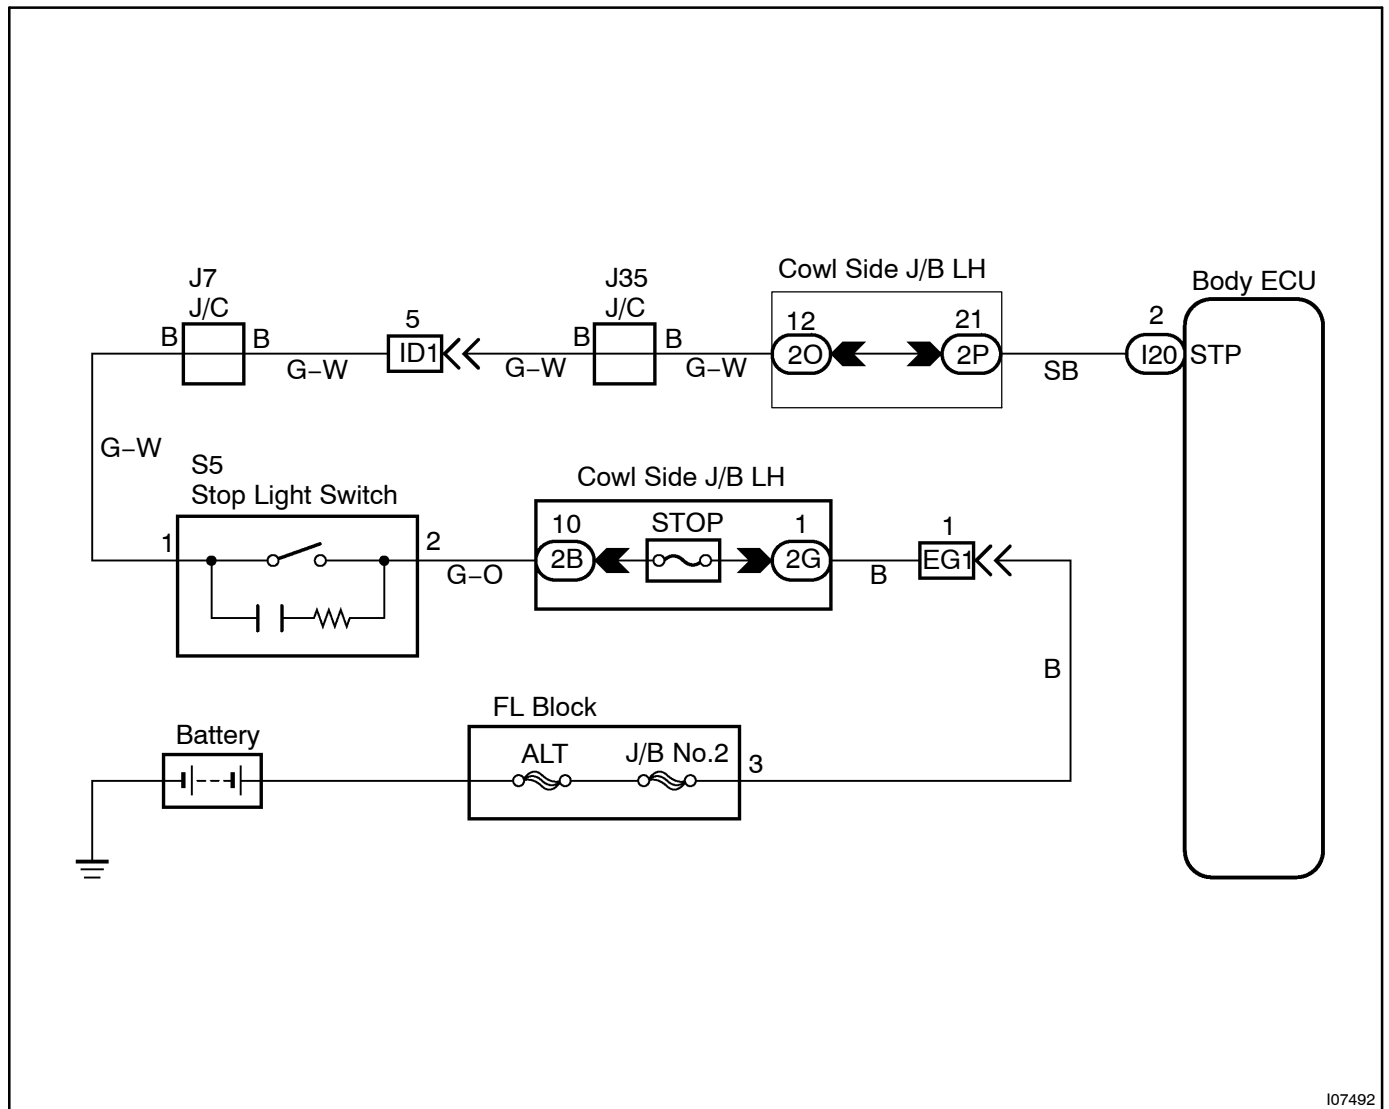

I07492

**INSPECTION PROCEDURE**

|          |                                                                  |
|----------|------------------------------------------------------------------|
| <b>1</b> | <b>Check stop light switch. (See page <a href="#">BE-44</a>)</b> |
|----------|------------------------------------------------------------------|

**NG****Replace the stop light switch.****OK**

|          |                                                                                                               |
|----------|---------------------------------------------------------------------------------------------------------------|
| <b>2</b> | <b>Check wireharness and connector between stop light switch and Body ECU, battery and stop light switch.</b> |
|----------|---------------------------------------------------------------------------------------------------------------|

**NG****Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on problem symptoms table.  
(See page [DI-567](#))**