


Taillight relay circuit

CIRCUIT DESCRIPTION

Taillight relay will be "ON" by operating the taillight switch. The transistor which activates the tail light relay has two sorts: one activates by the tail light switch for fail safe and the other activates by CPU.

WIRING DIAGRAM

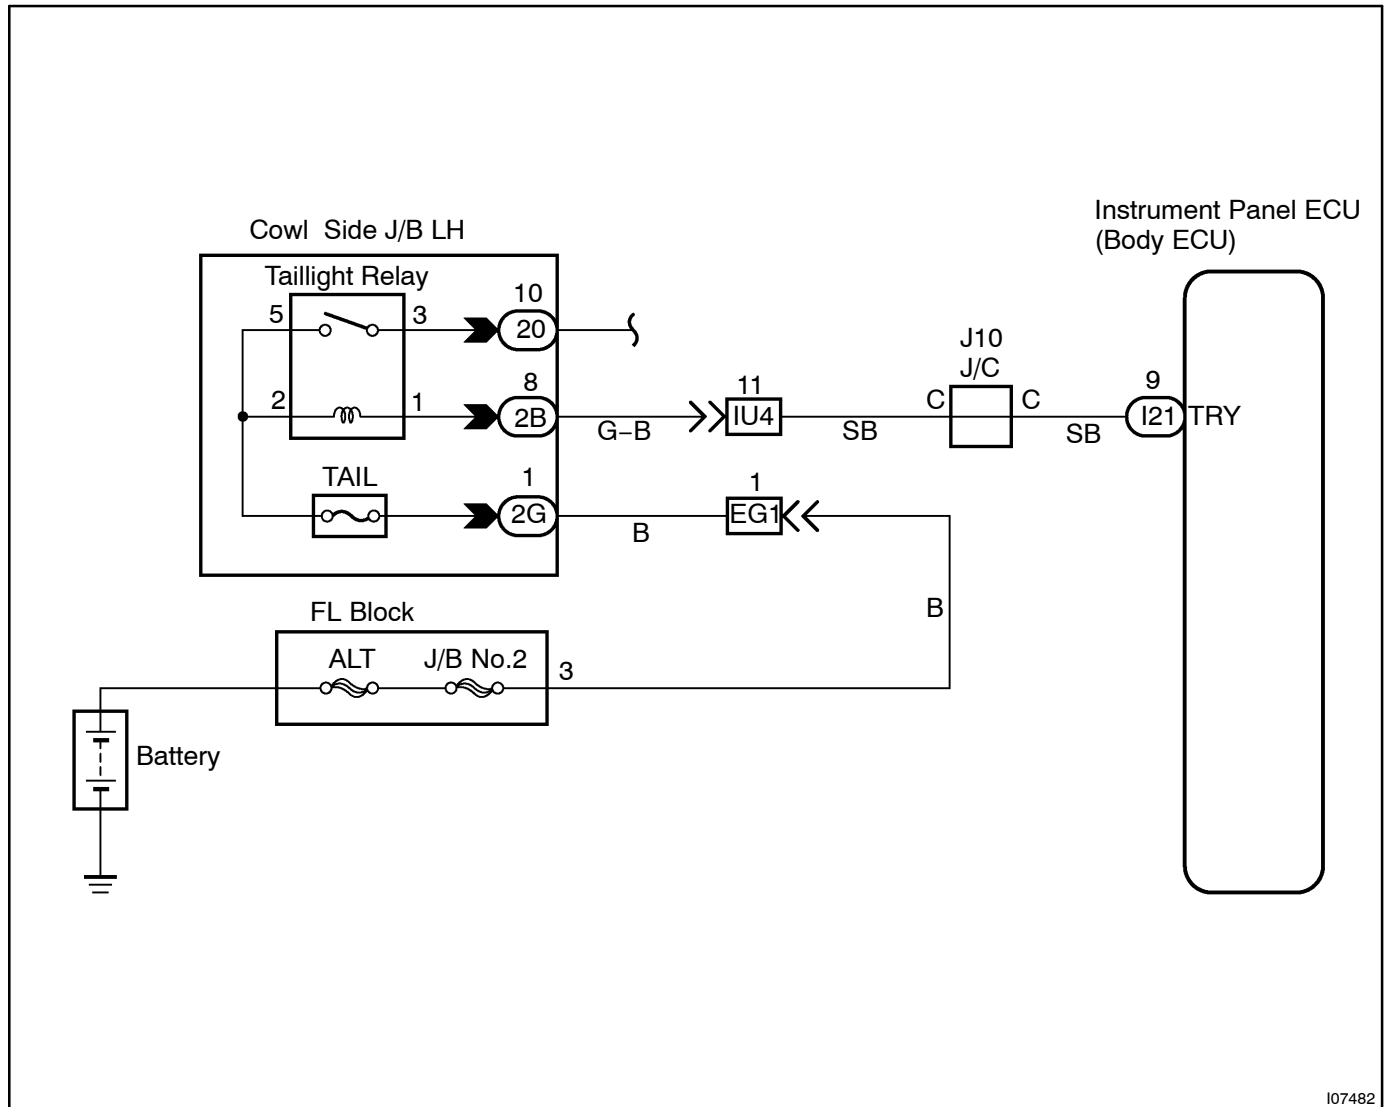

I07482

INSPECTION PROCEDURE

1	Check taillight relay. (See page BE-23)
---	--

NG

Replace the taillight relay.

OK

2	Check wireharness and connector between taillight relay and Body ECU, battery and taillight relay.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-567](#))