


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the Body ECU.

WIRING DIAGRAM

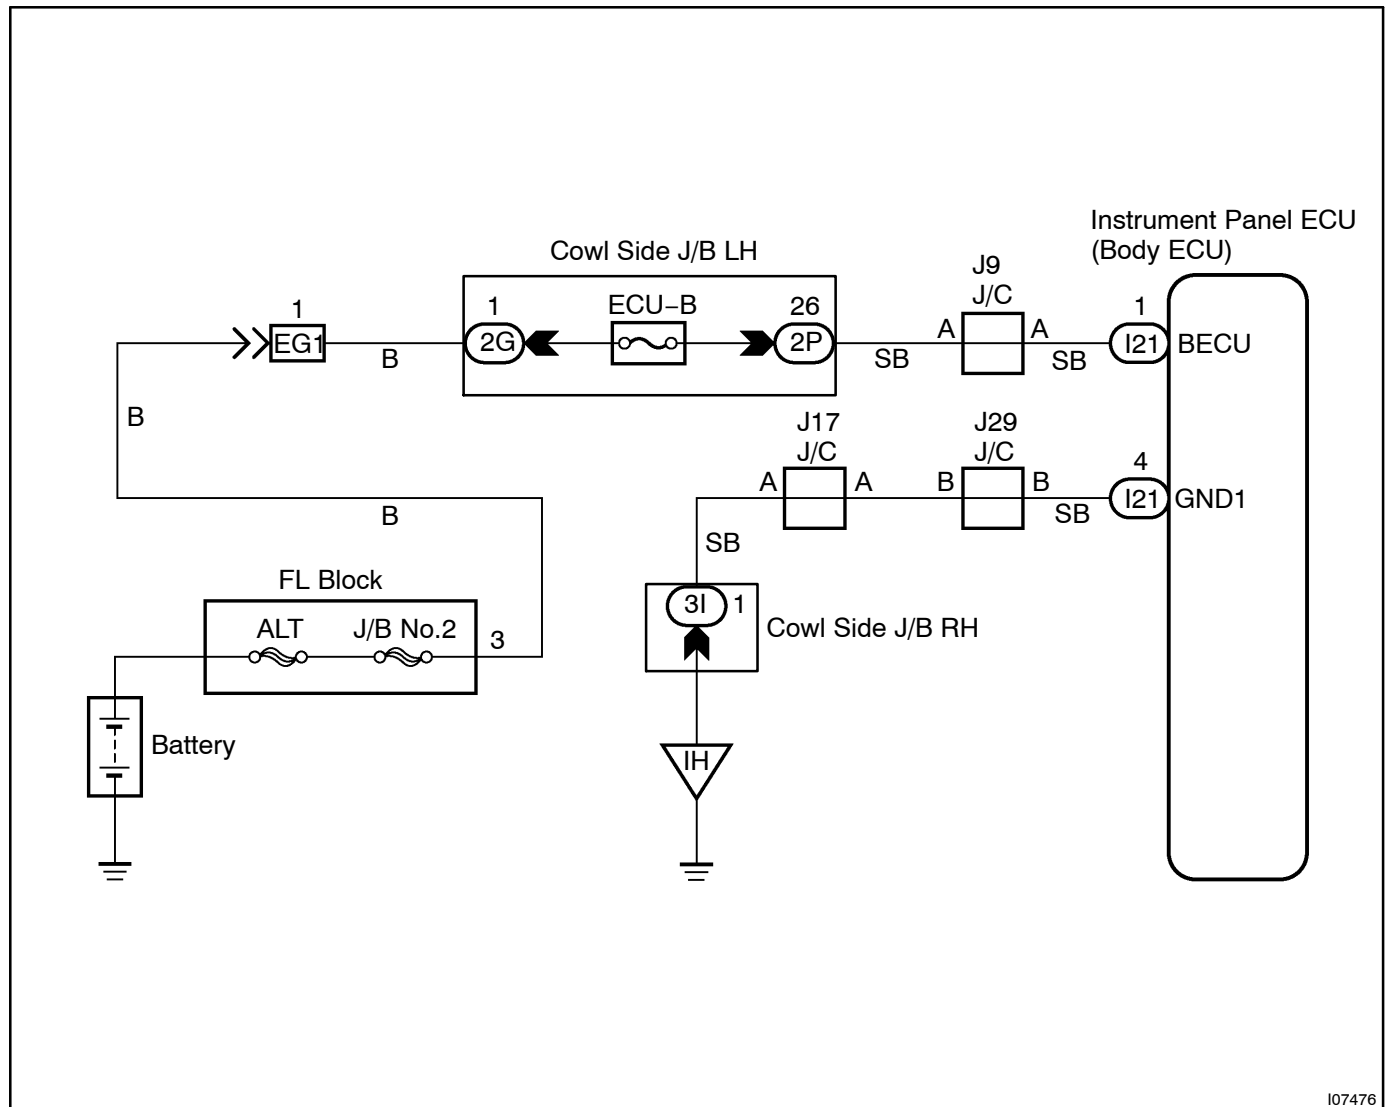

I07476

INSPECTION PROCEDURE

1	Check ECU-B fuse.
----------	--------------------------

CHECK:

Check continuity of ECU-B fuse.

OK:

Continuity

NG**Replace the failure fuse.****OK**

2	Check voltage between terminals BECU and GND of Body ECU connector.
----------	--

PREPARATION:

- (a) Turn ignition switch OFF.
- (b) Disconnect the Body ECU connector.

CHECK:

Measure voltage between terminals BECU and GND.

OK:

Voltage: 10 – 14V

OK**Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-567](#))****NG**

3	Check wireharness and connector between Body ECU and body ground.
----------	--

NG**Repair or replace wireharness or connector.****OK**

Check and repair wireharness and connector between Body ECU and battery.