


TERMINALS OF ECU

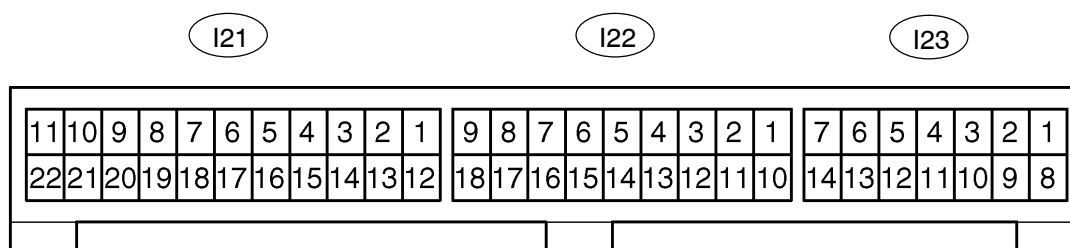

I06116

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
KYIL ↔ GND (I21-1 ↔ I23-4)	SB ↔ SB	Each door are opened.	Below 1 V
		All doors are closed.	10 – 14 V
FRRM ↔ GND (I21-2 ↔ I23-4)	SB ↔ SB	Each door are opened.	Below 2 V
		All doors are closed.	10 – 14 V
PCY ↔ GND (I21-3 ↔ I23-4)	SB ↔ SB	Passenger door closed.	10 – 14 V
		Passenger door opened.	Below 1 V
DMU ↔ GND (I21-4 ↔ I23-4)	SB ↔ SB	Driver door lock control switch* position OFF.	10 – 14 V
		Driver door lock control switch* position LOCK.	Below 1 V
PMU ↔ GND (I21-5 ↔ I23-4)	SB ↔ SB	Passenger door lock control switch* position OFF.	10 – 14 V
		Passenger door lock control switch* position LOCK.	Below 1 V
DKL ↔ GND (I21-6 ↔ I23-4)	SB ↔ SB	Driver door key lock and unlock switch position is OFF.	Below 1 V
		Driver door key lock and unlock switch position is LOCK.	10 – 14 V
PKL ↔ GND (I21-7 ↔ I23-4)	SB ↔ SB	Passenger door key lock and unlock switch position is OFF.	Below 1 V
		Passenger door key lock and unlock switch position is LOCK.	10 – 14 V
DML ↔ GND (I21-8 ↔ I23-4)	SB ↔ SB	Driver door lock control switch* position LOCK.	Below 1 V
PML ↔ GND (I21-9 ↔ I23-4)	SB ↔ SB	Passenger door lock control switch* position OFF.	10 – 14 V
		Passenger door lock control switch* position LOCK.	Below 1 V
PKU ↔ GND (I21-10 ↔ I23-4)	SB ↔ SB	Passenger door key lock and unlock switch is position OFF.	Below 1 V
		Passenger door key lock and unlock switch is position UN-LOCK.	10 – 14 V
DKU ↔ GND (I21-11 ↔ I23-4)	SB ↔ SB	Driver door key lock and unlock switch position is OFF.	Below 1 V
		Driver door key lock and unlock switch position is UNLOCK.	10 – 14 V
HW ↔ GND (I21-13 ↔ I23-4)	SB ↔ SB	Constant.	10 – 14 V
DCY ↔ GND (I21-14 ↔ I23-4)	SB ↔ SB	Driver door closed.	10 – 14 V
		Driver door opened.	Below 1 V
HRV ↔ GND (I21-15 ↔ I23-4)	SB ↔ SB	Ignition switch position is ON. Light control switch HEAD position.	Below 2 V

DIAGNOSTICS – BODY CONTROL SYSTEM

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
HRV ↔ GND (I21-15 ↔ I23-4)	SB ↔ SB	Ignition switch position is ON. Light control switch OFF position.	10 – 14 V
C1 ↔ GND (I21-16 ↔ I23-4)	SB ↔ SB	Rear wiper S/W position is OFF.	10 – 14 V
		Rear wiper S/W position is INT, AUTO.	Below 1 V
		Rear wiper S/W position is LO.	10 – 14 V
		Rear wiper S/W position is HI.	10 – 14 V
L ↔ GND (I21-17 ↔ I23-4)	SB ↔ SB	Rear wiper S/W position is OFF.	10 – 14 V
		Rear wiper S/W position is INT, AUTO.	10 – 14 V
		Rear wiper S/W position is LO.	10 – 14 V
		Rear wiper S/W position is HI.	Below 1 V
TAIL ↔ GND (I21-18 ↔ I23-4)	SB ↔ SB	Headlight control switch position is TAIL.	Below 1 V
		Headlight control switch position is except TAIL.	10 – 14 V
HEAD ↔ GND (I21-19 ↔ I23-4)	SB ↔ SB	Headlight control switch position is HEAD.	Below 1 V
		Headlight control switch position is except HEAD.	10 – 14 V
KSW ↔ GND (I21-20 ↔ I23-4)	SB ↔ SB	Key is inserted.	Below 1 V
		Key is not inserted.	10 – 14 V
ACC ↔ GND (I21-21 ↔ I23-4)	SB ↔ SB	Ignition switch position is ACC.	10 – 14 V
DISW ↔ GND (I22-1 ↔ I23-4)	SB ↔ SB	Driver door is locked.	10 – 14 V
		Driver door is unlocked.	Below 1 V
RRCY ↔ GND (I22-2 ↔ I23-4)	SB ↔ SB	Rear RH door is opened.	Below 1 V
		Rear RH door is closed.	10 – 14 V
STP ↔ GND (I22-3 ↔ I23-4)	SB ↔ SB	Brake is ON.	10 – 14 V
		Brake is OFF.	Below 1 V
RISW ↔ GND (I22-5 ↔ I23-4)	SB ↔ SB	Rear door is locked.	10 – 14 V
		Rear door is unlocked.	Below 1 V
PISW ↔ GND (I22-6 ↔ I23-4)	SB ↔ SB	Passenger door is locked.	10 – 14 V
		Passenger door is unlocked.	Below 1 V
RLCL ↔ GND (I22-10 ↔ I23-4)	SB ↔ SB	Constant	10 – 14 V
RRCL ↔ GND (I22-11 ↔ I23-4)	SB ↔ SB	Constant	10 – 14 V
DURY ↔ GND (I22-12 ↔ I23-4)	SB ↔ SB	Constant.	10 – 14 V
DDRY ↔ GND (I22-13 ↔ I23-4)	SB ↔ SB	Constant.	10 – 14 V
FRCL ↔ GND (I22-15 ↔ I23-4)	SB ↔ SB	Constant	10 – 14 V
BECU ↔ GND (I23-1 ↔ I23-4)	SB ↔ SB	Constant.	10 – 14 V
SIG ↔ GND (I23-2 ↔ I23-4)	SB ↔ SB	Ignition switch position is ON.	10 – 14 V
WLRY ↔ GND (I23-3 ↔ I23-4)	SB ↔ SB	Ignition switch position is ON.	10 – 14 V
GND ↔ Body Ground (I23-4 ↔ Body Ground)	W-B ↔ Body Ground	Constant.	Below 1 V

PWRY ↔ Body Ground (I23-6 ↔ Body Ground)	SB ↔ Body Ground	Constant.	Below 1 V
RLCY ↔ GND (I23-7 ↔ I23-4)	SB ↔ SB	Rear LH door and back door is open.	Below 1 V
		Rear LH door and back door is closed.	10 – 14 V
LMRY ↔ GND (I23-8 ↔ I23-4)	SB ↔ SB	Constant.	10 – 14 V
TRY ↔ GND (I23-9 ↔ I23-4)	SB ↔ SB	Ignition switch position is ON. Light control switch OFF position.	10 – 14 V
DLRY ↔ GND (I23-11 ↔ I23-4)	SB ↔ SB	Constant.	10 – 14 V
LS/M ↔ GND (I23-12 ↔ I23-4)	SB ↔ SB	During the rear wiper is in operation.	Below 1 V
		When the rear wipers at a stop.	10 – 14 V
INDP ↔ GND (I23-14 ↔ I23-4)	SB ↔ SB	Shift position is P position.	Below 1 V
		Shift position is except P position.	10 – 14 V