


CRUISE MAIN Indicator Light Circuit

CIRCUIT DESCRIPTION


When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.

WIRING DIAGRAM

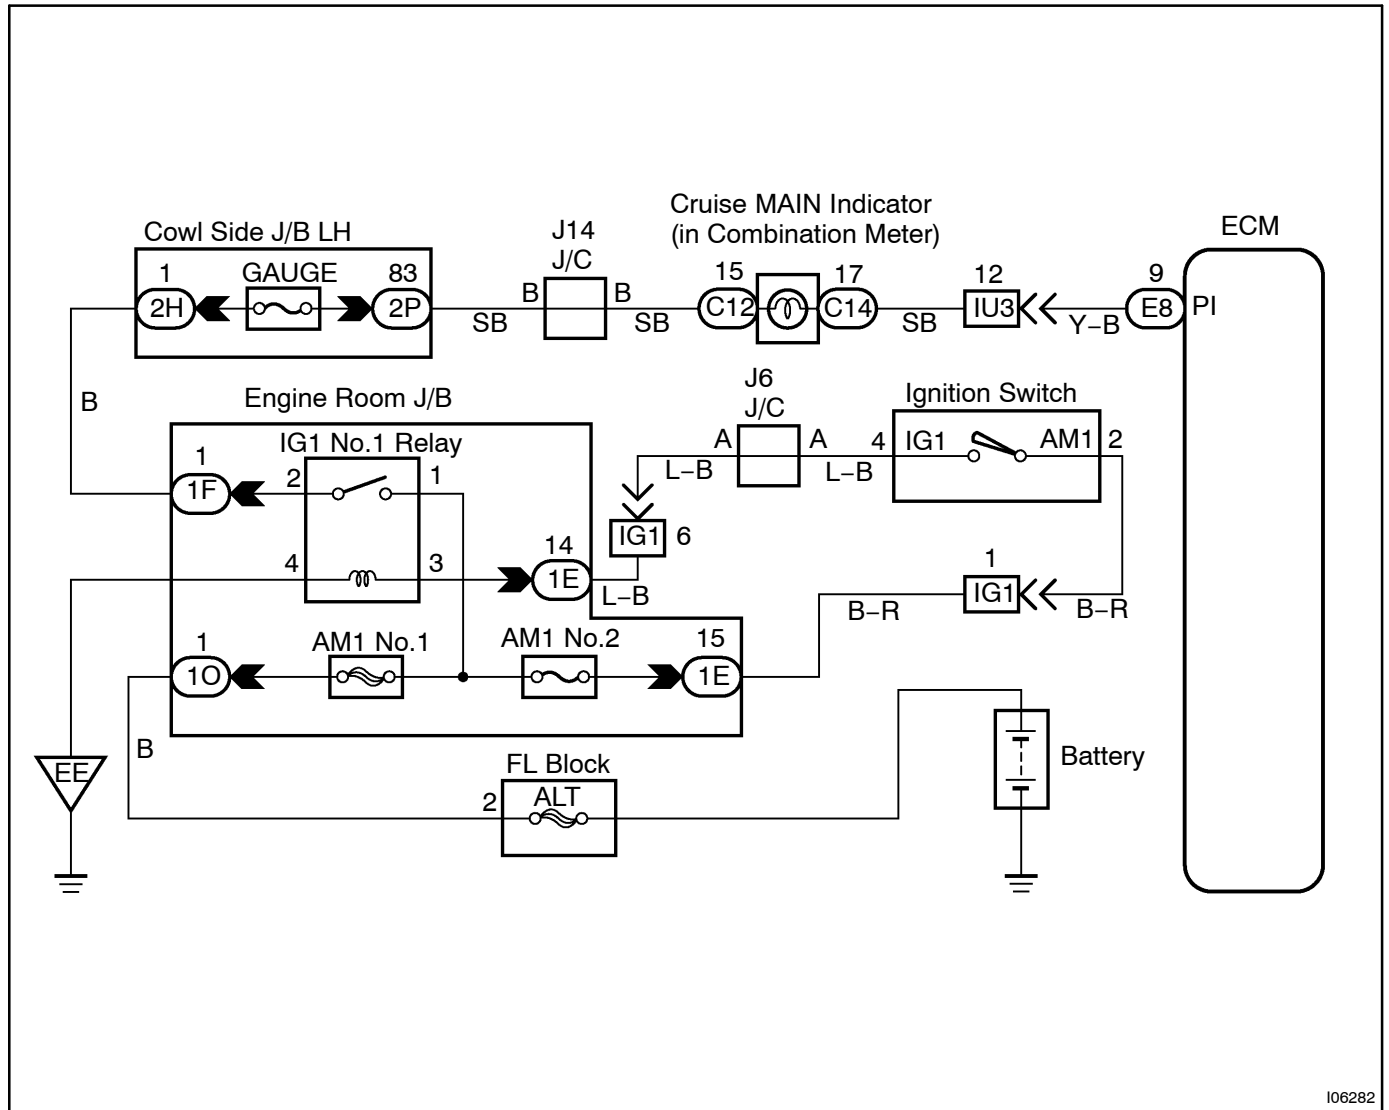

I06282

1	Check voltage between terminals PI and GND of ECM connector.
---	--

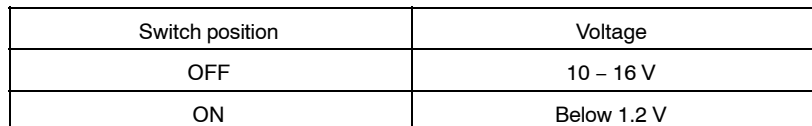

Proceed to next circuit inspection shown on problem symptom table (See page [DI-525](#)).