


|            |                 |                                               |
|------------|-----------------|-----------------------------------------------|
| <b>DTC</b> | <b>B2796/99</b> | <b>No Communication in Immobiliser system</b> |
|------------|-----------------|-----------------------------------------------|

## CIRCUIT DESCRIPTION

| DTC No.  | DTC Detecting Condition | Trouble Area                                                                                                                                                        |
|----------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| B2796/99 | No communication        | <ul style="list-style-type: none"> <li>• Key</li> <li>• Transponder Key Coil</li> <li>• Transponder Key Amplifier</li> <li>• Wire harness</li> <li>• ECM</li> </ul> |

## WIRING DIAGRAM

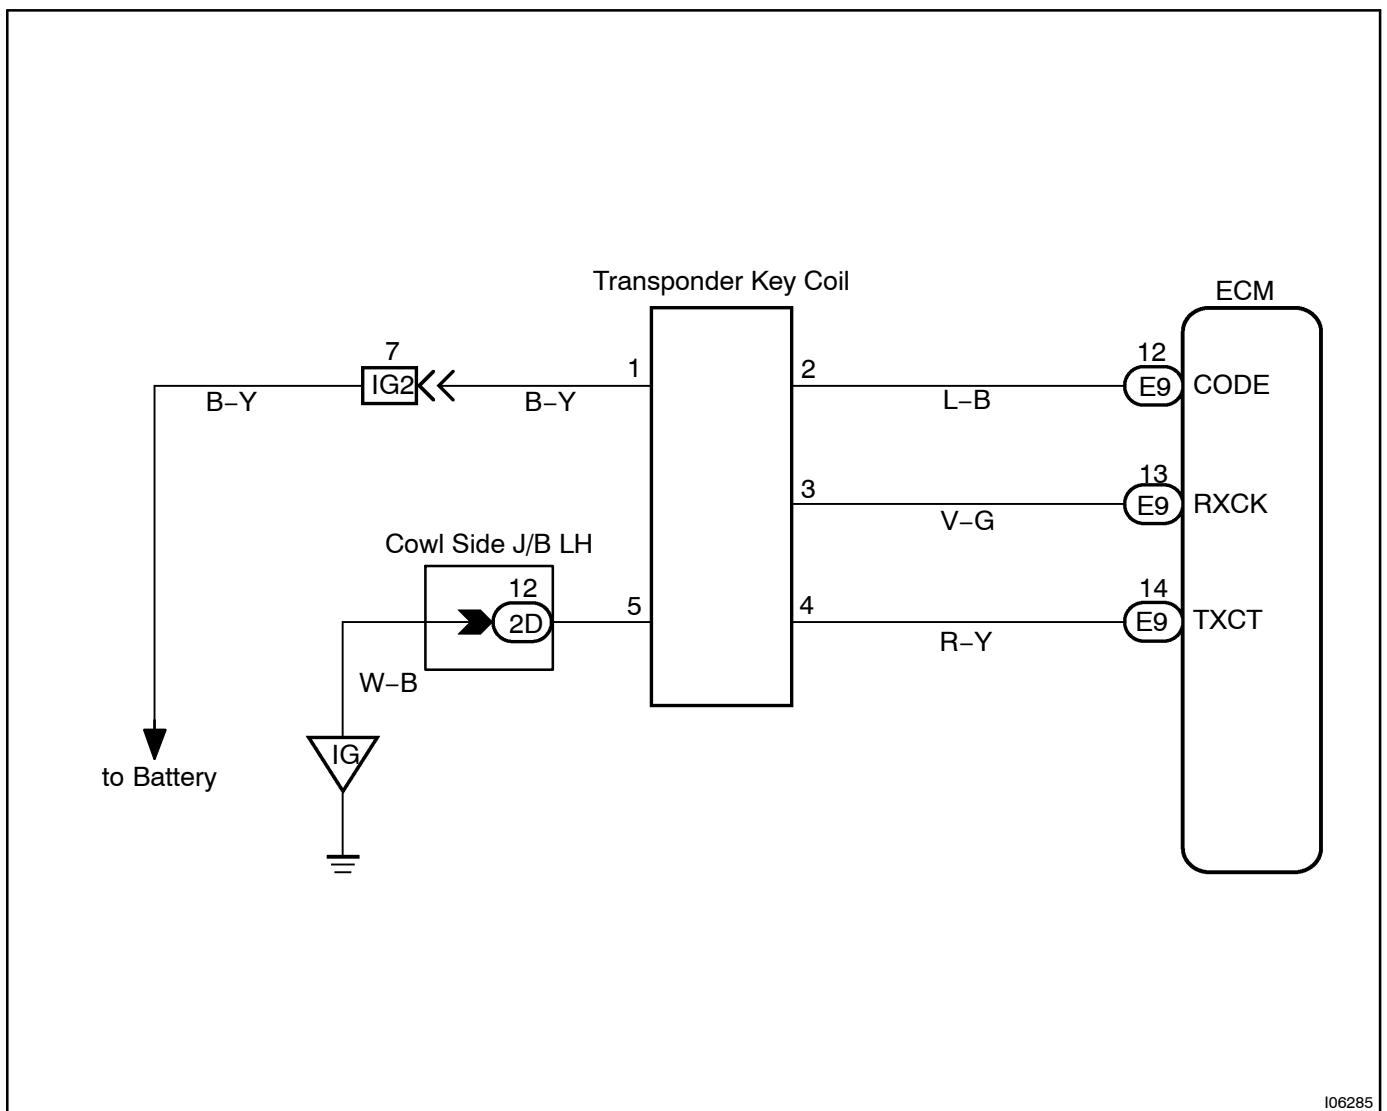

I06285

**INSPECTION PROCEDURE**