

PROBLEM SYMPTOMS TABLE

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

The table below will be useful for you in troubleshooting these electrical systems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

- If the instruction "Proceed to next circuit inspection shown on the chart" is given in the flow chart for each circuit, proceed to the circuit with the next highest number in the table to continue the check.
- If the problem still occurs even though there are no abnormalities in any of the other circuits, then check and replace ECU.

Symptom	Suspect Area	See page
Both tilt and telescopic: Manual, auto away/return and memory functions • Do not operate • Stop part way • Do not stop	1. Multiplex communication system 2. ECU power source circuit 3. Key unlock warning switch 4. BODY ECU 5. Actuator power source circuit 6. Sensor power source circuit 7. Tilt motor circuit 8. Telescopic motor circuit 9. Tilt and telescopic ECU	DI-605 DI-325 BE-18 DI-561 DI-327 DI-329 DI-331 DI-334 IN-34
Tilt only: Manual, auto away/return and memory functions • Do not operate • Stop part way • Do not stop	1. Multiplex communication system 2. Sensor power source circuit 3. Tilt motor circuit 4. Tilt and telescopic ECU	DI-605 DI-329 DI-331 IN-34
Telescopic only: Manual, auto away/return and memory functions • Do not operate • Stop part way • Do not stop	1. Multiplex communication system 2. Sensor power source circuit 3. Telescopic motor circuit 4. Tilt and telescopic ECU	DI-605 DI-329 DI-334 IN-34
Both tilt and telescopic: Only tilt and telescopic manual switch function does not operate	1. Multiplex communication system 2. Tilt and telescopic manual switch circuit 3. Tilt and telescopic ECU	DI-605 DI-337 IN-34
Tilt only: Only tilt and telescopic manual switch function does not operate	1. Multiplex communication system 2. Tilt and telescopic manual switch circuit 3. Tilt and telescopic ECU	DI-605 DI-337 IN-34
Telescopic only: Only tilt and telescopic manual switch function does not operate	1. Multiplex communication system 2. Tilt and telescopic manual switch circuit 3. Tilt and telescopic ECU	DI-605 DI-337 IN-34
Both away and return: Only auto away/return function does not operate	1. Check status of auto away function using TOYOTA hand-held tester 2. Multiplex communication system 3. Ignition switch 4. Key unlock warning switch 5. Tilt and telescopic ECU	– DI-605 BE-18 BE-18 IN-34

Only away: Only Auto away/return function does not operate	1. Multiplex communication system 2. Key unlock warning switch 3. Ignition switch 4. Tilt and telescopic ECU	DI-605 BE-18 BE-18 IN-34
Only return: Only auto away/return function does not operate	1. Multiplex communication system 2. Key unlock warning switch 3. Ignition switch 4. Tilt and telescopic ECU	DI-605 BE-18 BE-18 IN-34