

701

2	Check harness and connector between theft deterrent ECU and switch, switch and body ground (See page IN-34).
---	---

NG

Repair or replace harness or connector.

OK

Check and replace theft deterrent ECU (See page [IN-34](#)).