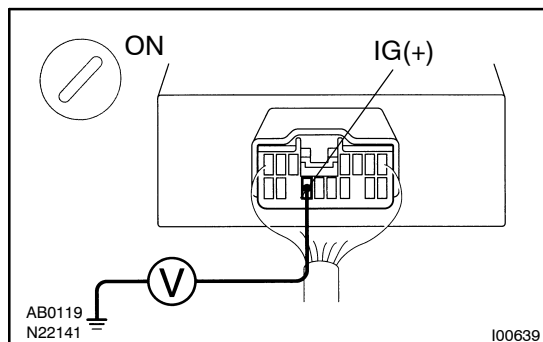


107474

647

2 Check voltage between terminal IG of ECU and body ground.**PREPARATION:**

- (a) Disconnect the ECU connector.
- (b) Turn the ignition switch ON.

CHECK:

Measure voltage between terminal IG of ECU connector and body ground.

OK:

Voltage: 10 ~ 14 V

OK**Check and replace ECU.****NG**

Check and repair harness and connector between ECU and battery (See page [IN-34](#)).