


CIRCUIT INSPECTION

ECU Power Source Circuit

CIRCUIT DESCRIPTION

Battery positive voltage is always applied to the terminal +B of the wireless door lock ECU.


WIRING DIAGRAM

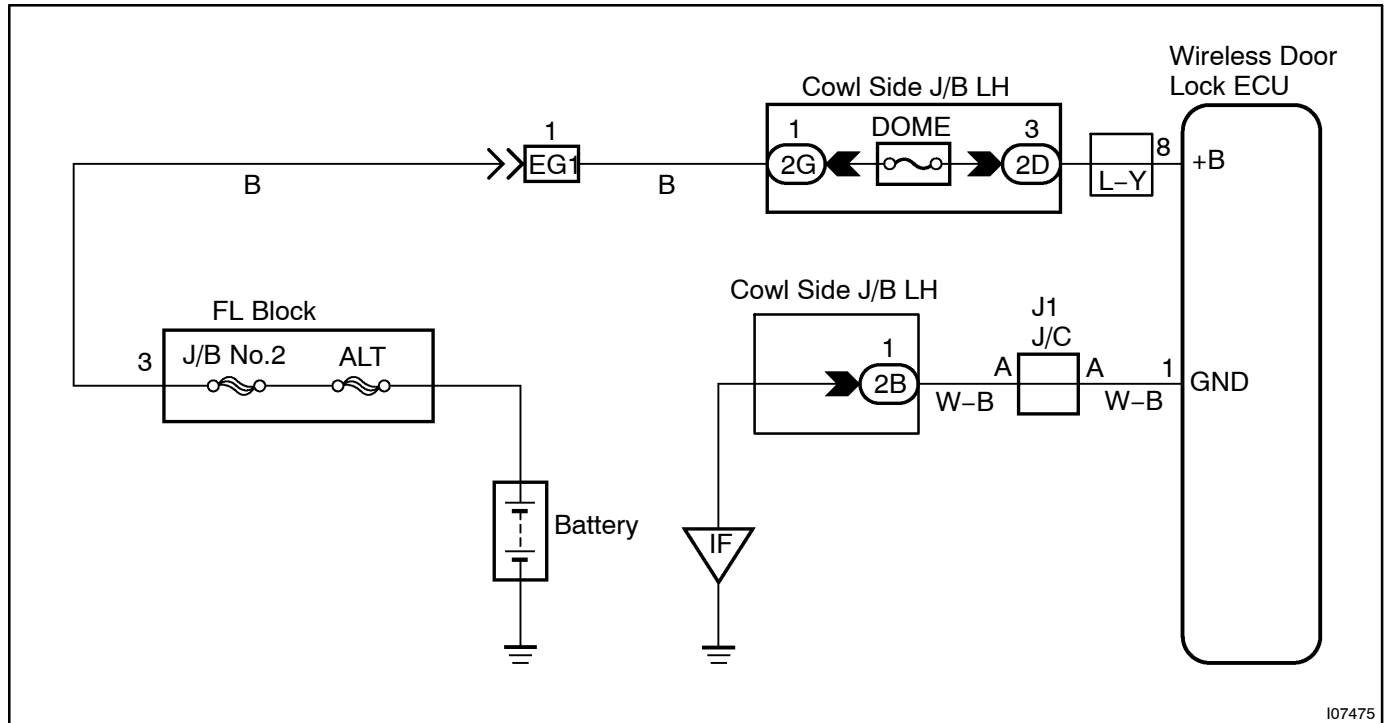

I07475

INSPECTION PROCEDURE

- 1 Check DOME fuse.

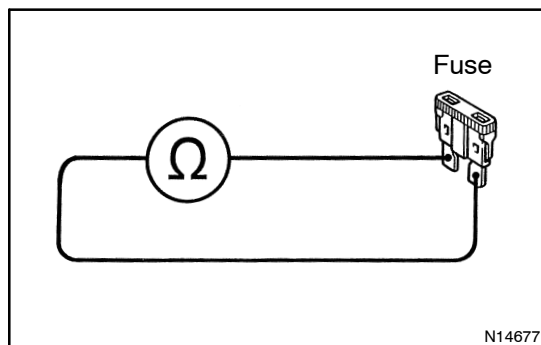

PREPARATION:

Remove DOME fuse from engine room junction block.

CHECK:

Check continuity of DOME fuse.


OK:

Below 1.0 Ω or continuity

NG

**Check for short in all the harness and components connected to DOME fuse.
(See attached wiring diagram.)**

OK

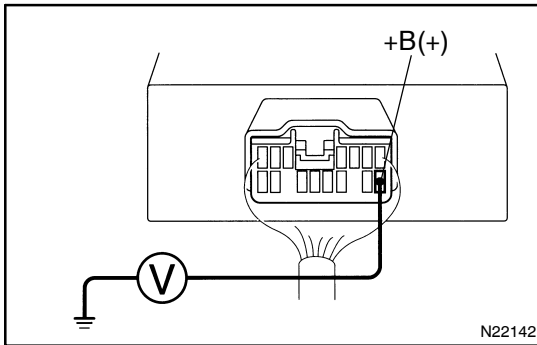2 Check voltage between terminal +B of ECU connector and ground.**PREPARATION:**

Remove the wireless door lock ECU from No.1 instrument panel brace.

CHECK:

Measure voltage between terminal +B of ECU connector and ground.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown in matrix chart (See page [DI-456](#)).

NG**3 Check for open in harness and connector between terminal GND of ECU and body ground (See page [IN-34](#)).****NG**

Repair or replace harness or connector.

OK

Check and repair harness and connector between ECU and battery.