

INSTALLATION

Installation is in the reverse order of removal (See page [SA-67](#)).

AFTER INSTALLATION, CHECK FRONT WHEEL ALIGNMENT (See page [SA-5](#))