


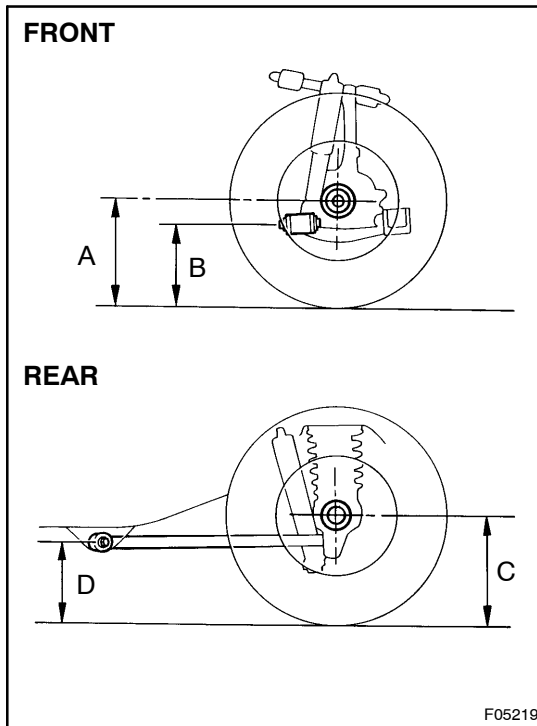

FRONT WHEEL ALIGNMENT INSPECTION

SA142-01

1. MEASURE VEHICLE HEIGHT

Vehicle height:

Front	A – B: 71 mm (2.795 in.)
Rear	C – D: 51 mm (2.008 in.)

Measure points:

A: Ground clearance of spindle center

B: Ground clearance of lower suspension arm front bolt center


C: Ground clearance of rear axle shaft center

D: Ground clearance of lower control arm front bolt center

NOTICE:

Before inspecting the wheel alignment, adjust the vehicle height to the specification.

If the vehicle height is not within the specification, try to adjust it by pushing down on or lifting the body.

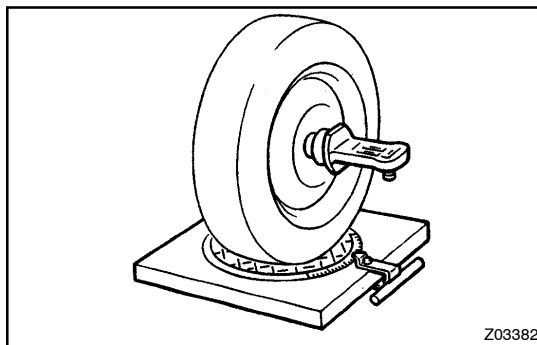


2. INSTALL CAMBER-CASTER-KINGPIN GAUGE OR POSITION VEHICLE ON WHEEL ALIGNMENT TESTER

Follow the specific instructions of the equipment manufacturer.

3. INSPECT CAMBER, CASTER AND STEERING AXIS INCLINATION

Camber	Left-right error	$0^{\circ}05' \pm 45'$ ($0.08^{\circ} \pm 0.75^{\circ}$) 30' (0.5°) or less
Caster	Left-right error	$2^{\circ}30' \pm 45'$ ($2.5^{\circ} \pm 0.75^{\circ}$) 30' (0.5°) or less
Steering axis inclination	Left-right error	$12^{\circ}10' \pm 45'$ ($12.17^{\circ} \pm 0.75^{\circ}$) 30' (0.5°) or less

If the steering axis inclination is not within the specification, after the camber and caster have been correctly adjusted, recheck the steering knuckle front wheel for bearing or looseness.

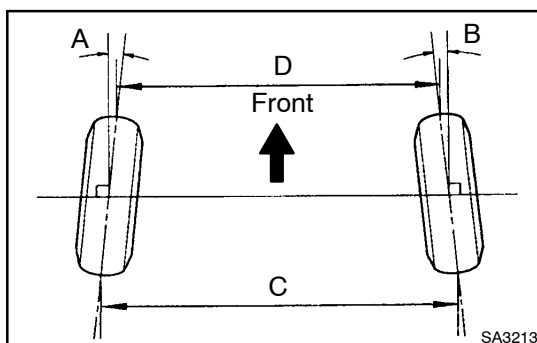

4. INSPECT TOE-IN

Toe-in (total)	A + B: $0^{\circ}06' \pm 12'$ ($0.1^{\circ} \pm 0.2^{\circ}$) C – D: 1 ± 2 mm (0.04 ± 0.08 in.)
----------------	--

If the toe-in is not within the specification, adjust the rack ends.

5. ADJUST CAMBER AND CASTER

NOTICE:


After the camber has been adjusted, inspect the toe-in.

(a) Loosen the front and/or rear adjusting cam nuts.

- (b) Adjust the camber and caster by front and/or rear adjusting cams.


HINT:

Try to adjust the camber and caster to the center value.

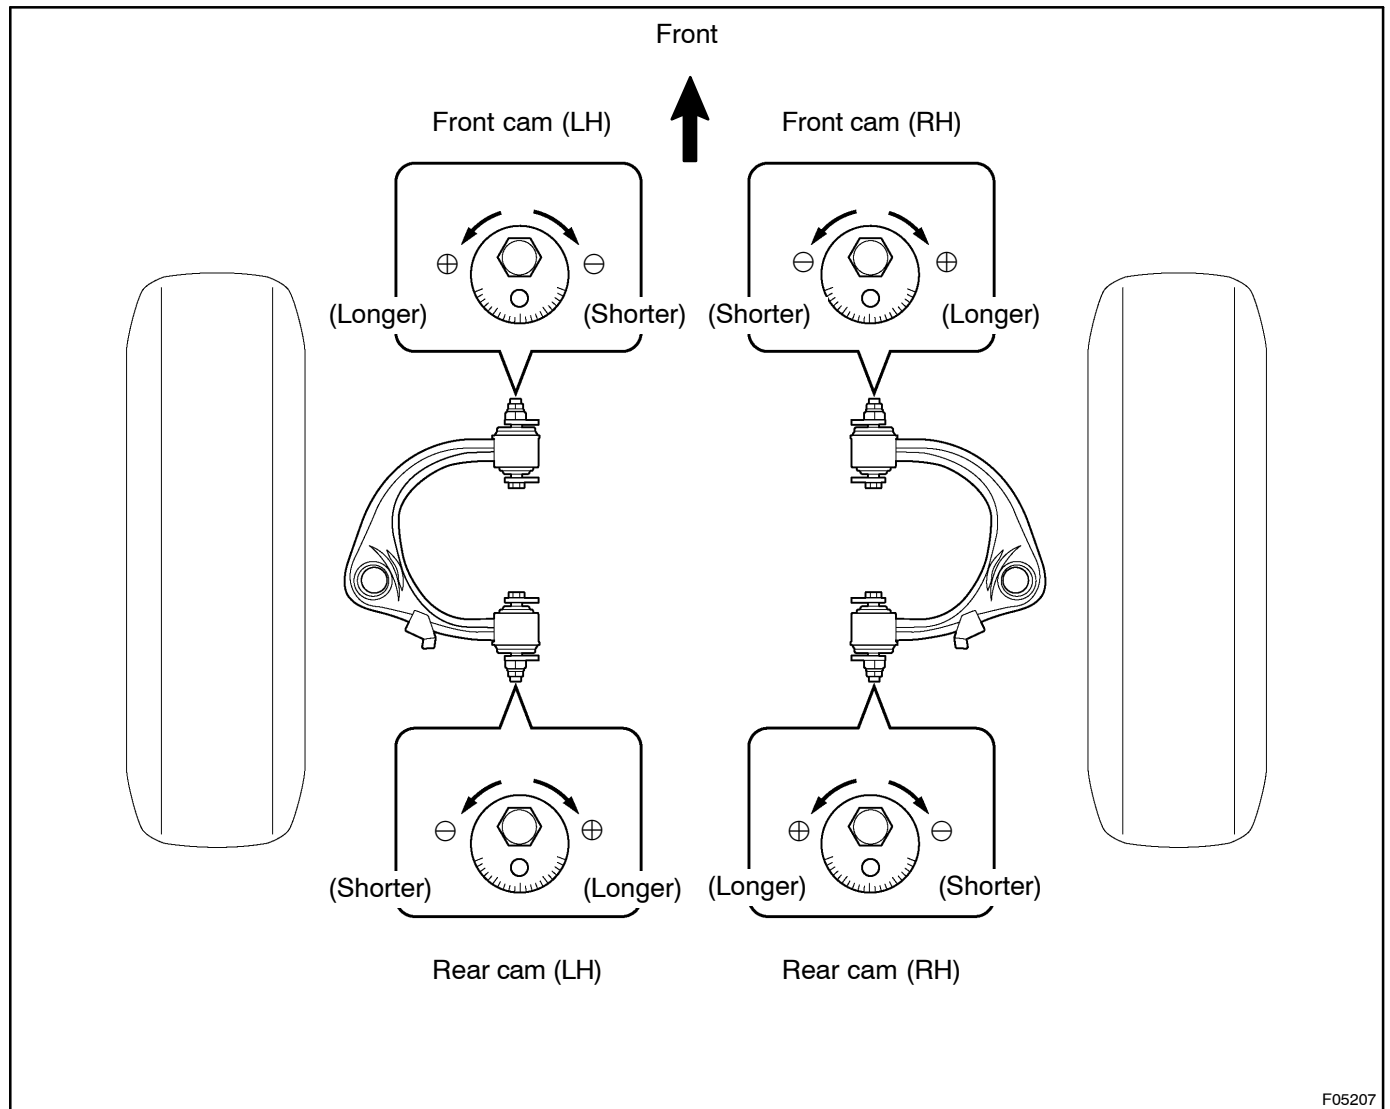

(Example)

——— Camber
 - - - - - Caster
 ○ = Calculated value
 ● = 0 point

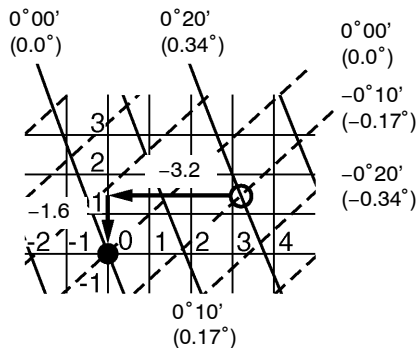

F05095

(c) How to read adjustment chart (using examples).


(1) Measure the present alignment.

Camber: $-0^{\circ}15'$ (-0.25°)**Caster: $2^{\circ}40'$ (2.67°)**

(2) Mark the difference between the standard value (A) and the measured value (B) on the adjustment chart.


Standard value:**Camber: $0^{\circ}05'$ (0.08°)****Caster: $2^{\circ}30'$ (2.5°)****Formula: $A - B = C$** **Camber: $0^{\circ}05' - (-0^{\circ}15') = 0^{\circ}20'$** **Caster: $2^{\circ}30' - 2^{\circ}40' = -0^{\circ}10'$**

(3) As shown in the chart, read the distance from the marked point to 0 point, and adjust the front and/or rear adjusting cams accordingly.

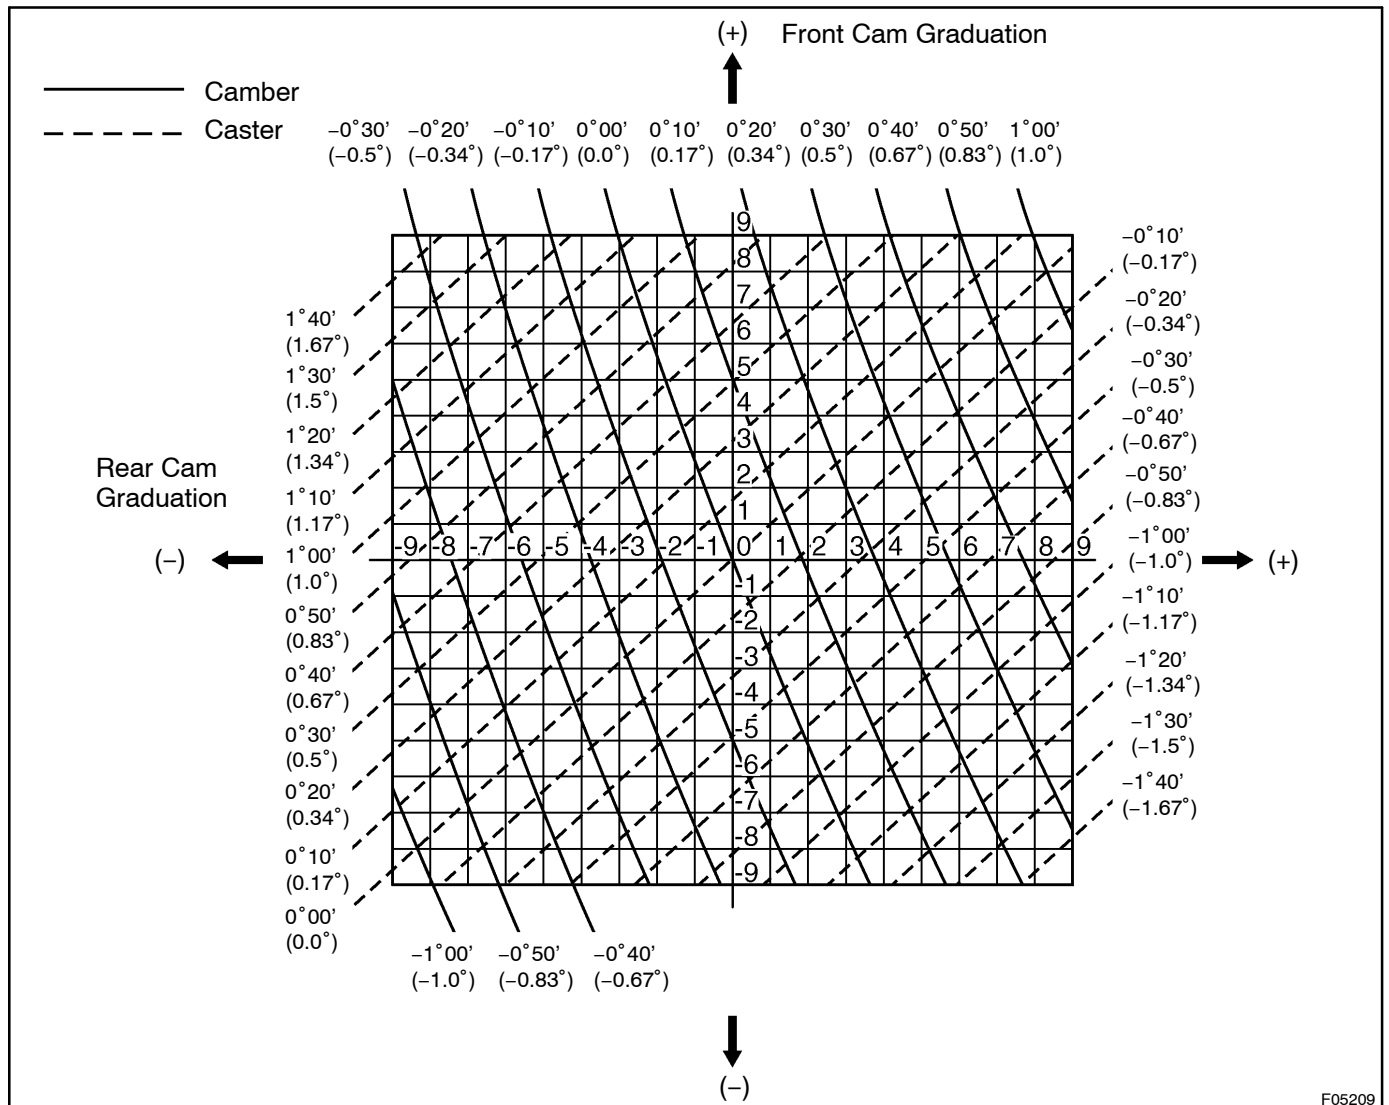Front cam: - (Shorter) 1.6**Rear cam: - (Shorter) 3.2**

F05209

- (d) Torque the front and/or rear adjusting cam nuts.
Torque: 98 N·m (1,000 kgf·cm, 72 ft·lbf)

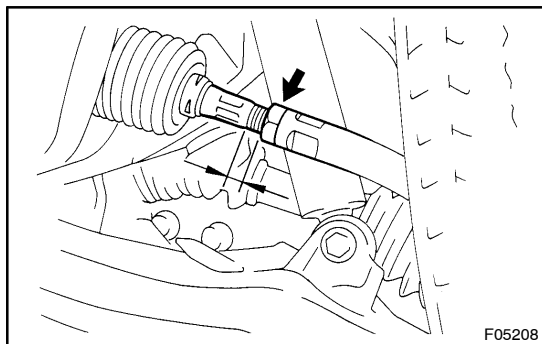

6. ADJUST TOE-IN

- (a) Check or adjust the lengths of the rack ends, then adjust the toe-in.
Rack end length difference: 3.0 mm (0.118 in.) or less
- (b) Remove the boot clamps.
 (c) Loosen the tie rod lock nuts.
 (d) Turn the left and right rack ends an equal amount to adjust the toe-in.


HINT:

Try to adjust the toe-in to the center value.

- (e) Tighten the tie rod lock nuts.
 (f) Place the boot on the seat and clamp it.

HINT:

Make sure that the boots are not twisted.

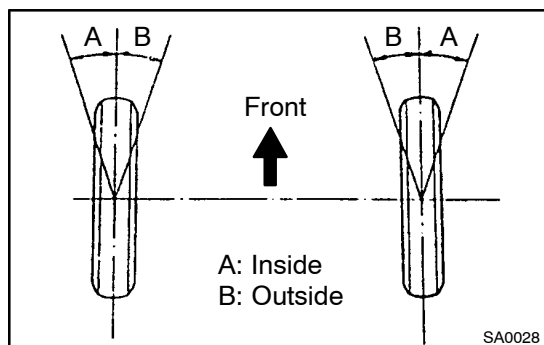


7. INSPECT AND ADJUST WHEEL ANGLE

- (a) Turn the steering wheel fully, and measure the turning angle.

Inside wheel	36° 42' (33° 42' – 36° 42') 36.7° (33.7° – 36.7°)
Outside wheel (Reference)	32° 36' 32.6°

If the wheel angles differ from the standard of the specification, inspect the toe-in.

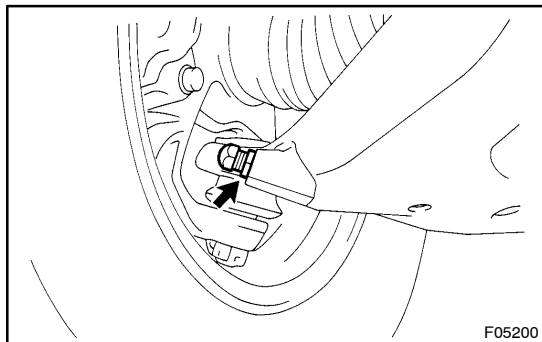

- (b) When toe-in is normal after inspection, adjust wheel angle with the knuckle stopper bolt of the lower suspension arm.

Torque: 44 N·m (450 kgf·cm, 32 ft·lbf)