


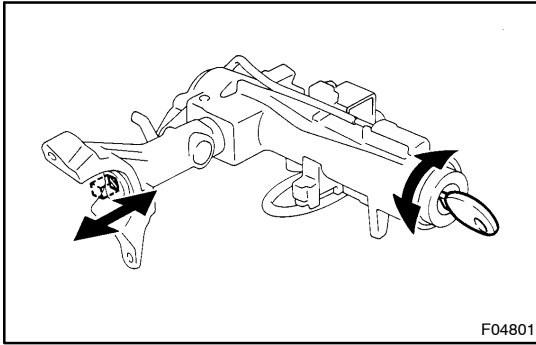


INSPECTION

NOTICE:

When using a vise, do not overtighten it.

1. INSPECT STEERING LOCK OPERATION

Check that the steering lock mechanism operates properly.

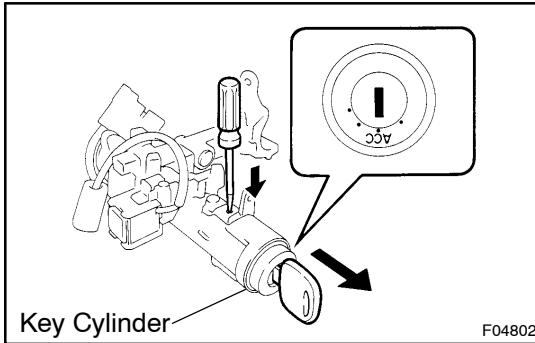

2. IF NECESSARY, REPLACE KEY CYLINDER

- Place the ignition key at the ACC position.
- Using a screwdriver, push down the stop pin of the cylinder, and pull out the key cylinder.
- Install a new cylinder.

HINT:

Make sure the key is at the ACC position.

3. INSPECT IGNITION SWITCH

(See page [BE-18](#))

4. IF NECESSARY, REPLACE IGNITION SWITCH

- Remove the 2 screws.
- Install a new switch with the 2 screws.

5. INSPECT KEY UNLOCK WARNING SWITCH

(See page [BE-18](#))

6. IF NECESSARY, REPLACE KEY UNLOCK WARNING SWITCH

- Slide out the switch.
- Slide in a new switch.

7. INSPECT KEY INTERLOCK SOLENOID

(See page [AT-13](#))

8. IF NECESSARY, REPLACE KEY INTERLOCK SOLENOID

- Remove the 2 screws.
- Install a new solenoid with the 2 screws.


9. INSPECT TRANSPONDER KEY COIL

(See page [BE-150](#))

10. IF NECESSARY, REPLACE TRANSPONDER KEY COIL


11. IF NECESSARY, REPLACE TRANSPONDER KEY AMPLIFIER

- Remove the 2 screws.
- Install a new key amplifier with the 2 screws.

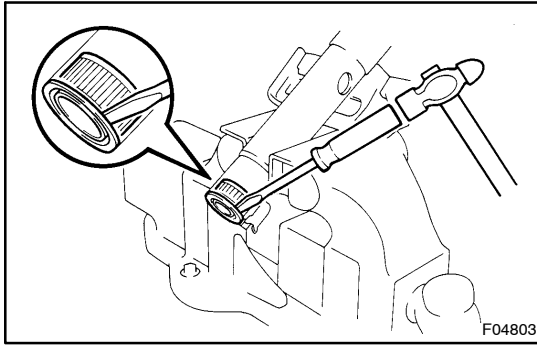


**12. TILT STEERING COLUMN:
IF NECESSARY, REPLACE BUSHING**

- (a) Using a screwdriver, tap out the bushing.

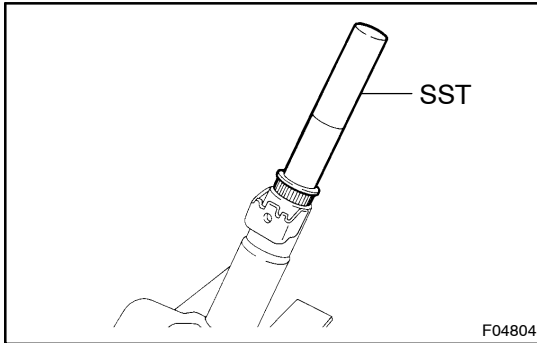


- (b) Coat a new bushing with molybdenum disulfide lithium base grease.

- (c) Using SST and a hammer, tap in the bushing.
SST 09612-22011

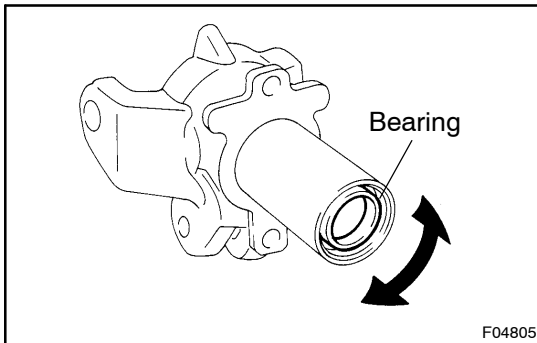

13. INSPECT BEARING

- (a) Check the bearing rotation condition and check for abnormal noise.
If the bearing is worn or damaged, replace the column upper tube.
- (b) Coat the bearing with molybdenum disulfide lithium base grease.

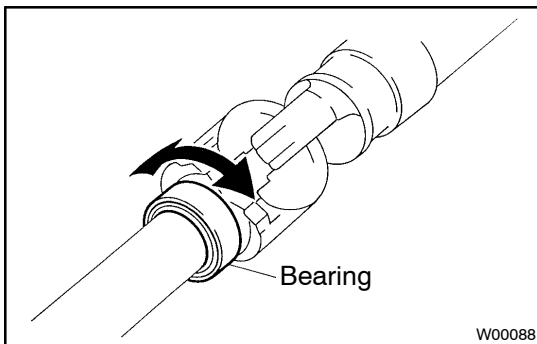

14. INSPECT BEARING

- (a) Check the bearing rotation condition of the main shaft assembly and check for abnormal noise.
If necessary, replace bearing.
- (b) Coat the bearing with molybdenum disulfide lithium base grease.