


REMOVAL

1. REMOVE STEERING WHEEL PAD

NOTICE:


- If the airbag connector is disconnected with the ignition switch at ON or ACC, DTCs will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace with new ones.

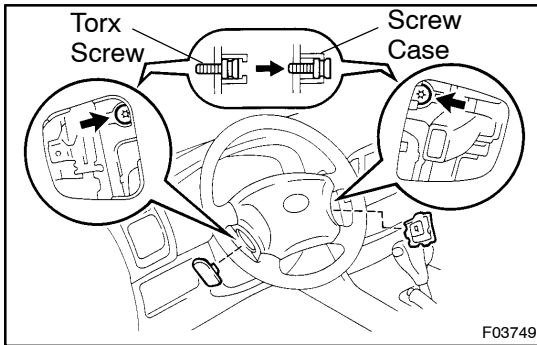

- Place the front wheels facing straight ahead.
- Remove the steering wheel lower No.2 and No.3 covers.
- Using a torx socket wrench, loosen the 2 torx screws.

HINT:

Loosen the 2 screws until the groove along the screw circumference catches on the screw case.

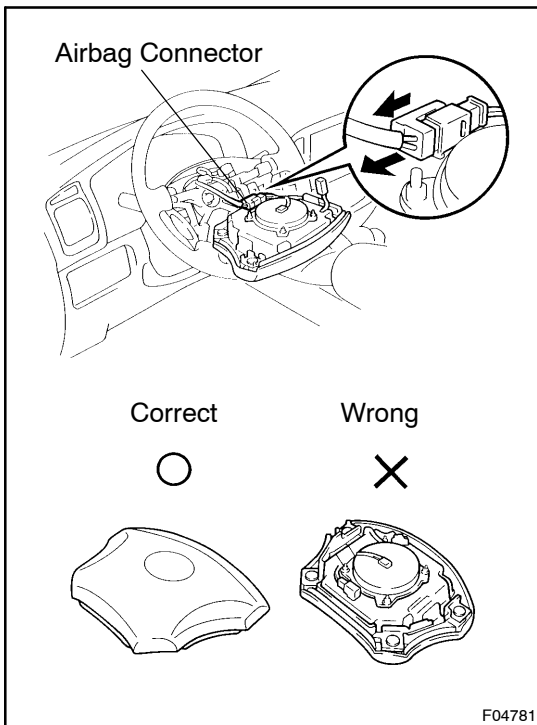


- Pull the pad out from the steering wheel and disconnect the airbag connector.
- Disconnect the connector.

CAUTION:

- When storing the wheel pad, keep the upper surface of the pad facing upward.
- Never disassemble the wheel pad.

NOTICE:

When removing the wheel pad, take care not to pull the airbag wire harness.

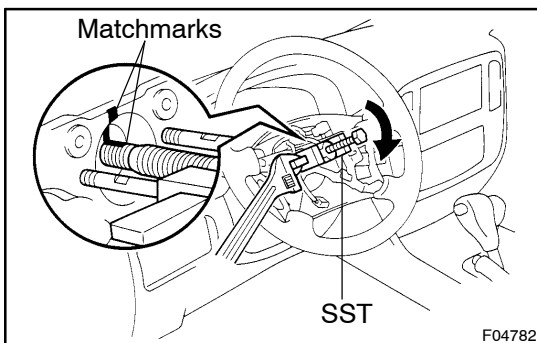

2. REMOVE STEERING WHEEL

- Disconnect the connector.
- Remove the steering wheel set nut.
- Place matchmarks on the steering wheel and main shaft assembly.
- Using SST, remove the wheel.
SST 09950-50010 (09951-05010, 09952-05010, 09953-05020, 09954-05020)

3. REMOVE UPPER AND LOWER COLUMN COVERS

Remove the 3 screws.

4. REMOVE COMBINATION SWITCH WITH SPIRAL CABLE

- (a) Disconnect the 3 connectors.
- (b) w/ Power tilt and power telescopic steering column:
Disconnect the 5 connectors.
- (c) Disconnect the airbag connector.
- (d) Remove the 3 screws.

5. REMOVE SPIRAL CABLE

(See page [BE-20](#))

NOTICE:

Do not disassembly the cable or apply oil to it.

6. REMOVE SCUFF PLATE**7. REMOVE COWL TRIM**

Remove the clip.

8. REMOVE CLUSTER FINISH PANEL

Remove the connector.

9. REMOVE LOWER NO.1 PANEL


- (a) Remove the 2 screws and disconnect the hood lock release lever from the panel.
- (b) Remove the 2 screws and disconnect the fuel lid release lever from the panel.
- (c) Remove pad set screw.

10. REMOVE LH LOWER PANEL

Remove the 4 bolts.

11. REMOVE NO.2 HEATER TO REGISTER DUCT

Remove the screw.

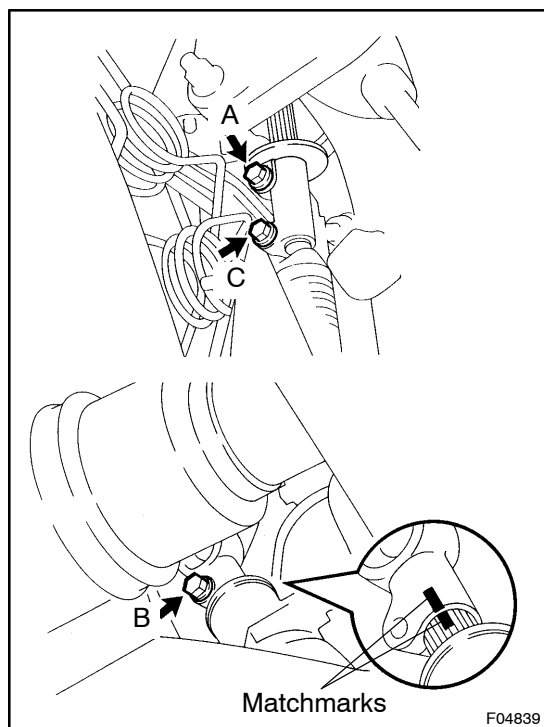**12. DISCONNECT NO.2 INTERMEDIATE SHAFT ASSEMBLY**


- (a) Place matchmarks on the intermediate shaft and control valve shaft.
- (b) Loosen the bolt A.
- (c) Remove the bolt B and the bolt C.

13. REMOVE NO.2 INTERMEDIATE SHAFT ASSEMBLY**14. REMOVE HOLE COVER**

Remove the 4 bolts.

15. REMOVE STEERING COLUMN ASSEMBLY

- (a) Disconnect the connectors.

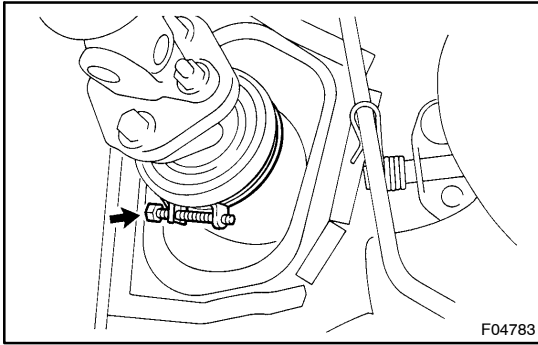

- (b) Loosen the hose clamp.
- (c) Remove the 4 column assembly set nuts.

16. REMOVE SLIDING YOKE

- (a) Remove the bolt A.
- (b) Remove the thrust stopper.

17. REMOVE HOSE CLAMP

18. REMOVE NO.2 HOLE COVER