

INSTALLATION

Installation is in the reverse order of removal (See page [TR-4](#)).

1. APPLY MP GREASE TO TRANSFER ADAPTOR OIL SEAL
2. AFTER INSTALLATION, DO ROAD TEST