




I GROUND POINT

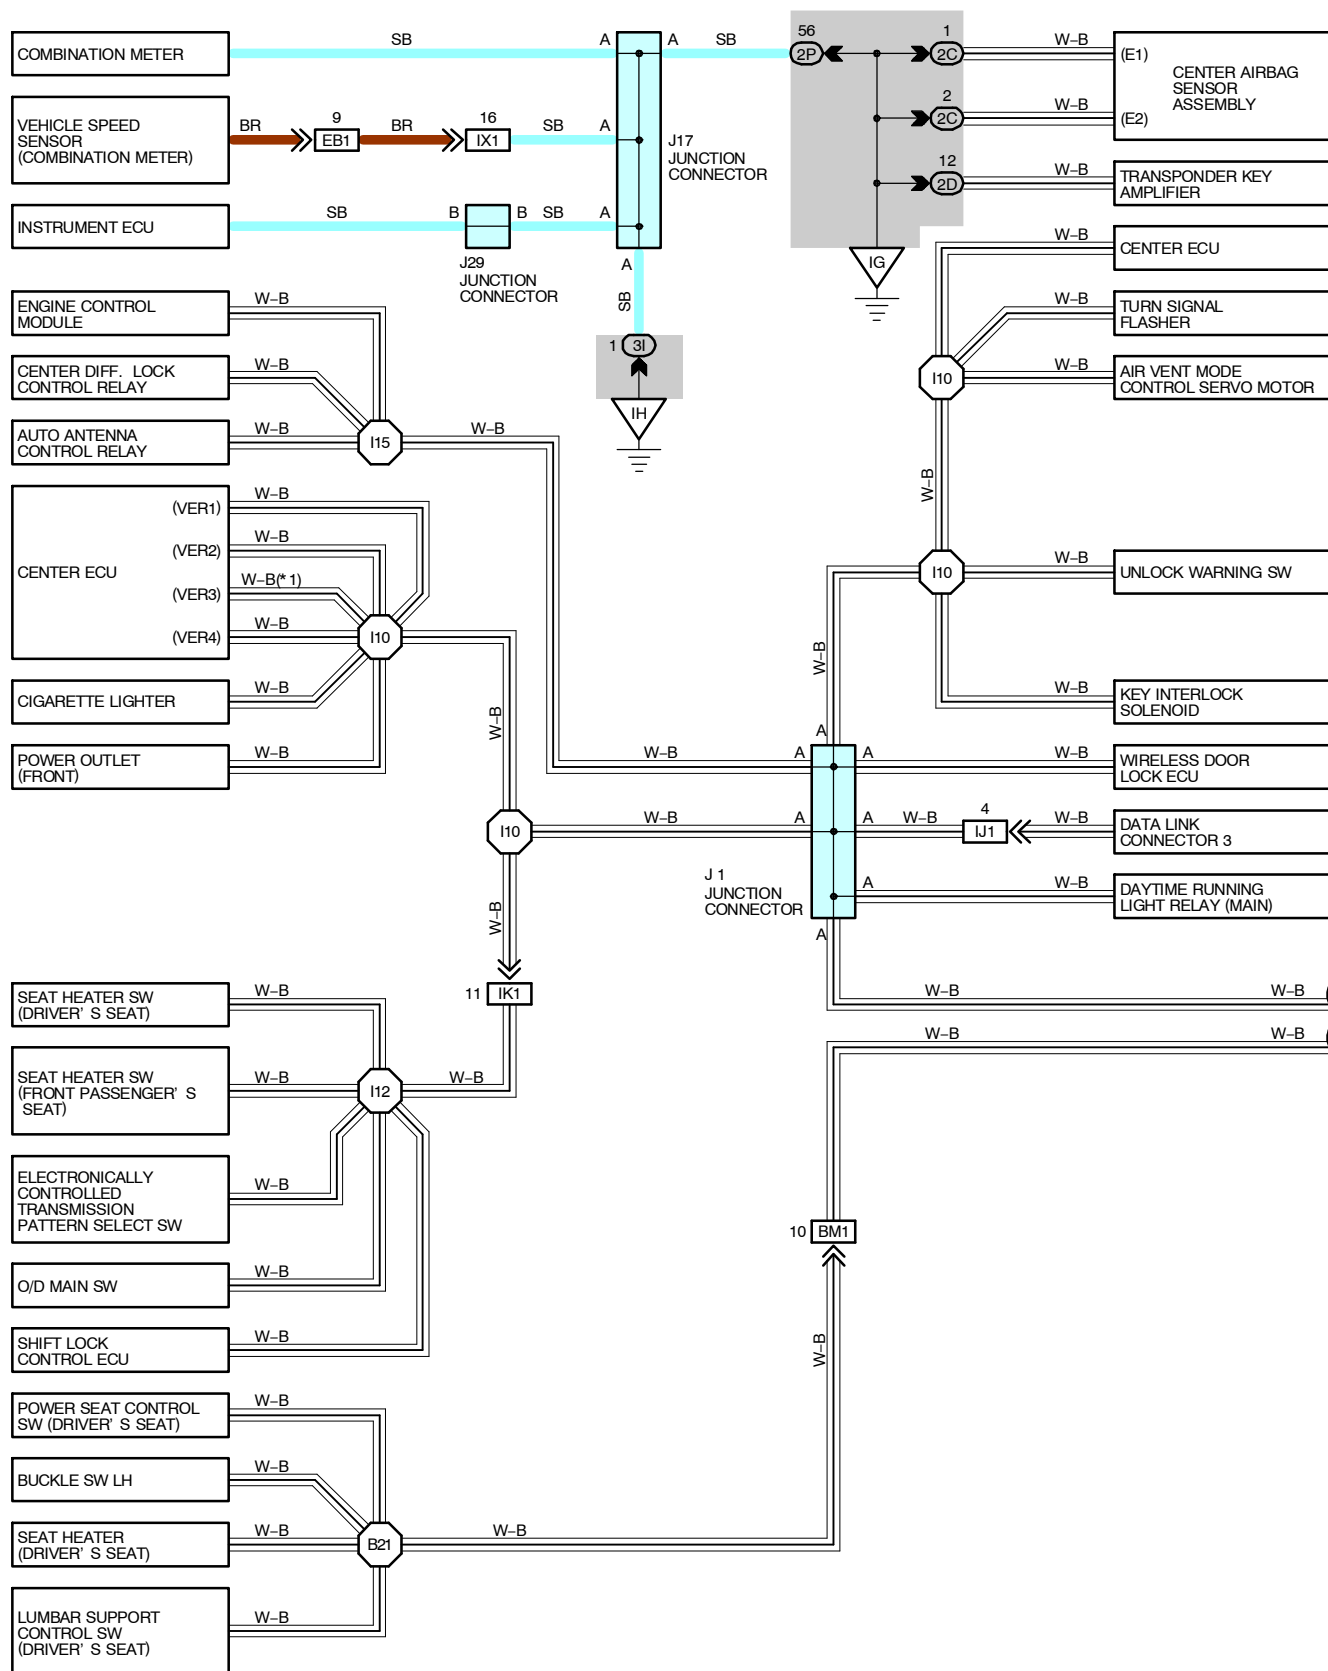


* 1 : W/ REAR AIR CONDITIONING
 * 2 : W/O REAR AIR CONDITIONING

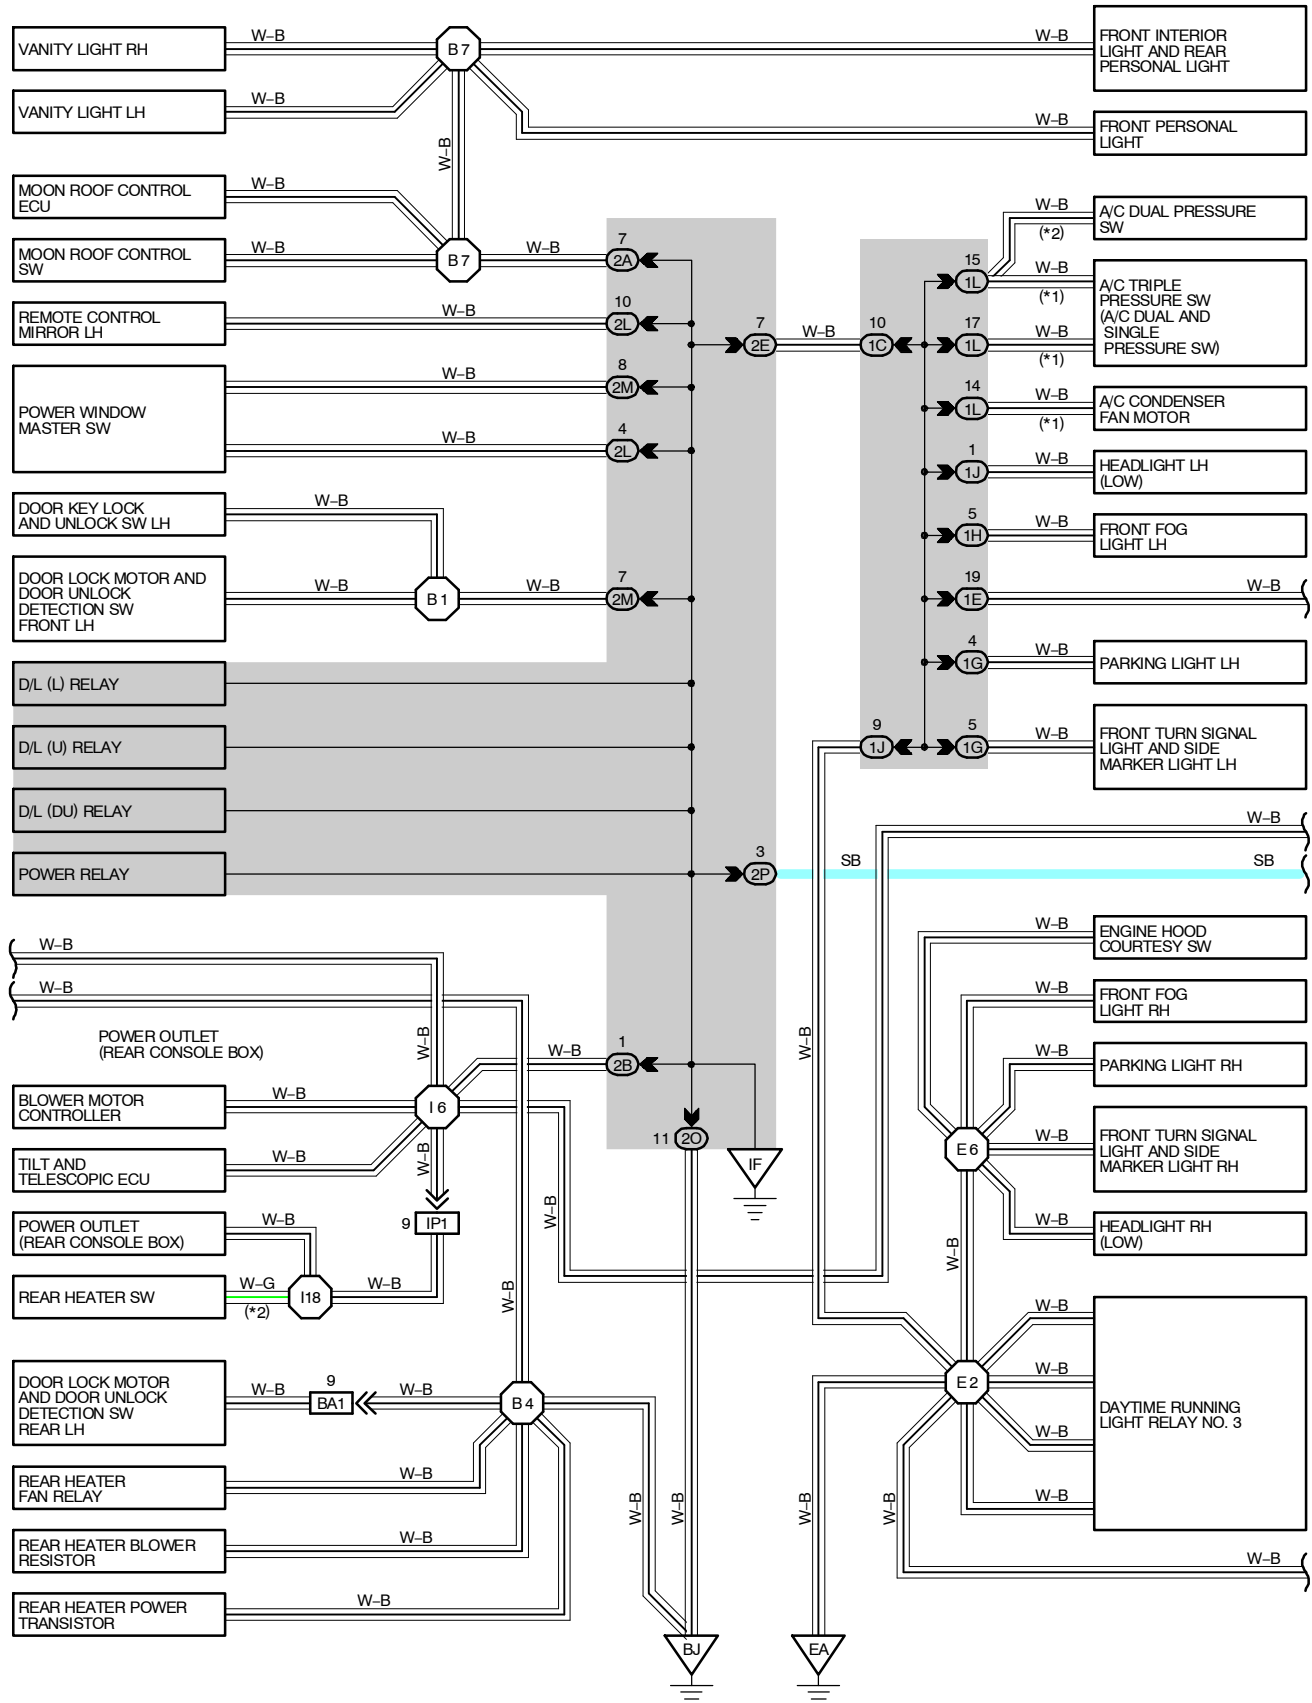



I GROUND POINT

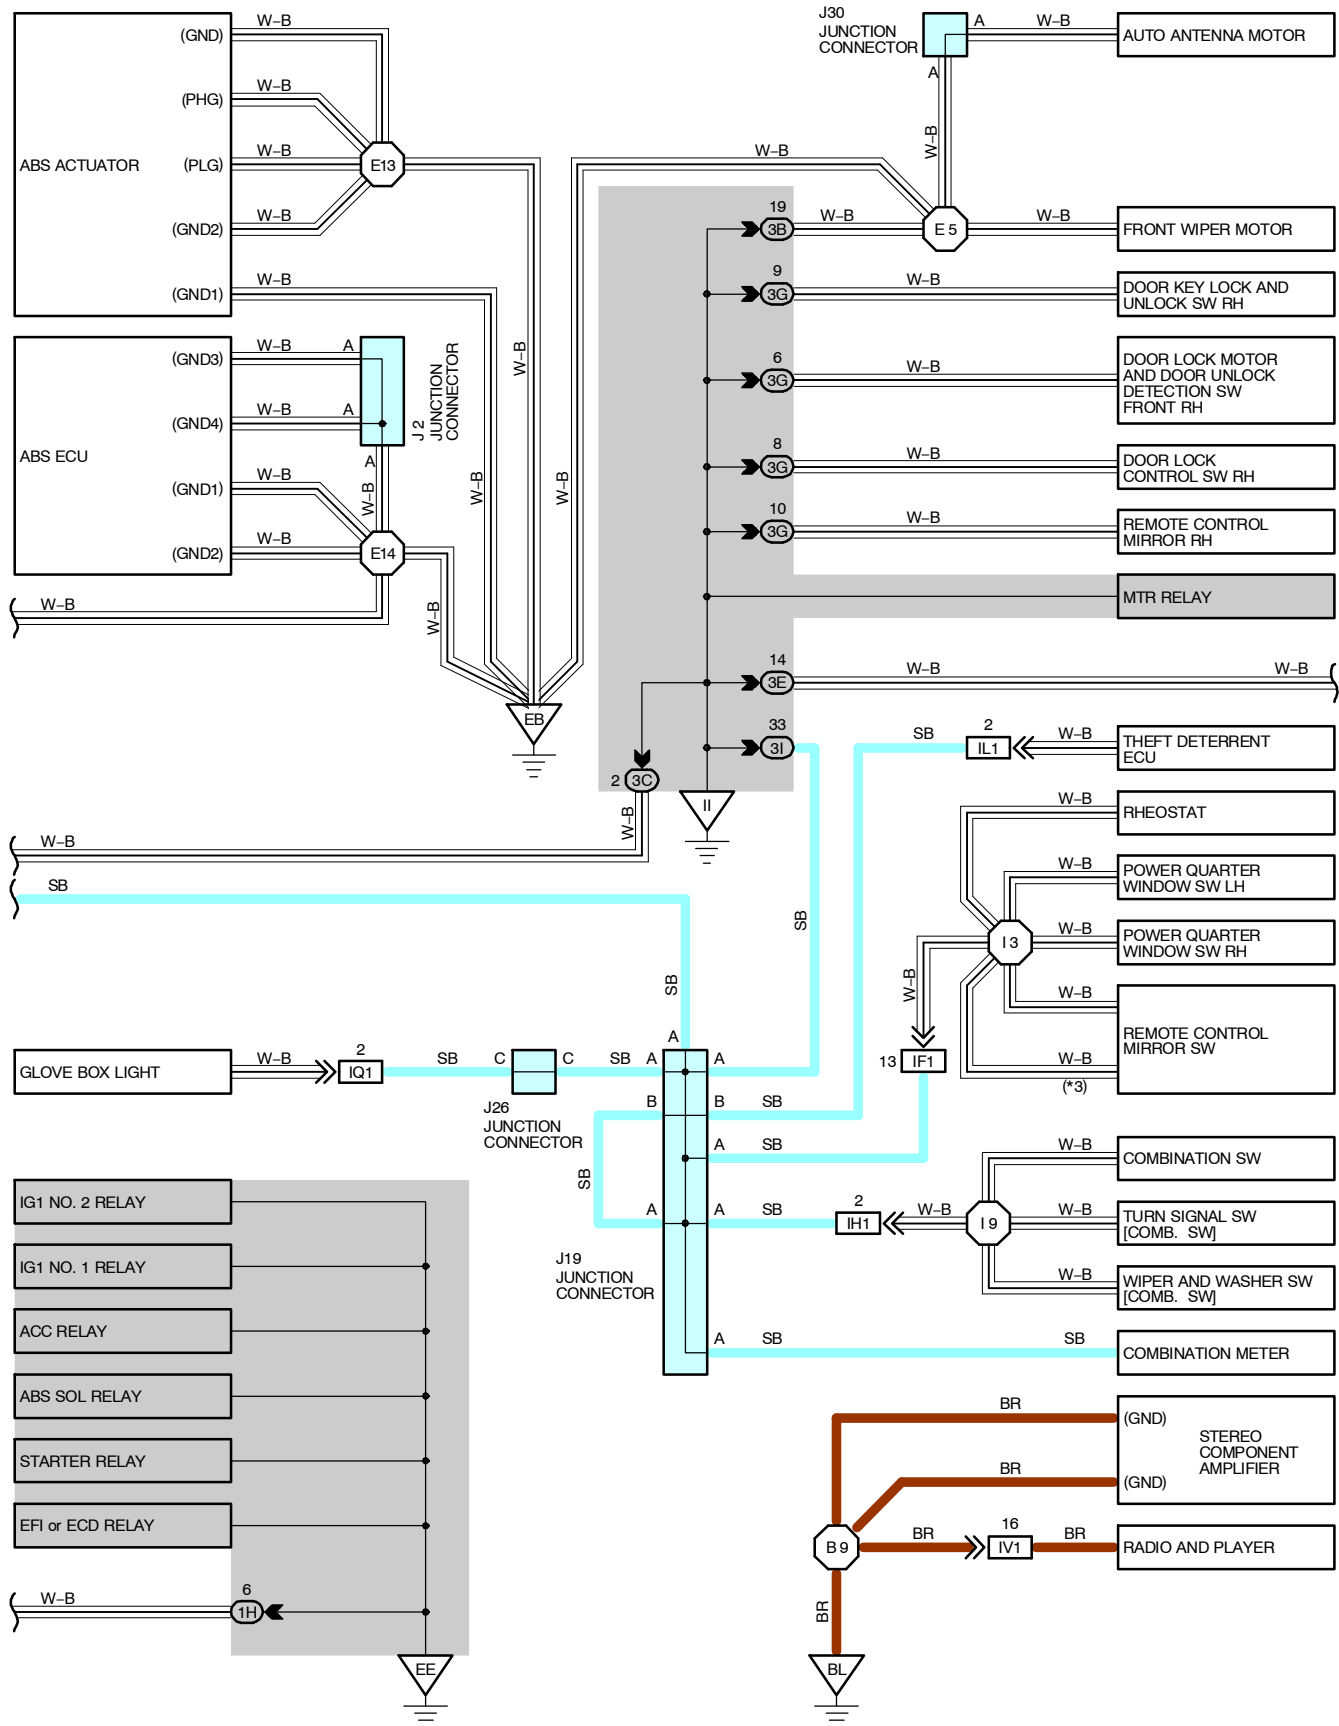

* 1 : W/ REAR AIR CONDITIONING
 * 3 : W/O POWER REAR QUARTER WINDOW

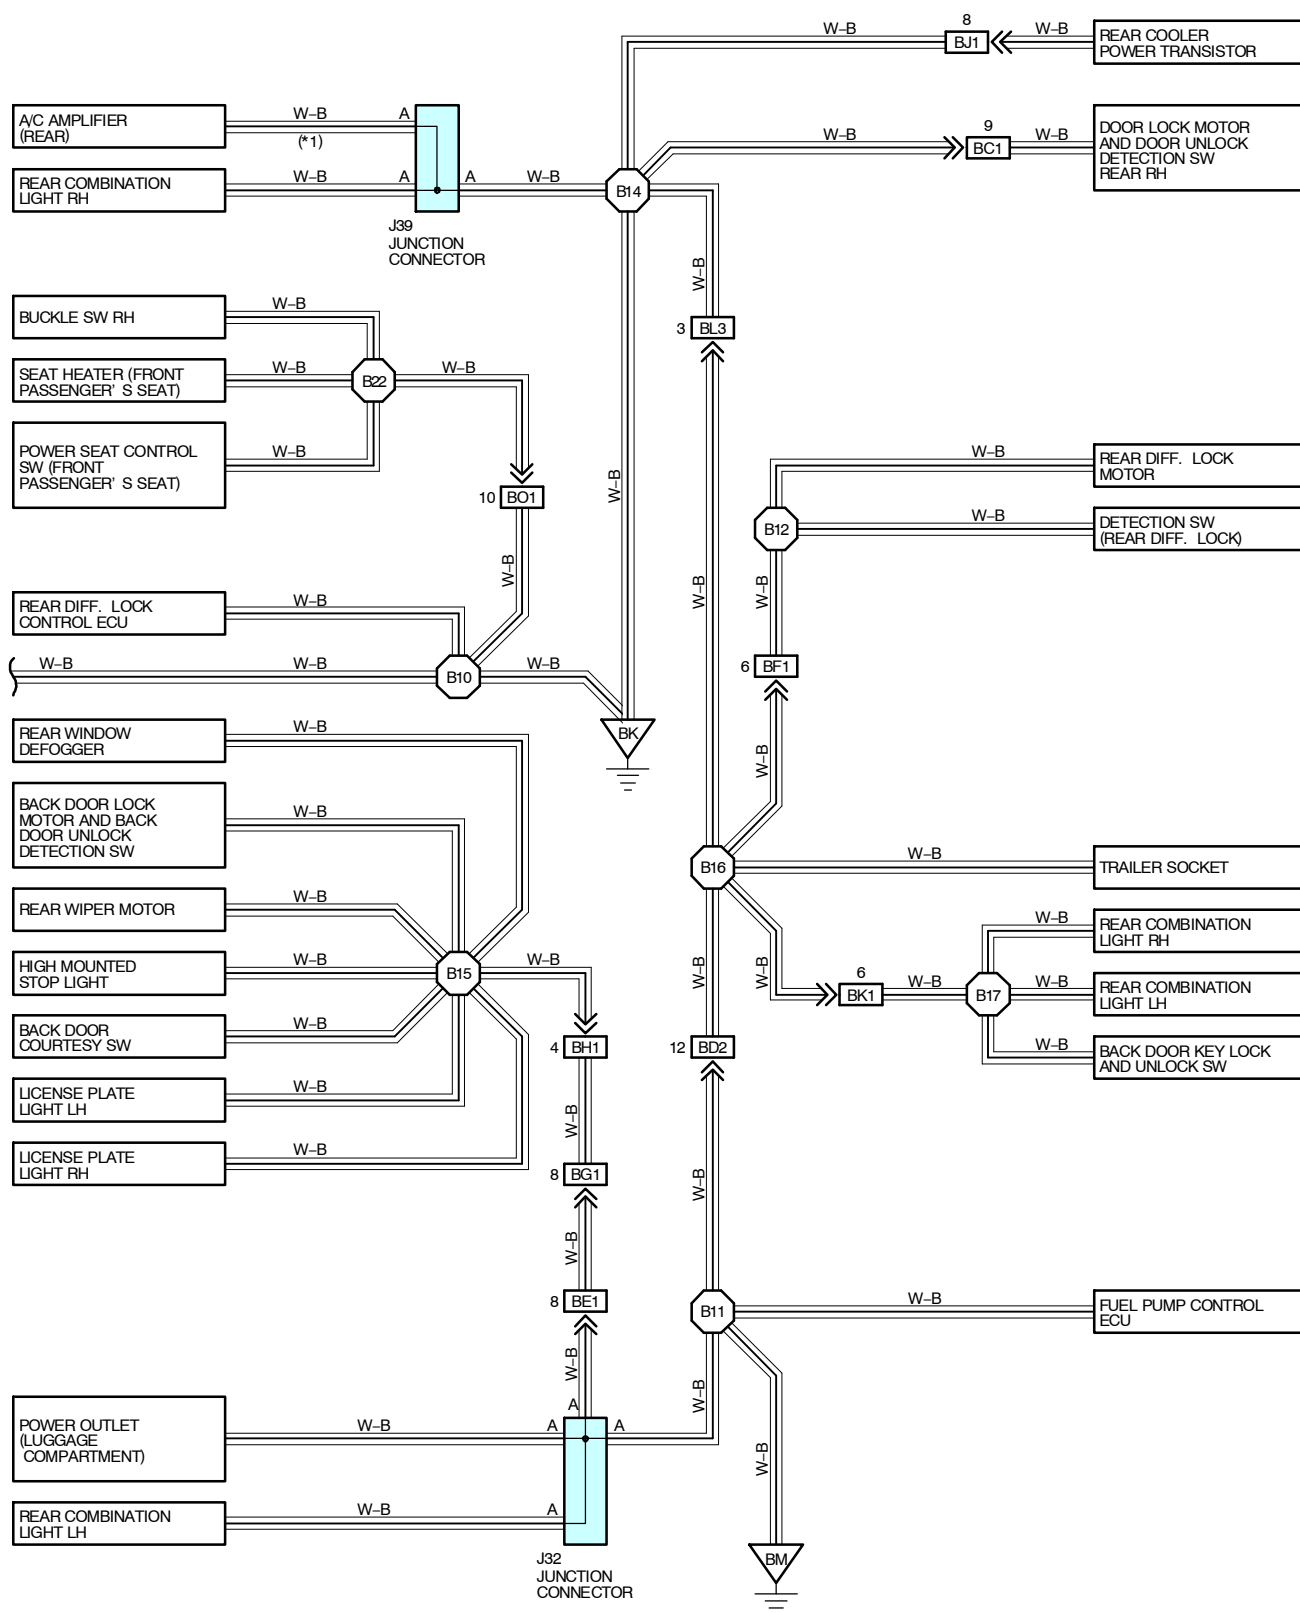

I GROUND POINT

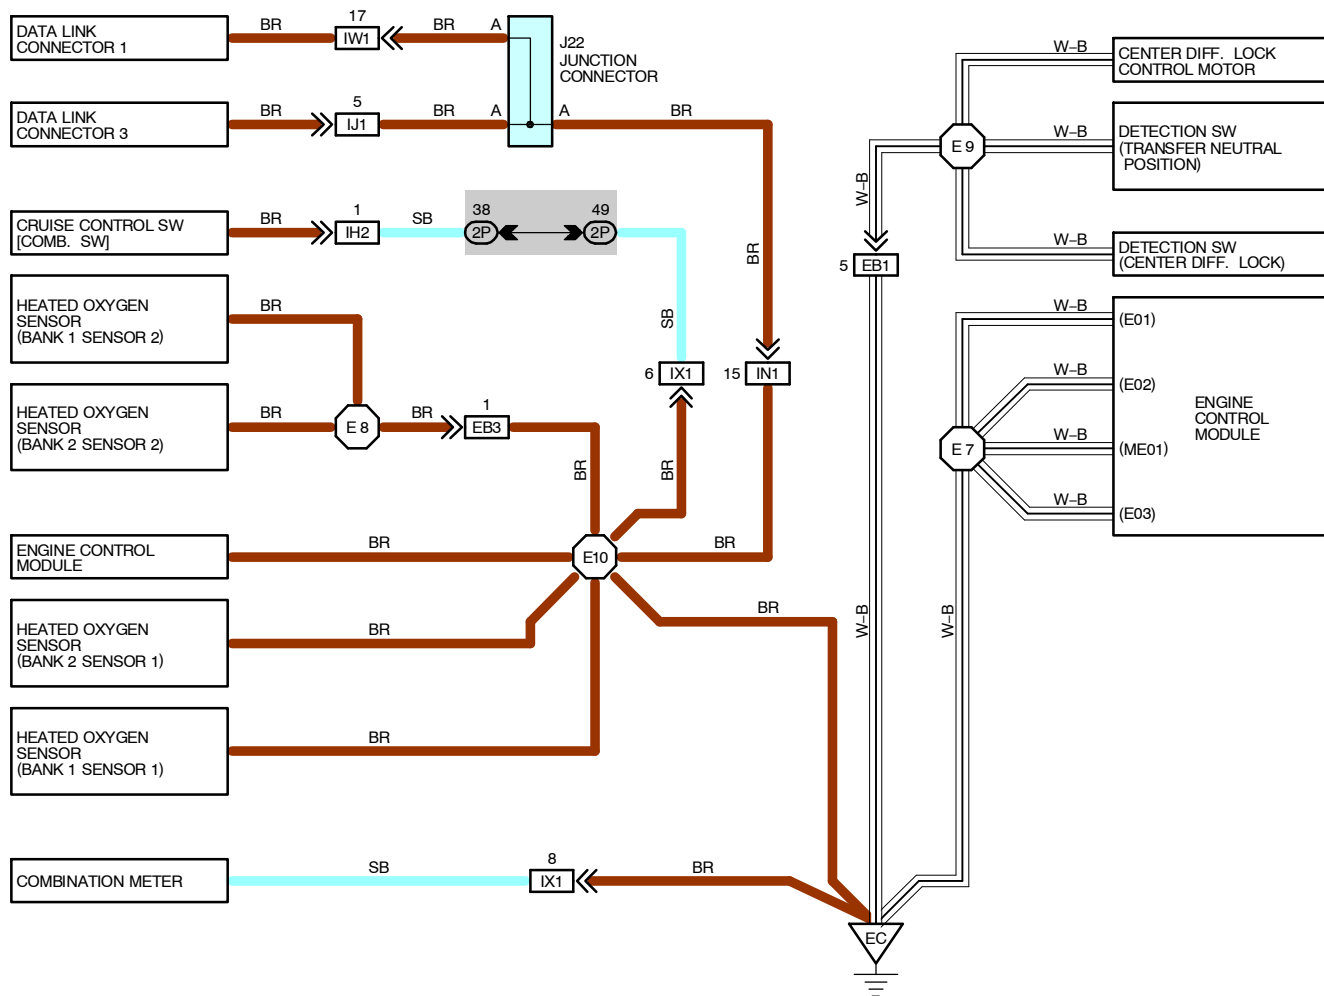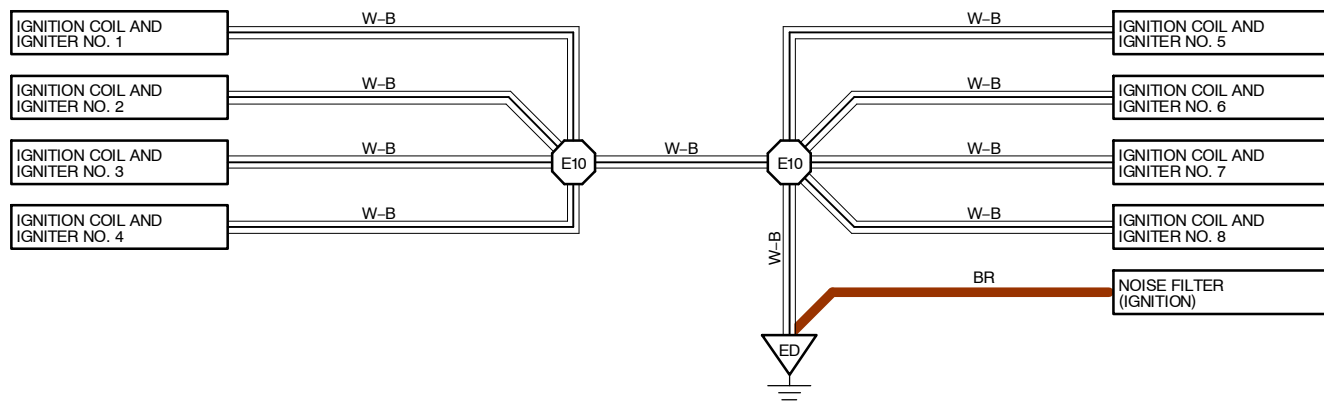

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J1	39	J22	39	J32	40
J2	39	J26	39	J39	40
J17	39	J29	39		
J19	39	J30	39		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
1G	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1H		
1J		
1L		
2A	24	Roof Wire and Cowl Side J/B LH (Left Kick Panel)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2C		
2D		
2E	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	24	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2M		
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	30	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3C	30	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E	30	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3G	30	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

I GROUND POINT

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	44	Engine Wire and Transmission Wire (On the Transmission)
EB3		
IF1	46	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IH2		
IJ1	48	Dash Wire and Detector Wire (instrument Panel Center)
IK1	48	Console Box Wire and Dash Wire (Left Side of Front Console)
IL1	48	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IN1	50	Engine Wire and Dash Wire (Behind the Glove Box)
IP1	50	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IQ1	50	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IV1	52	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
IW1	52	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IX1	52	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BA1	54	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BC1	54	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BD2	54	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BE1	54	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BF1	56	Frame Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BG1	56	Pillar No.1 Wire and Luggage Room Wire (Left Rear Side Roof Panel)
BH1	56	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BJ1	56	Floor No.2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)
BK1	56	Back Door Lower Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BL3	56	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BM1	58	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BO1	58	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)

: GROUND POINTS


Code	See Page	Ground Points Location
EA	44	Front Right Side of Fender Apron
EB		
EC	44	Rear Bank of Right Cylinder Head
ED	44	Rear Bank of Left Cylinder Head
EE	46	Front Left Side of Fender Apron
IF	46	Set Bolt of Cowl Side J/B LH
IG		
IH	46	Set Bolt of Cowl Side J/B RH
II		
BJ	54	Under the Driver's Seat
BK	54	Front Side Under the Front Passenger's Seat
BL	54	Rear Side Under the Front Passenger's Seat
BM	54	Left Rear Side Quarter Panel



: SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	44	Engine Room Main Wire	I18	48	Rear Console Box Wire
E5	44	Engine Room No.2 Wire	B1	56	Front Door LH Wire
E6	44	Engine Room Main Wire	B4	56	Floor Wire
E7	44	Engine Wire	B7	56	Roof Wire
E8	44	Transmission Wire	B9	56	Floor No.2 Wire
E9			B10		
E10	44	Engine Wire	B11	56	Floor Wire
E13	44	Engine Room No.2 Wire	B12	56	Frame Wire
F14			B14	56	Floor No.2 Wire
I3	48	Instrument Panel Wire	B15	56	Back Door Upper Wire
I6	48	Dash Wire	B16	56	Floor No.3 Wire
I9	48	Column Wire	B17	56	Back Door Lower Wire
I10	48	Dash Wire	B21	58	Front Seat LH Wire
I12	48	Console Box Wire	B22	58	Front Seat RH Wire
I15	48	Dash Wire			

 J1




(Hint : See Page 7)

 J2




(Hint : See Page 7)

J17

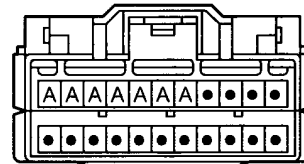


(Hint : See Page 7)

J19
GRAY

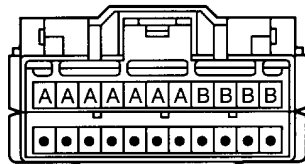


(Hint : See Page 7)

 J22




(Hint : See Page 7)

J26
BLUE

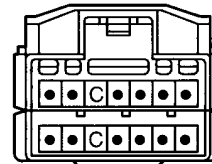


(Hint : See Page 7)

J29

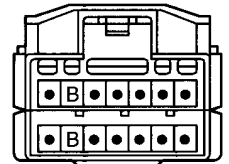


(Hint : See Page 7)

 J30




(Hint : See Page 7)

 J32



(Hint : See Page 7)

 J39



(Hint : See Page 7)