




F RELAY LOCATIONS

[Engine Compartment]

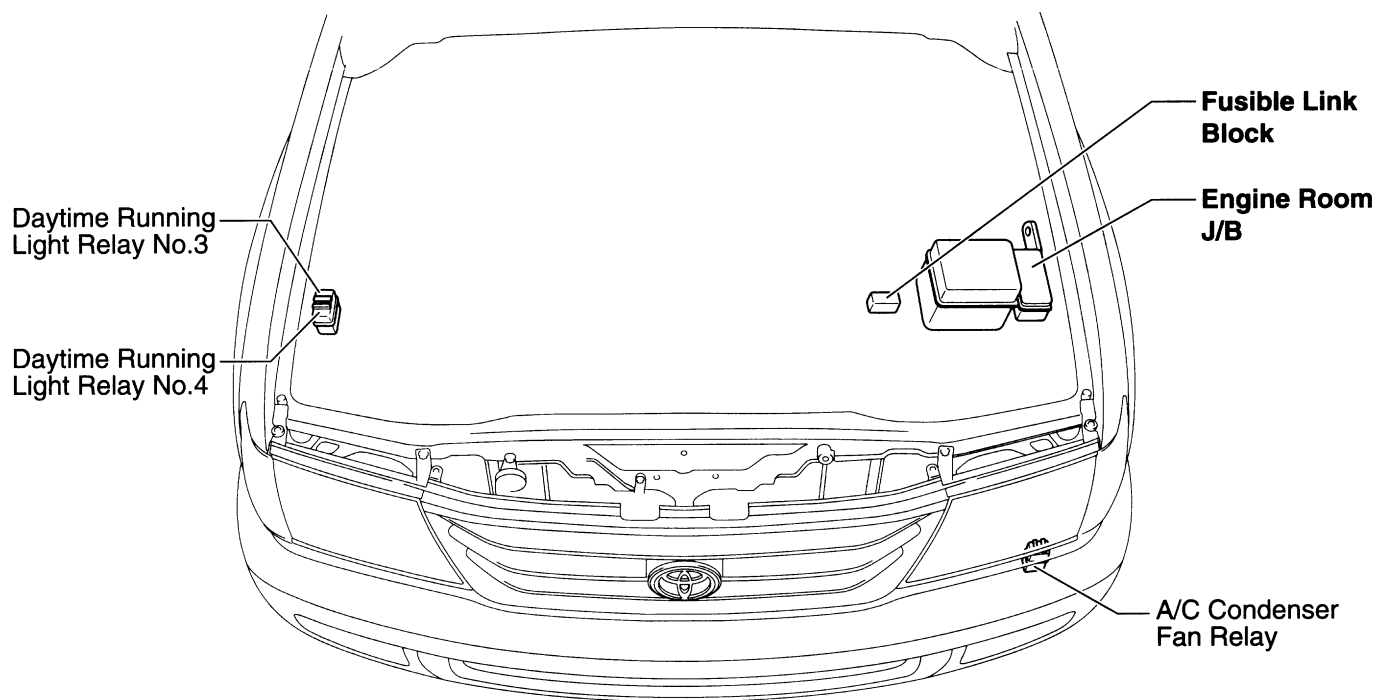

[Instrument Panel]

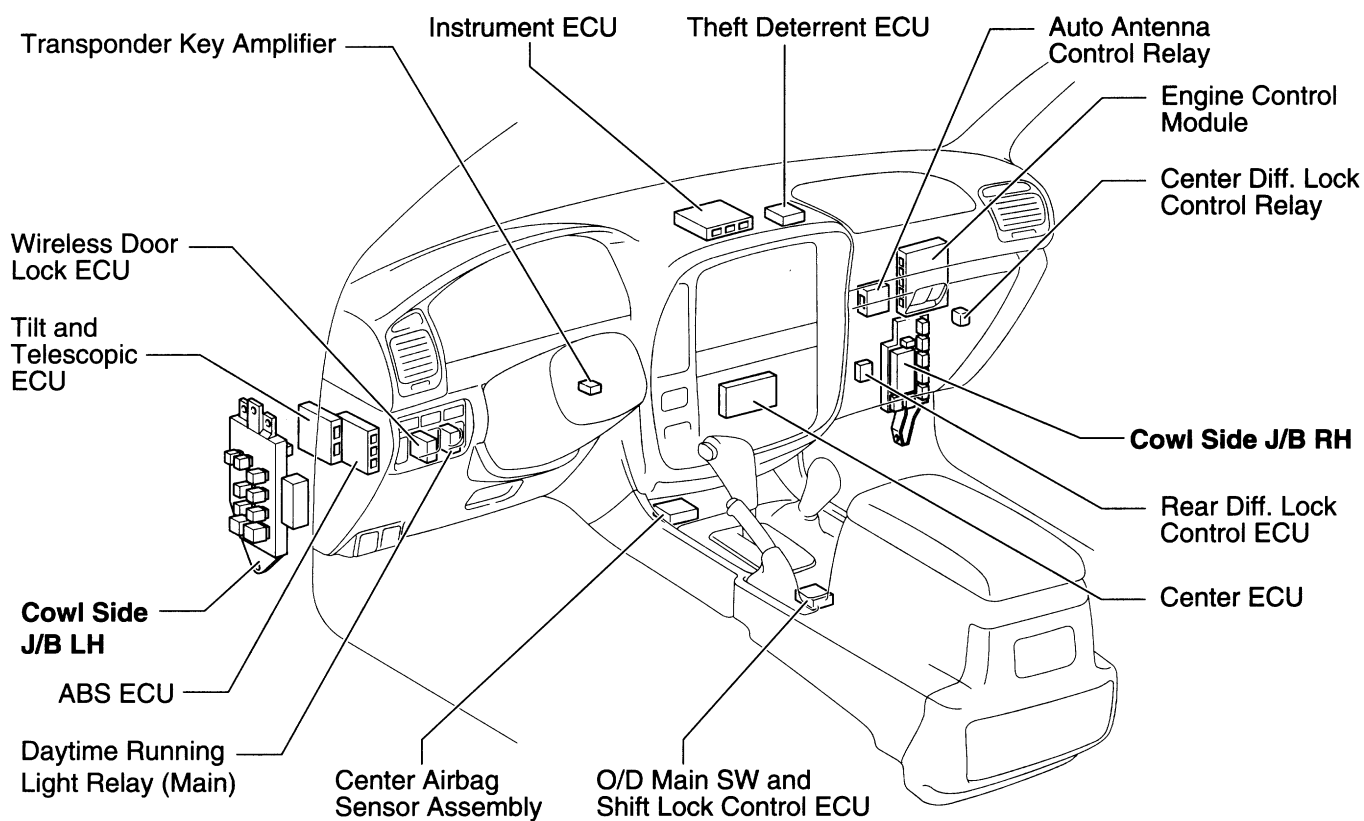


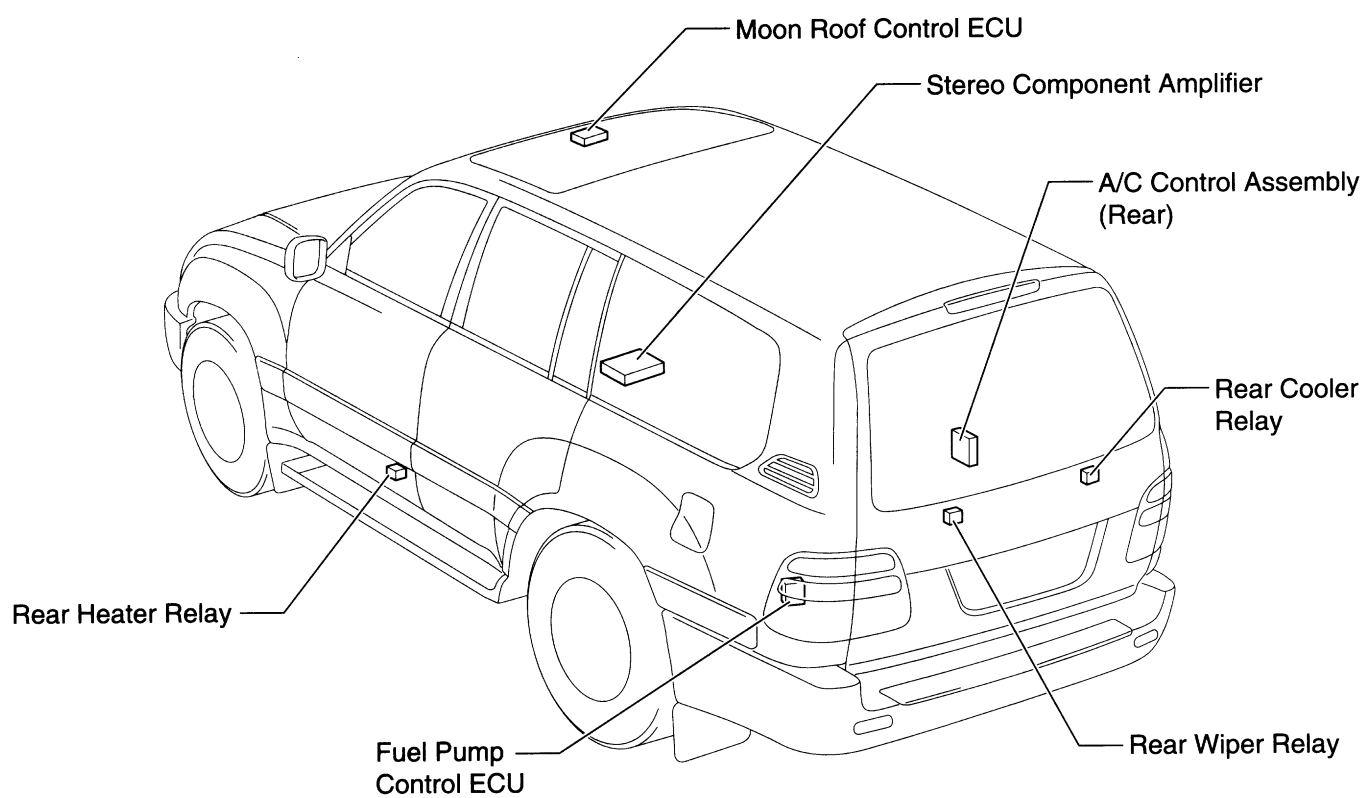
[Body]

F RELAY LOCATIONS

 : Engine Room J/B


Engine Compartment Left (See Page 18)

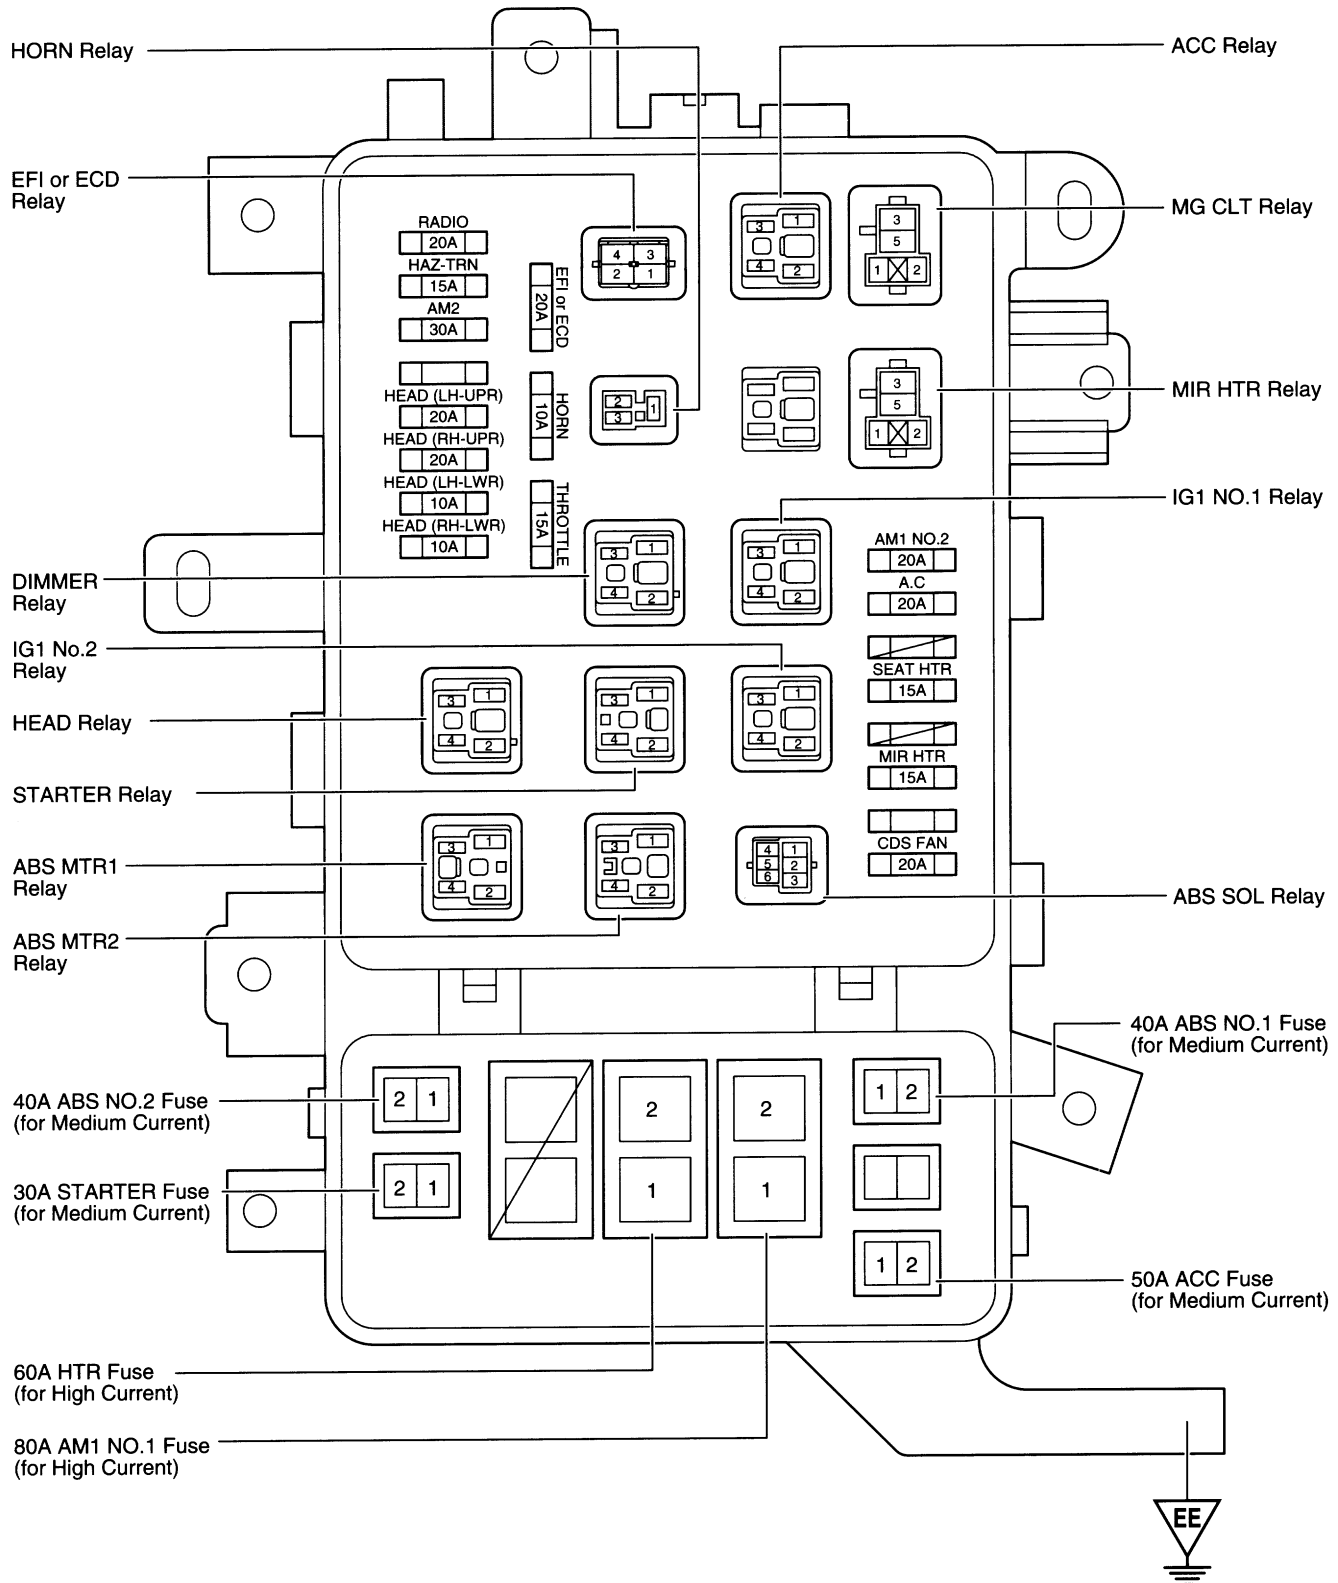

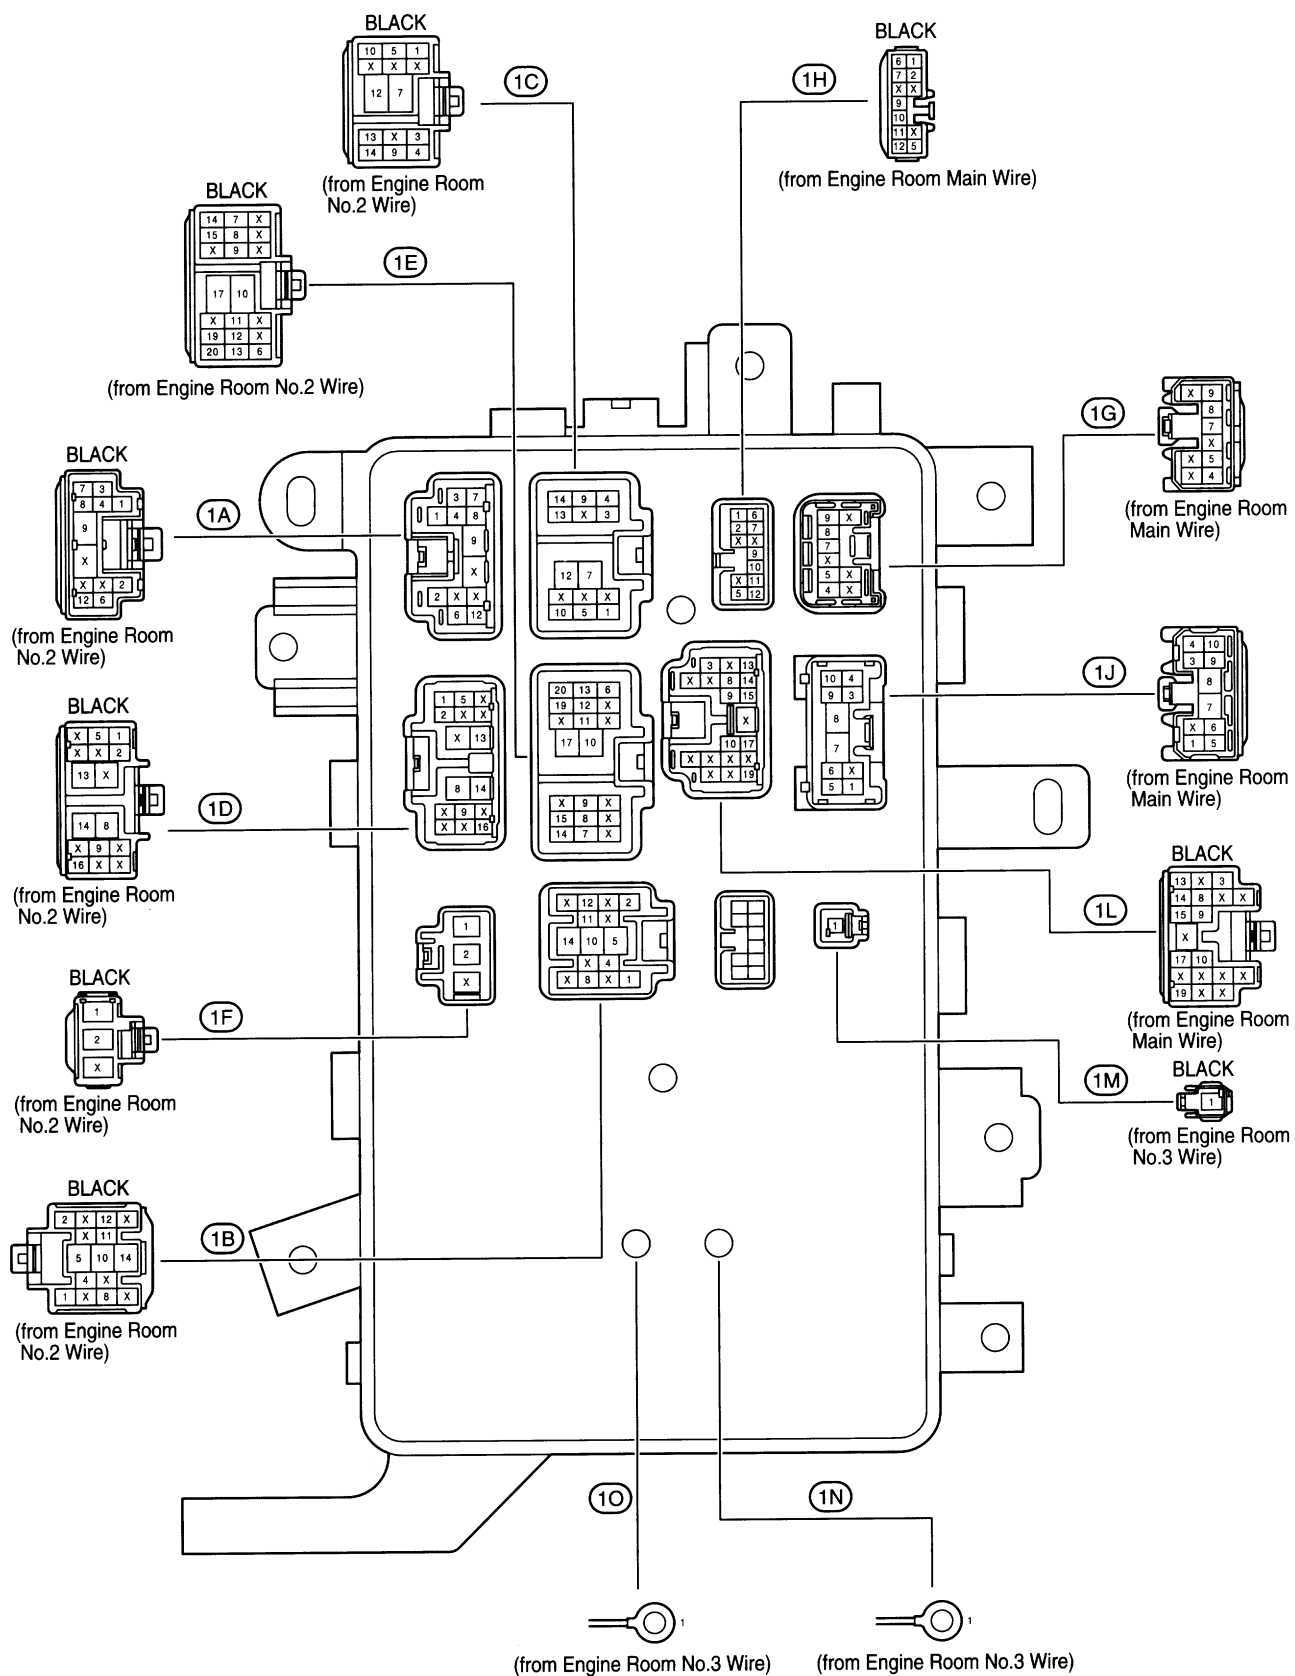


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

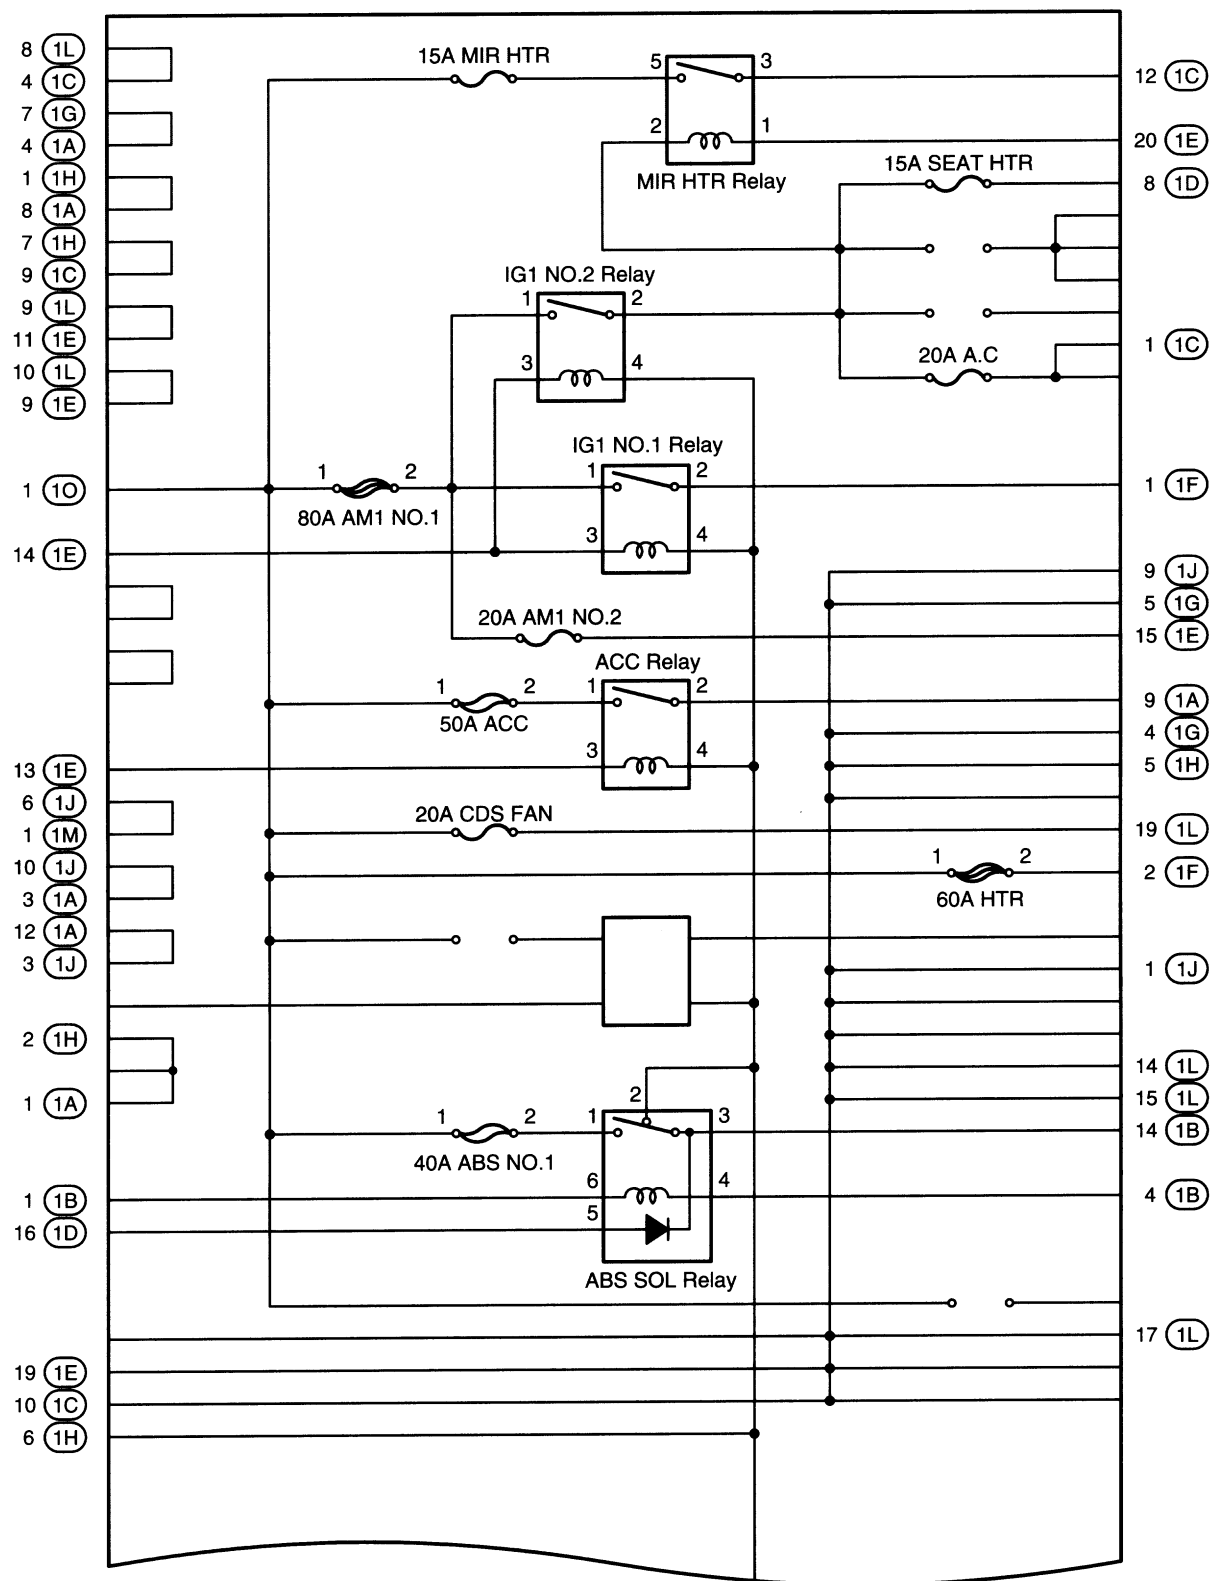

Cont. Next Page


Cont'd

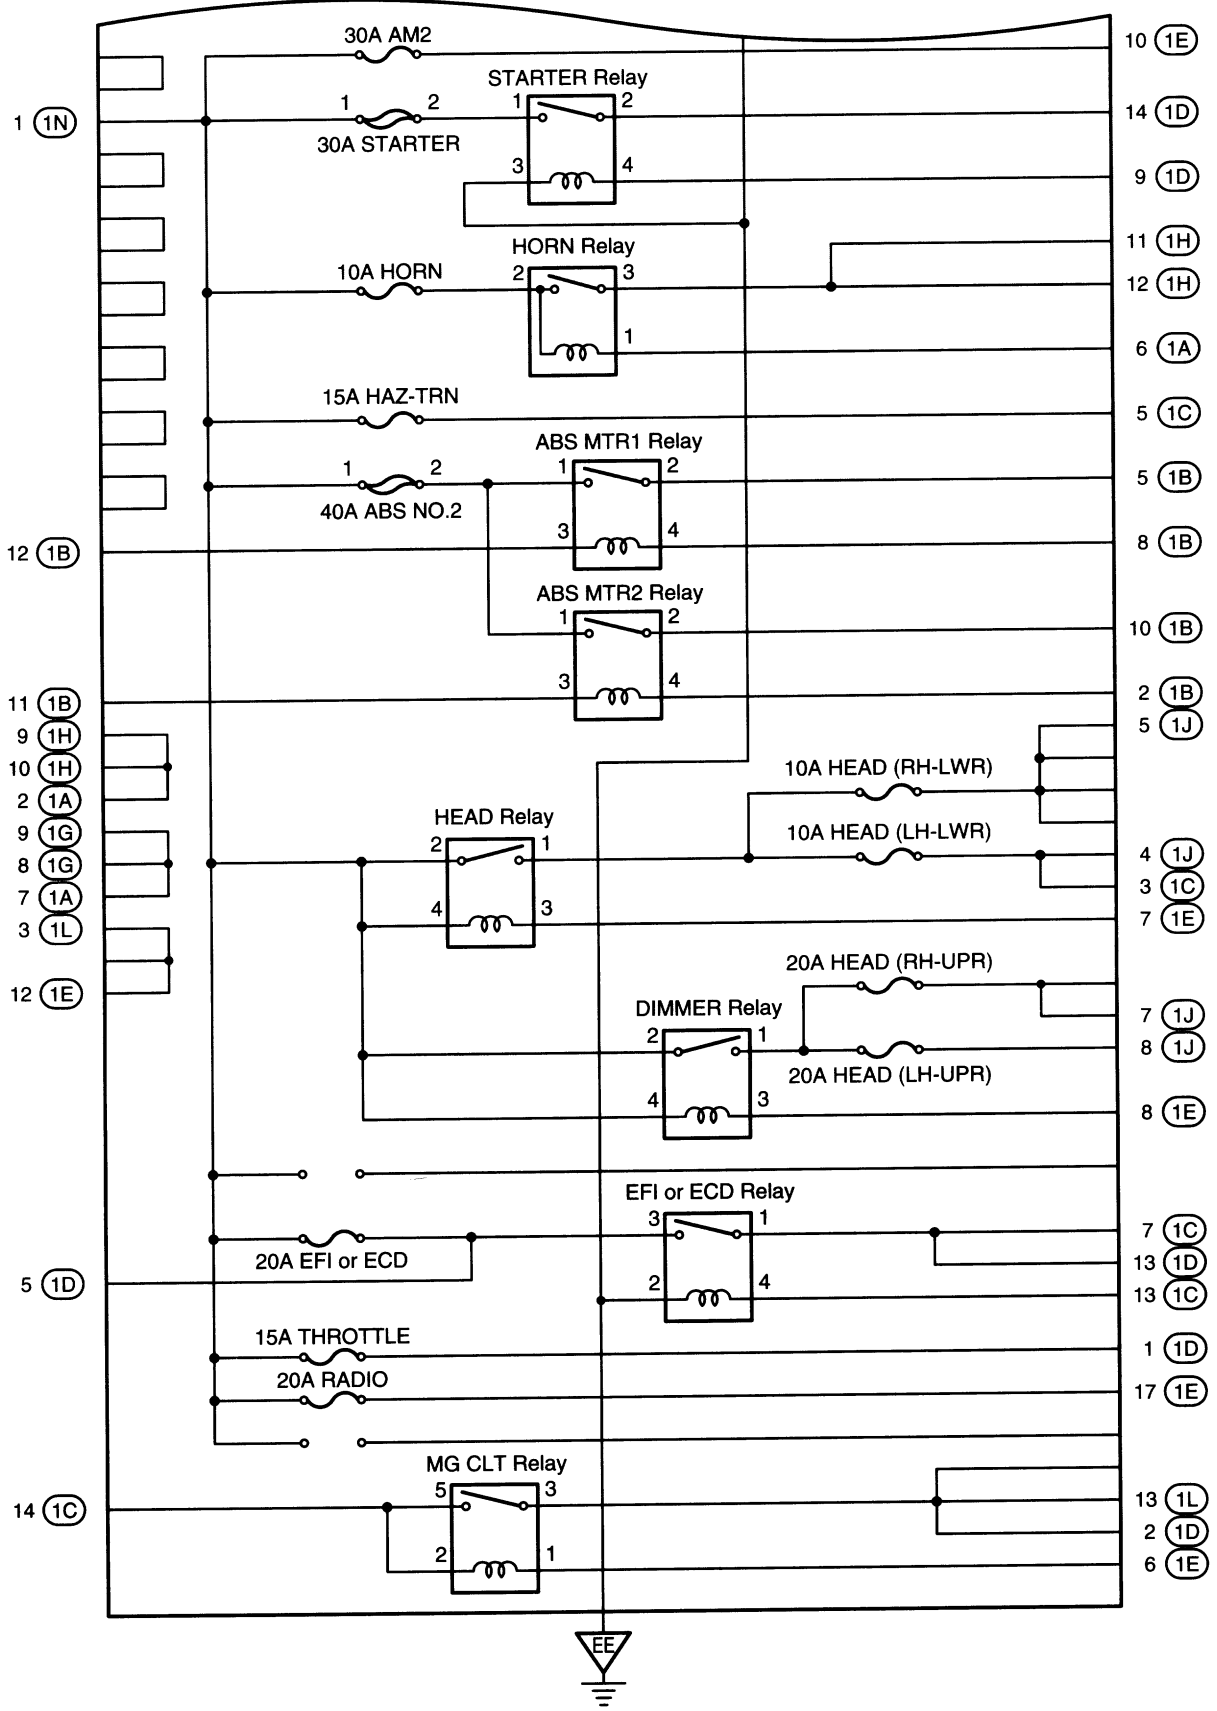


F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 18)

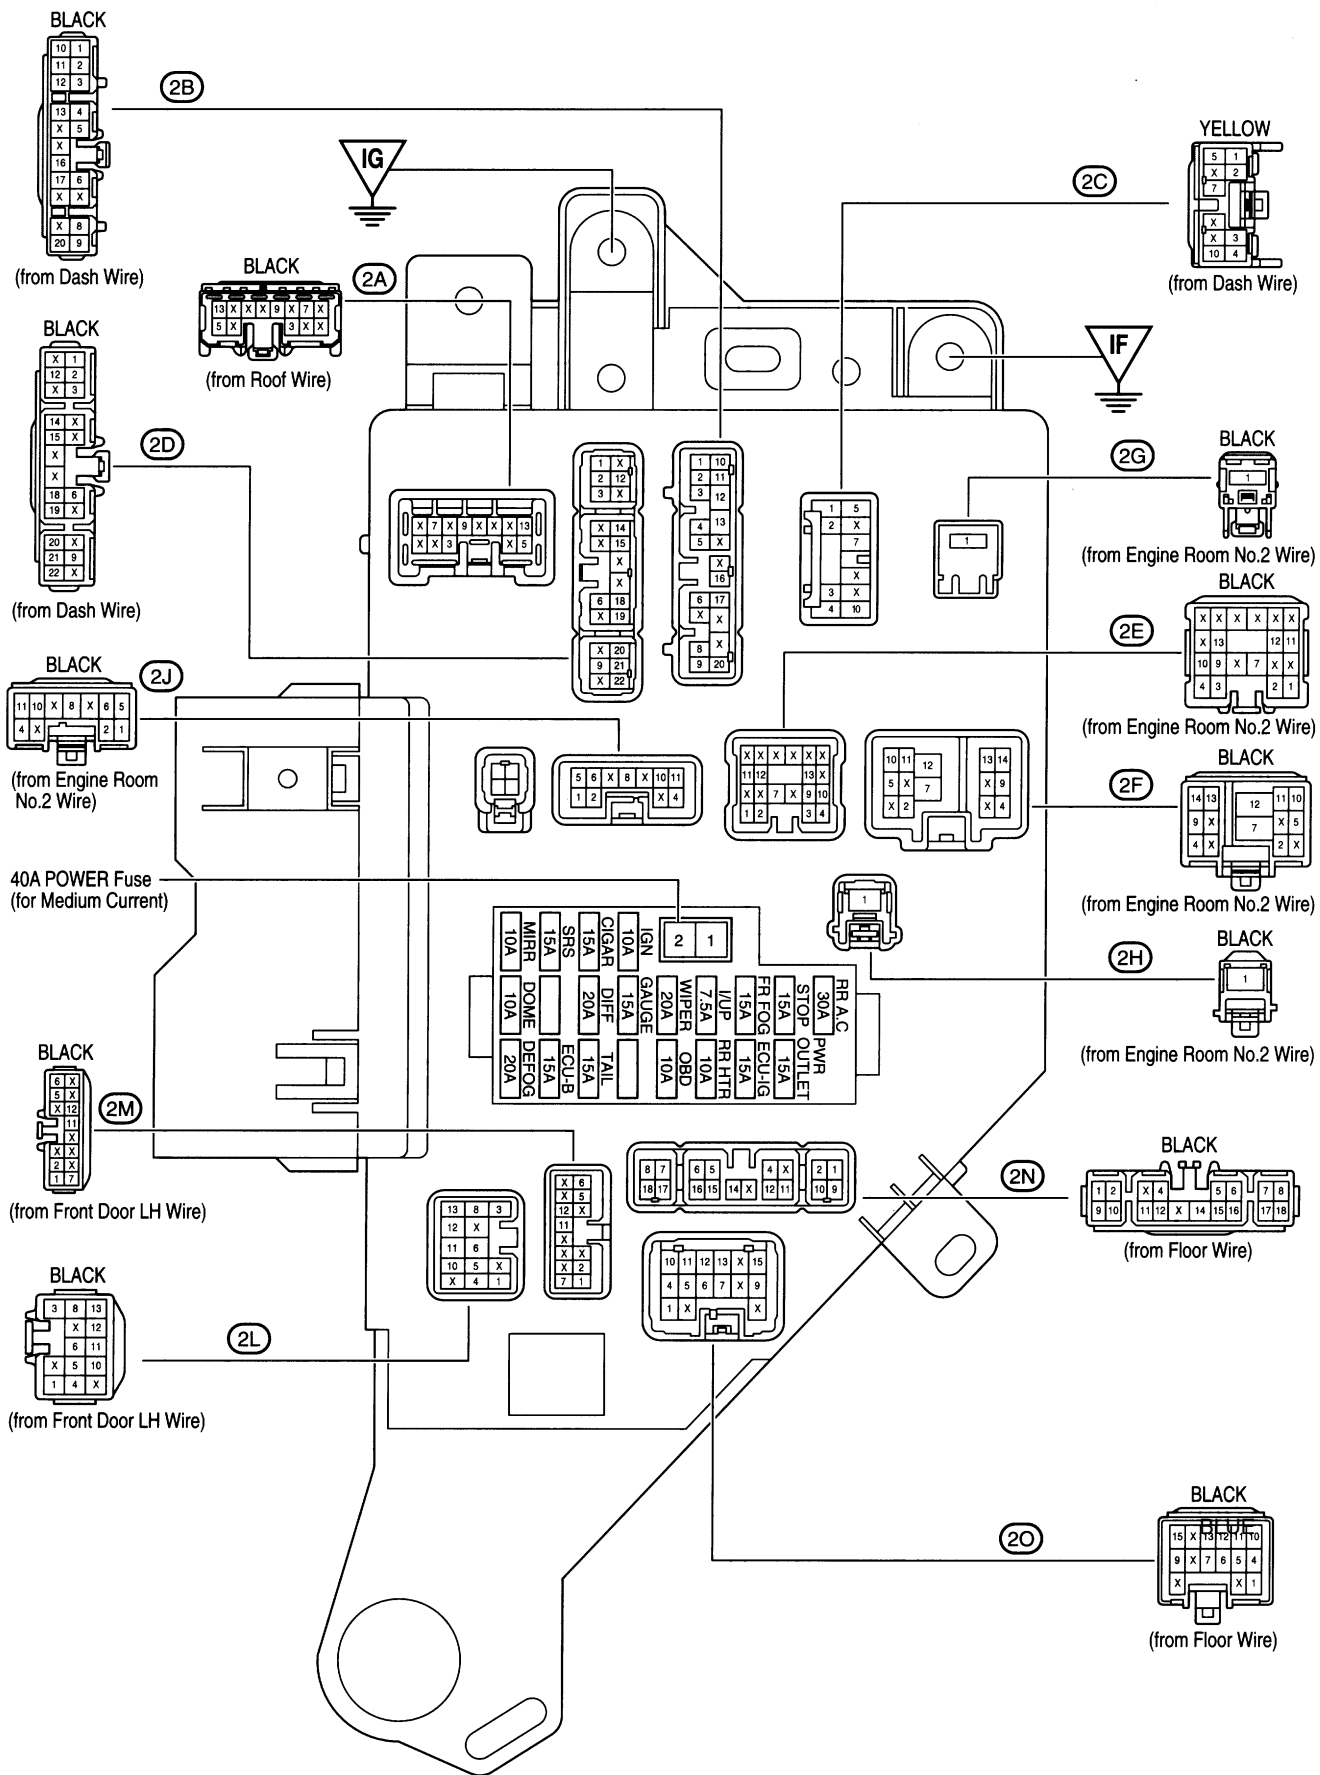


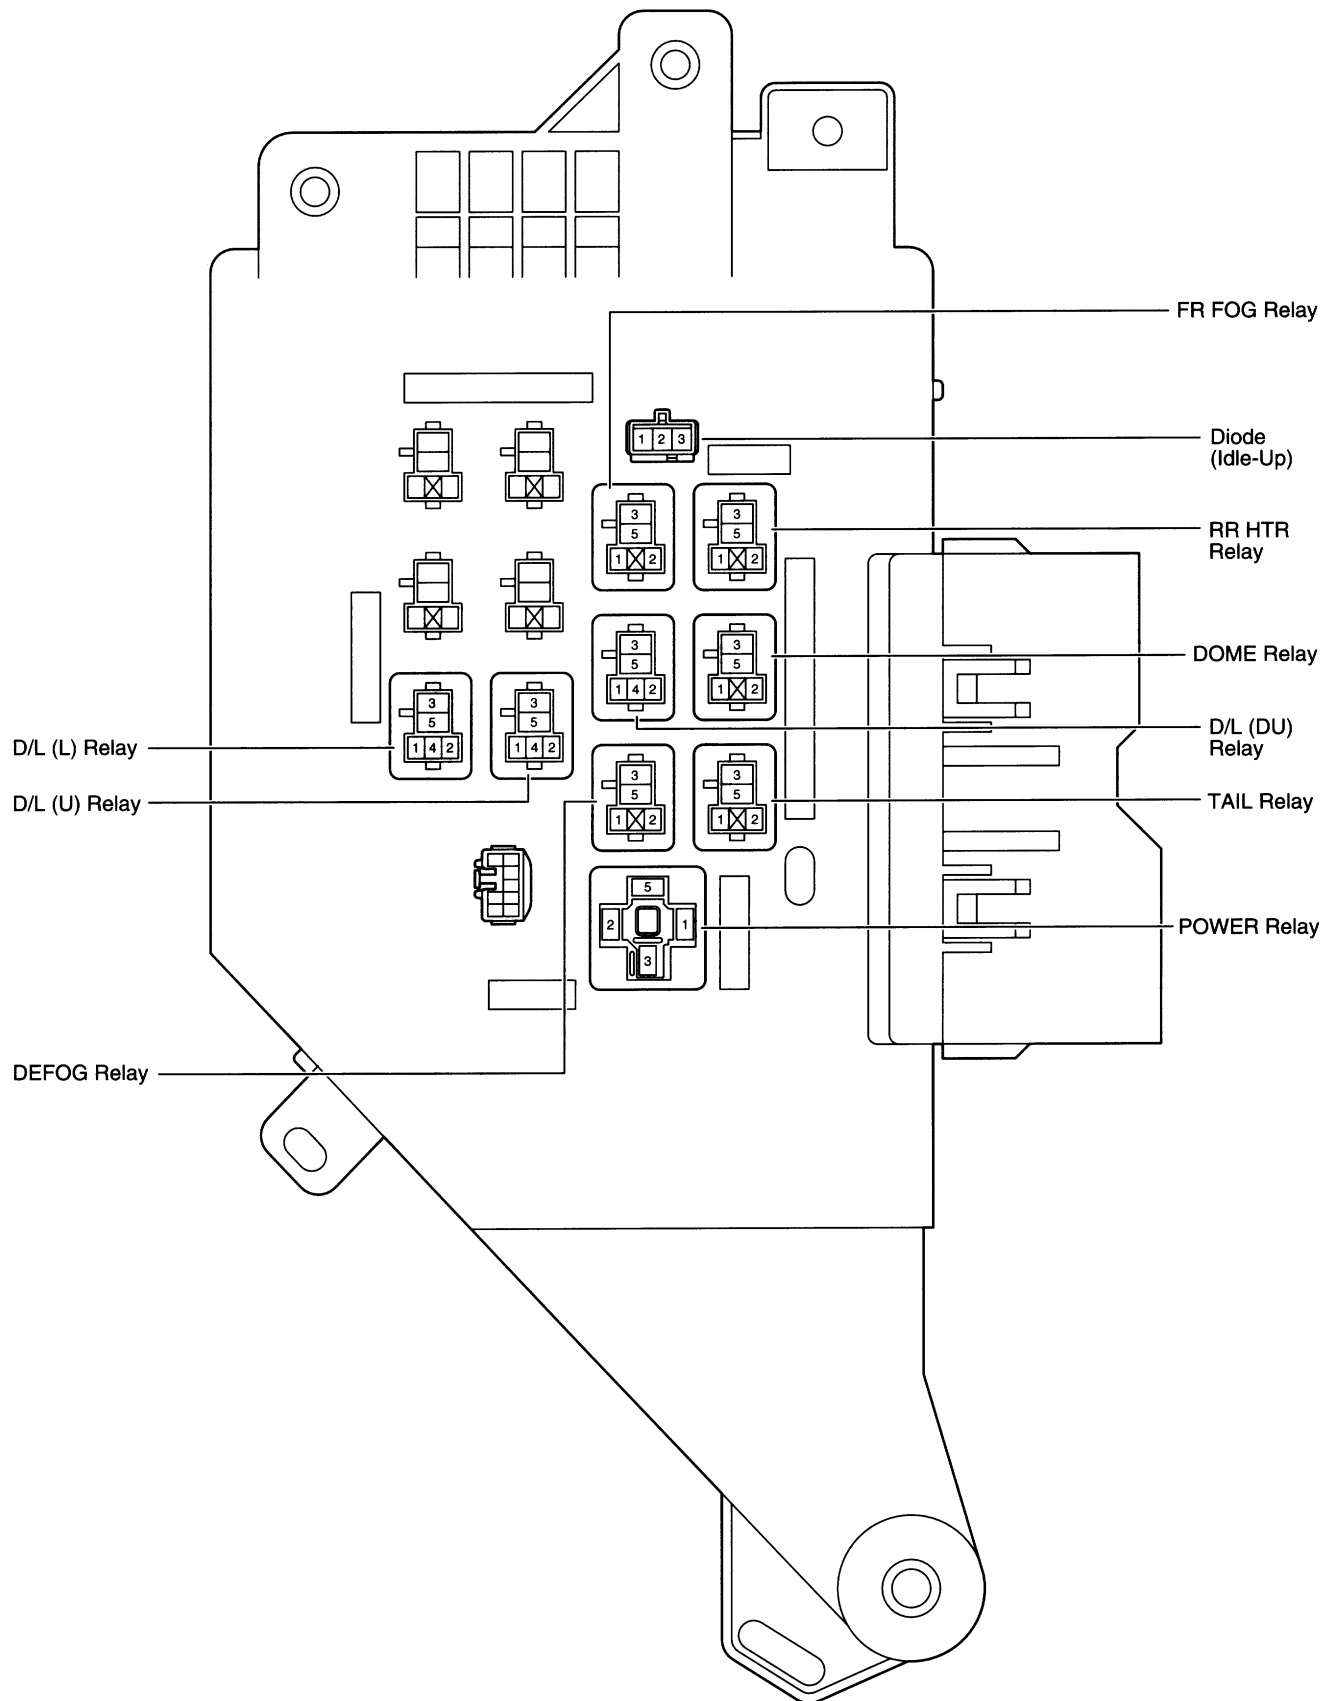


F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 18)

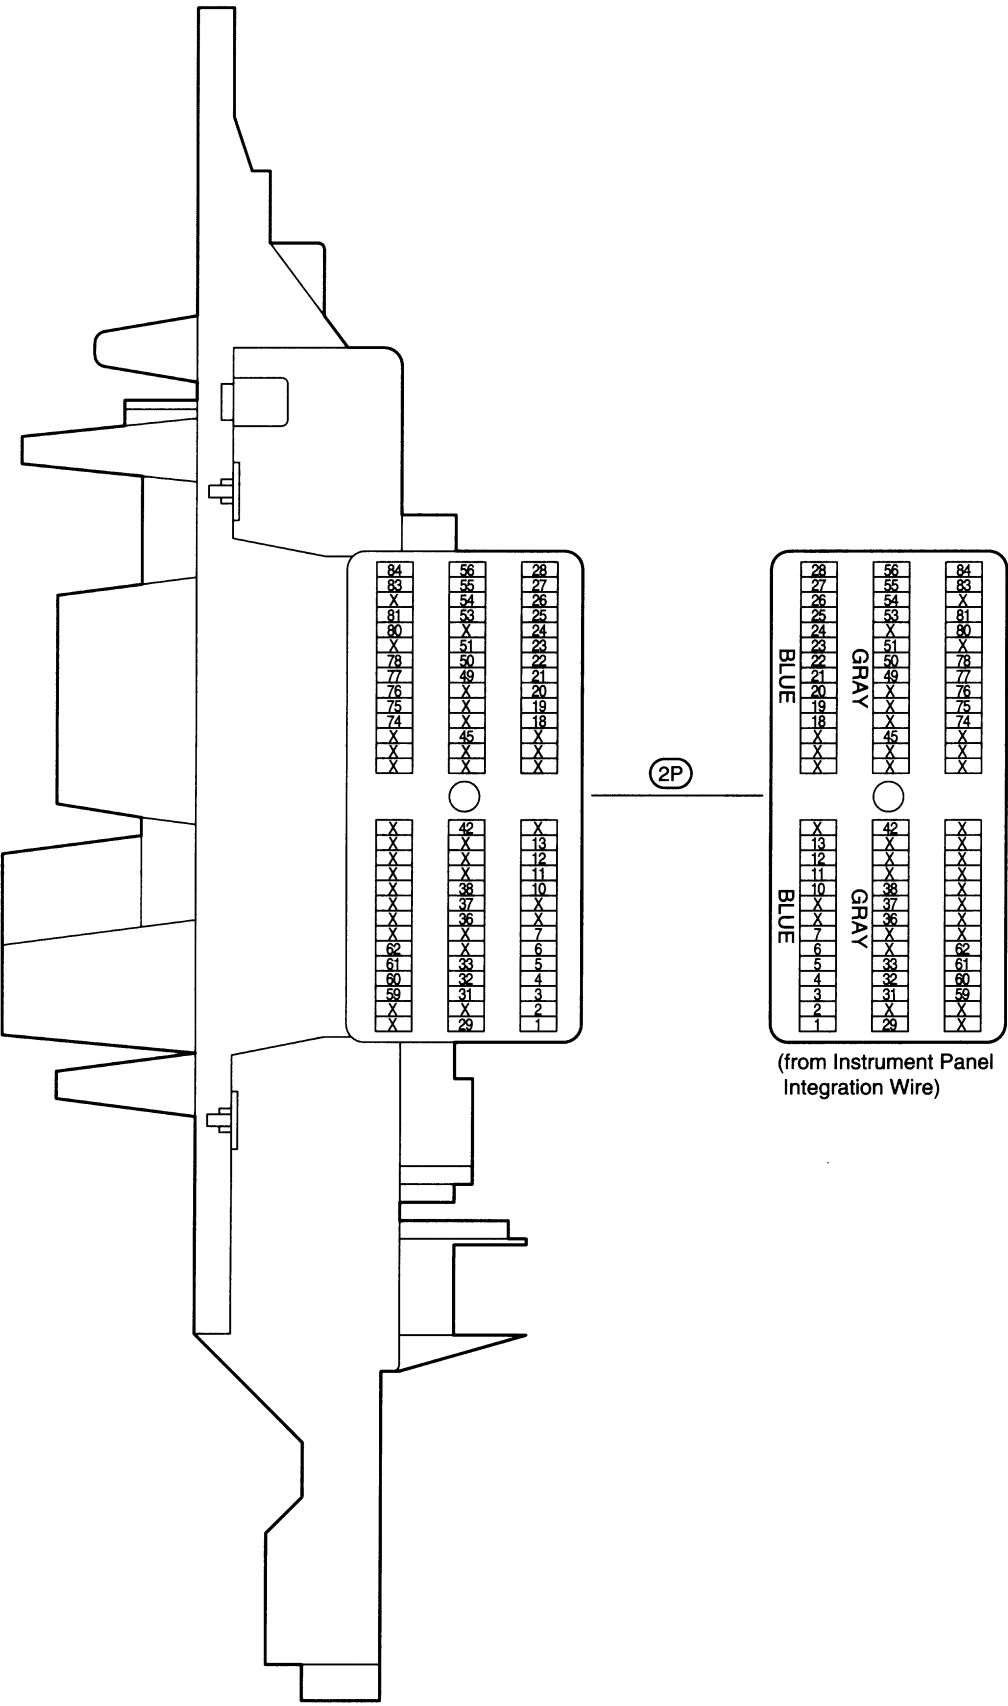


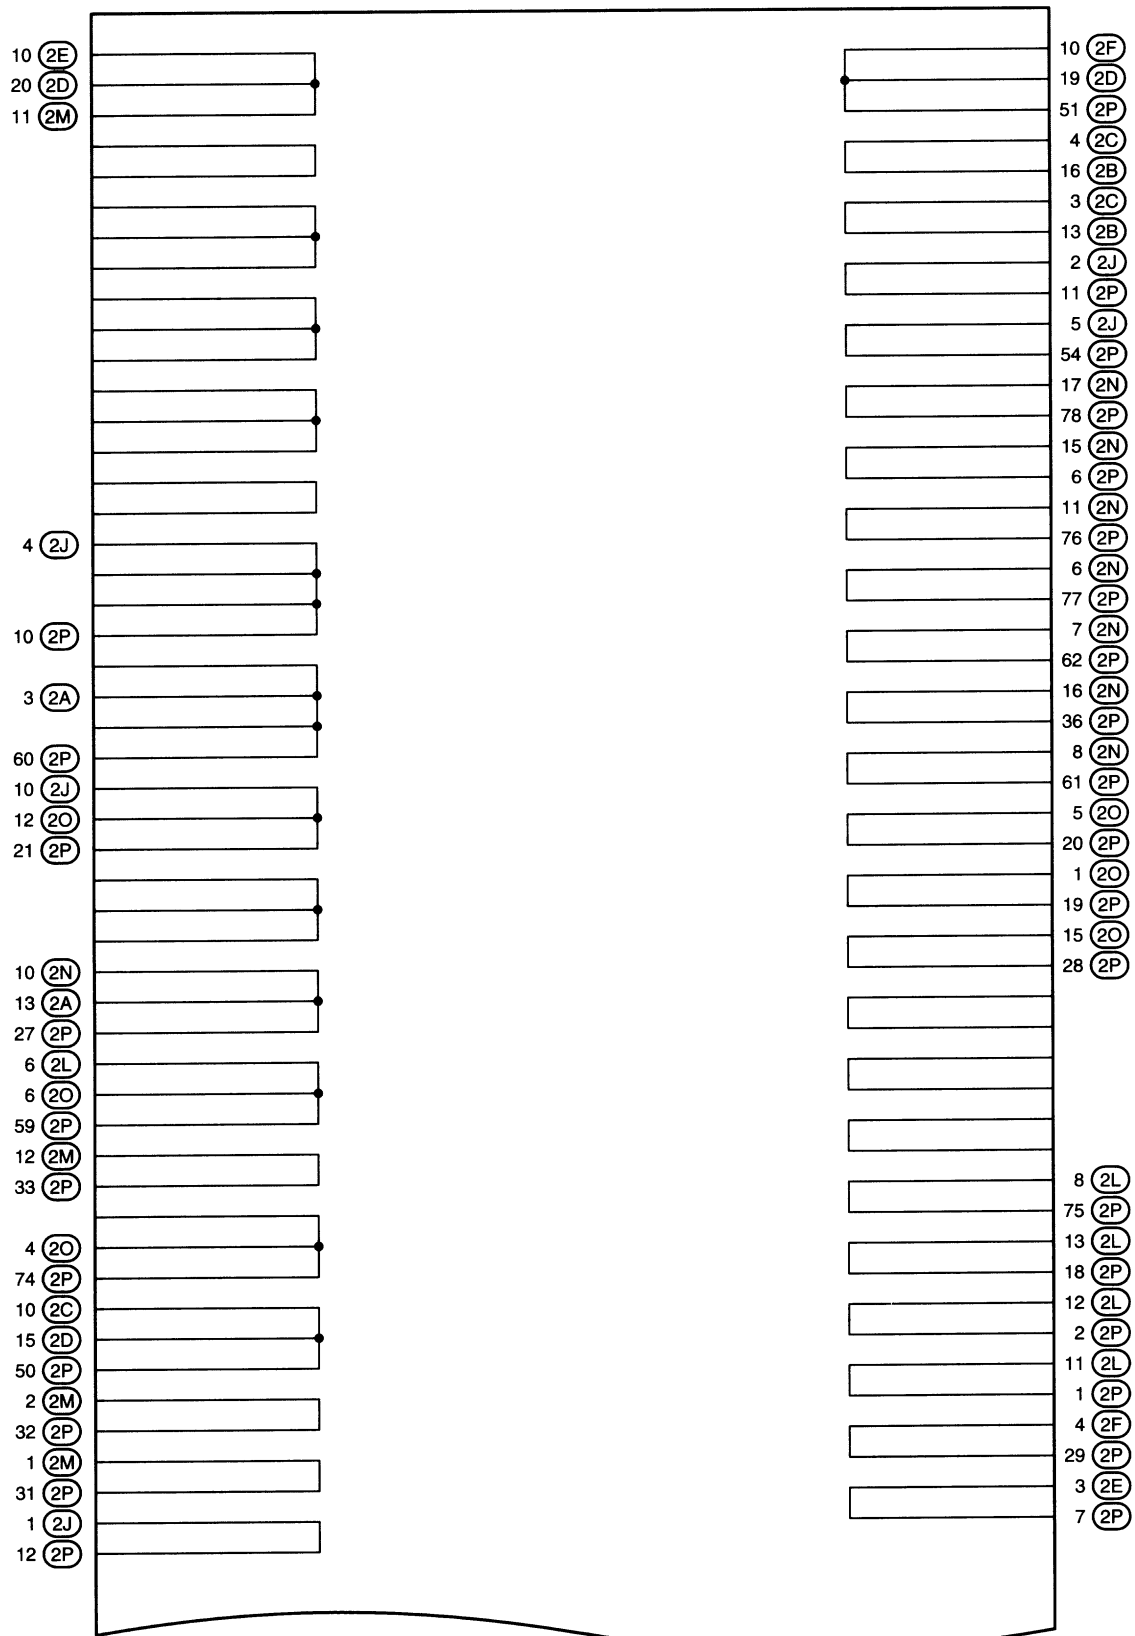[Cowl Side J/B LH Inner Circuit]

Cont. Next Page


F RELAY LOCATIONS

[Cowl Side J/B LH Inner Circuit]

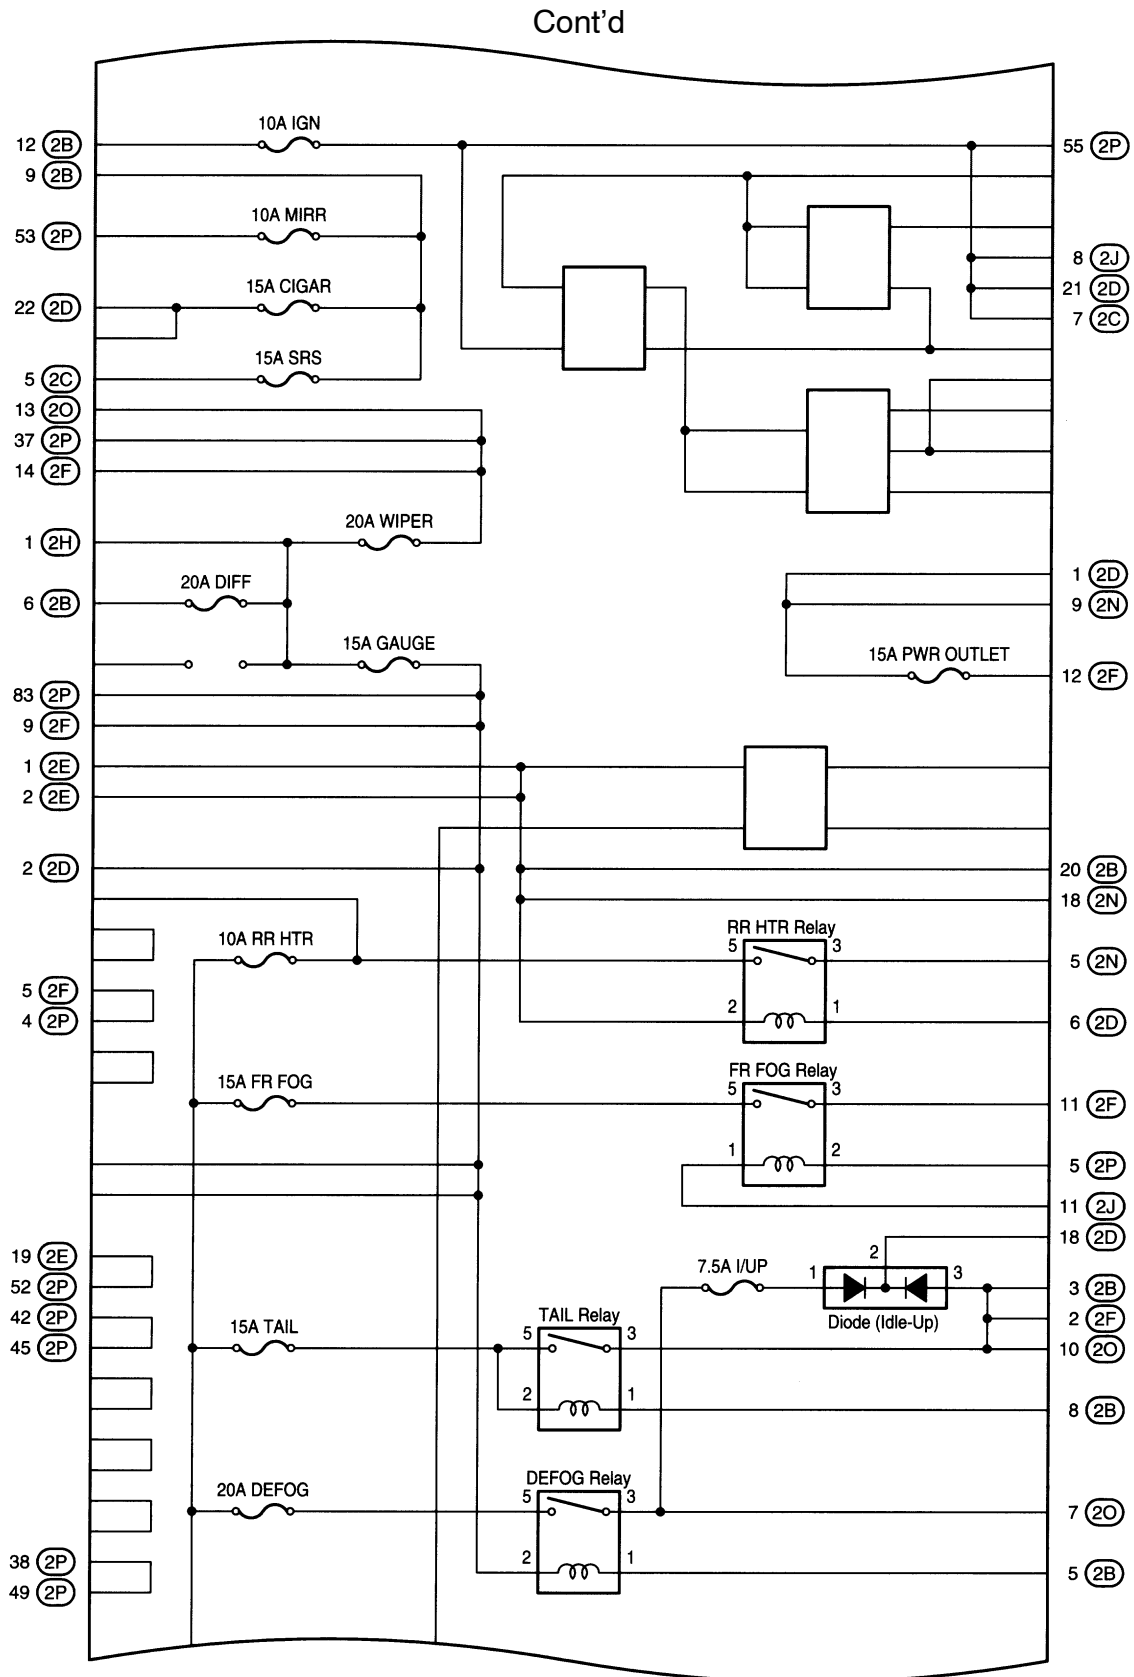

Cont. Next Page


Cont'd

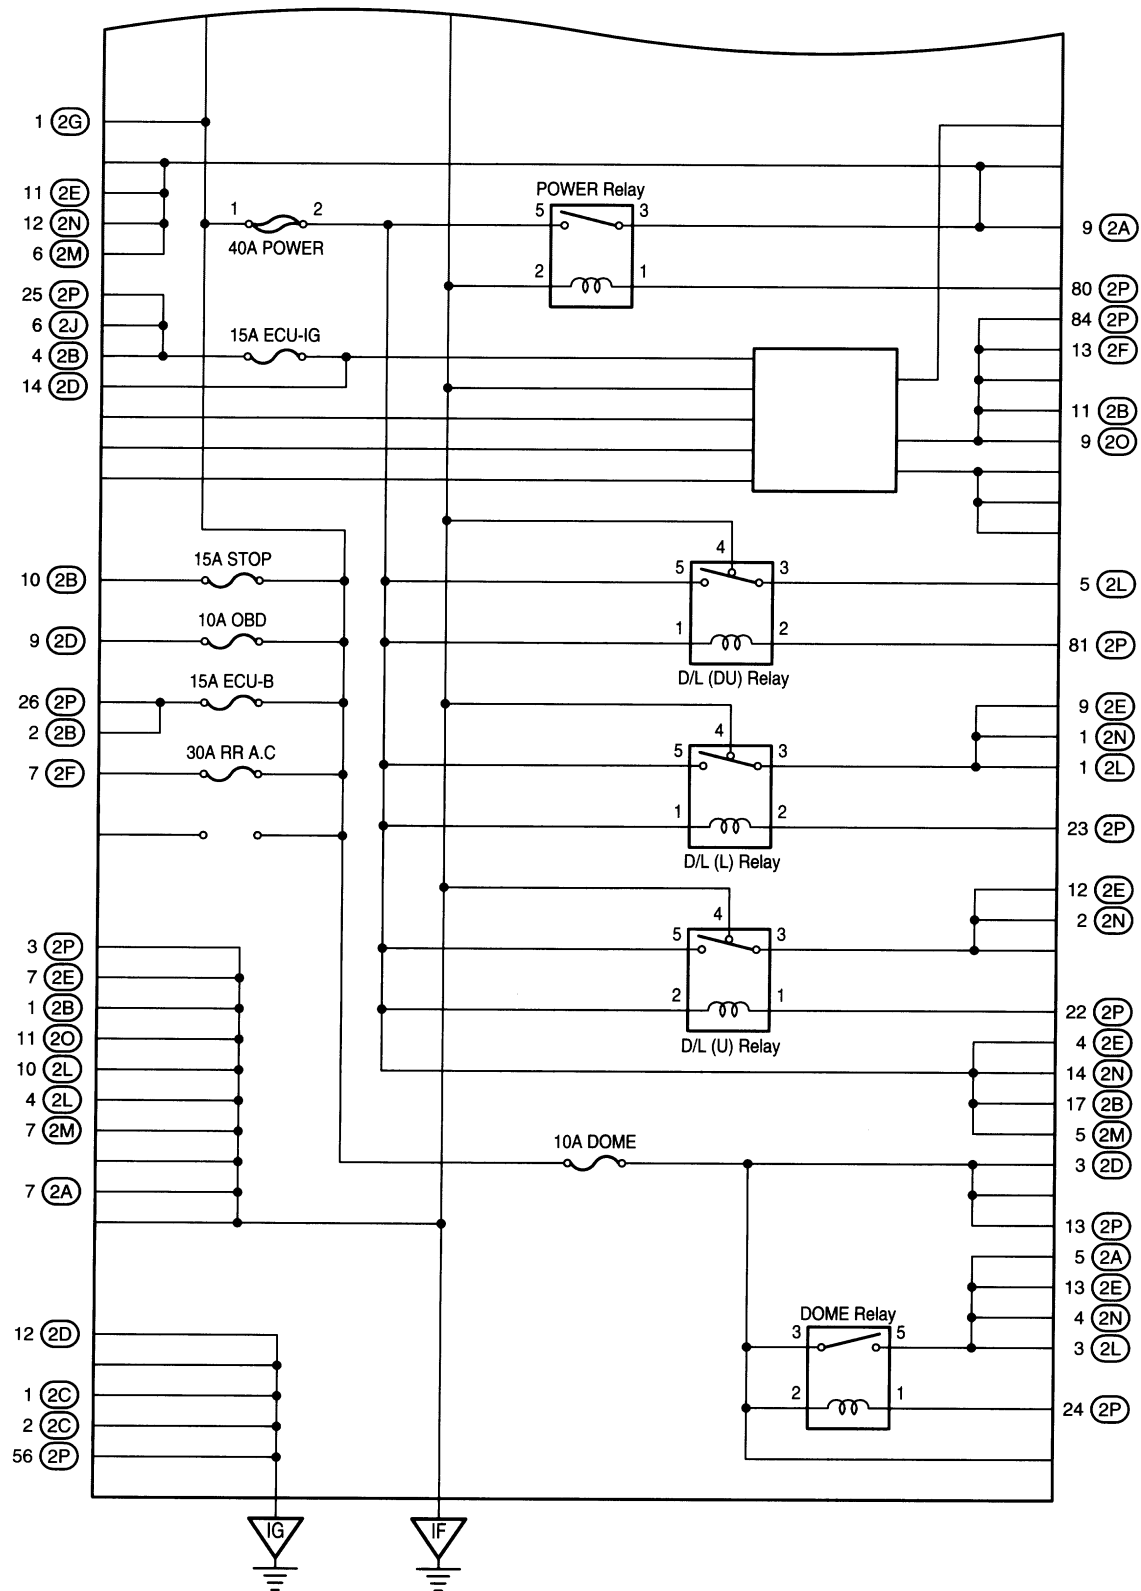


F RELAY LOCATIONS

 : Cowl Side J/B RH


Right Kick Panel (See Page 18)

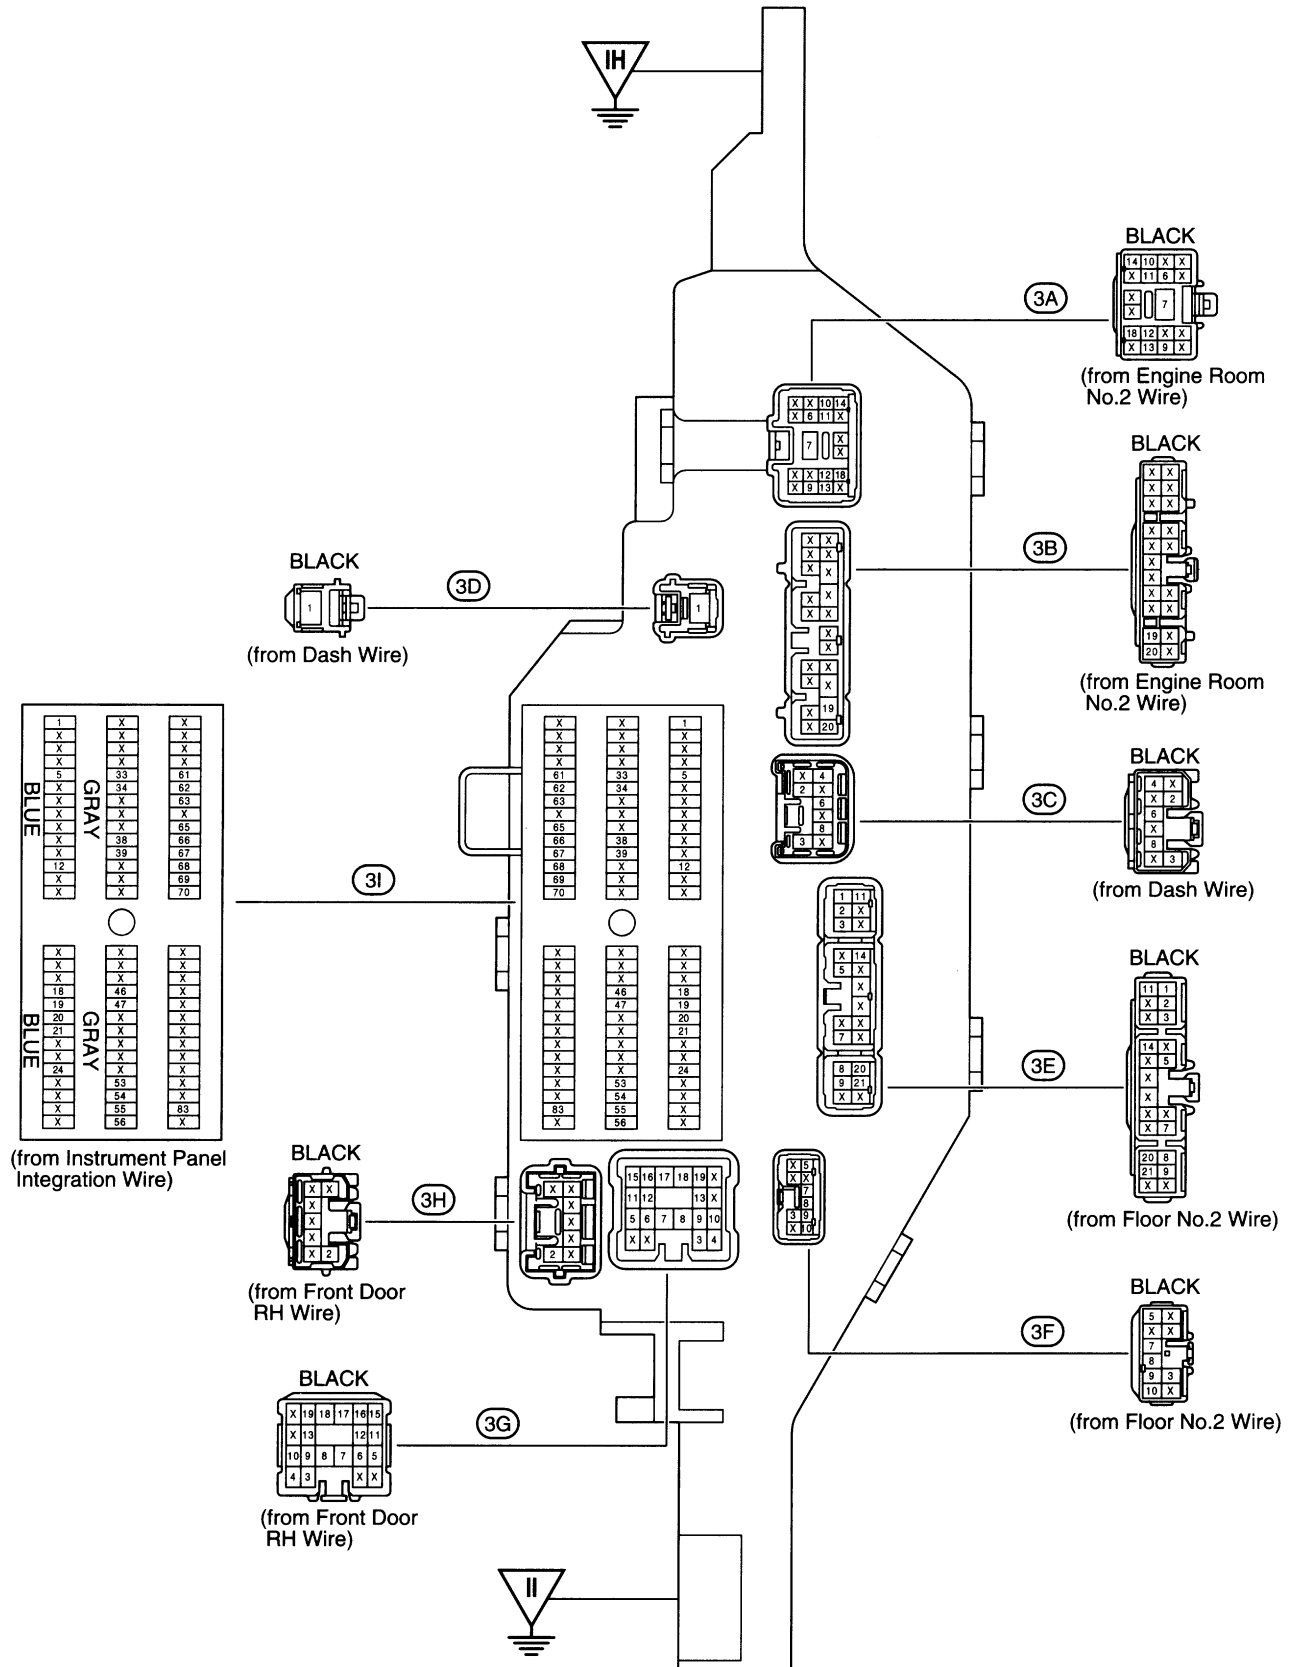

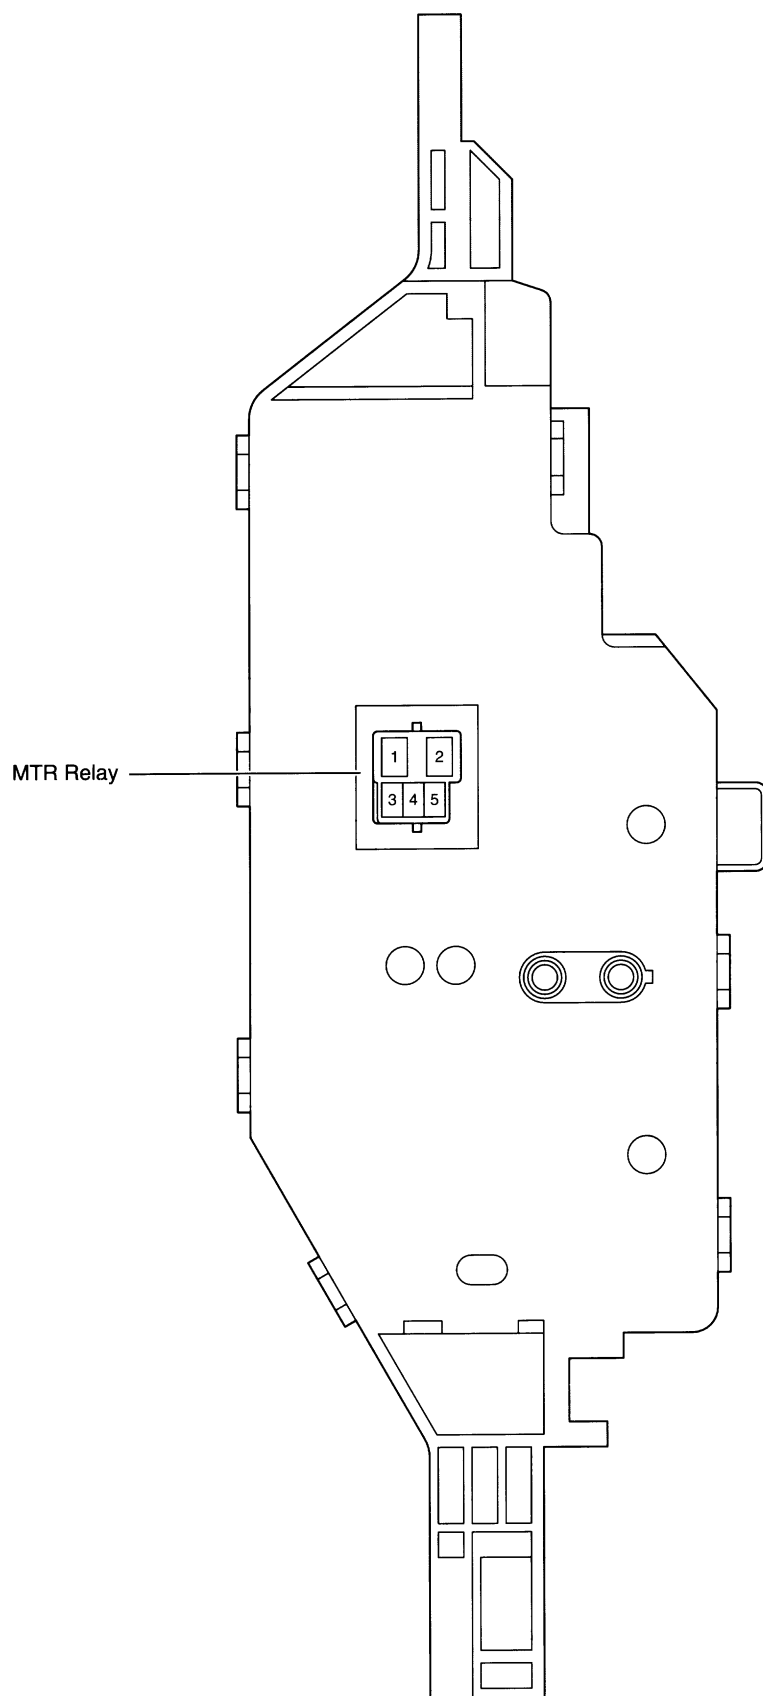


F RELAY LOCATIONS

[Cowl Side J/B RH Inner Circuit]

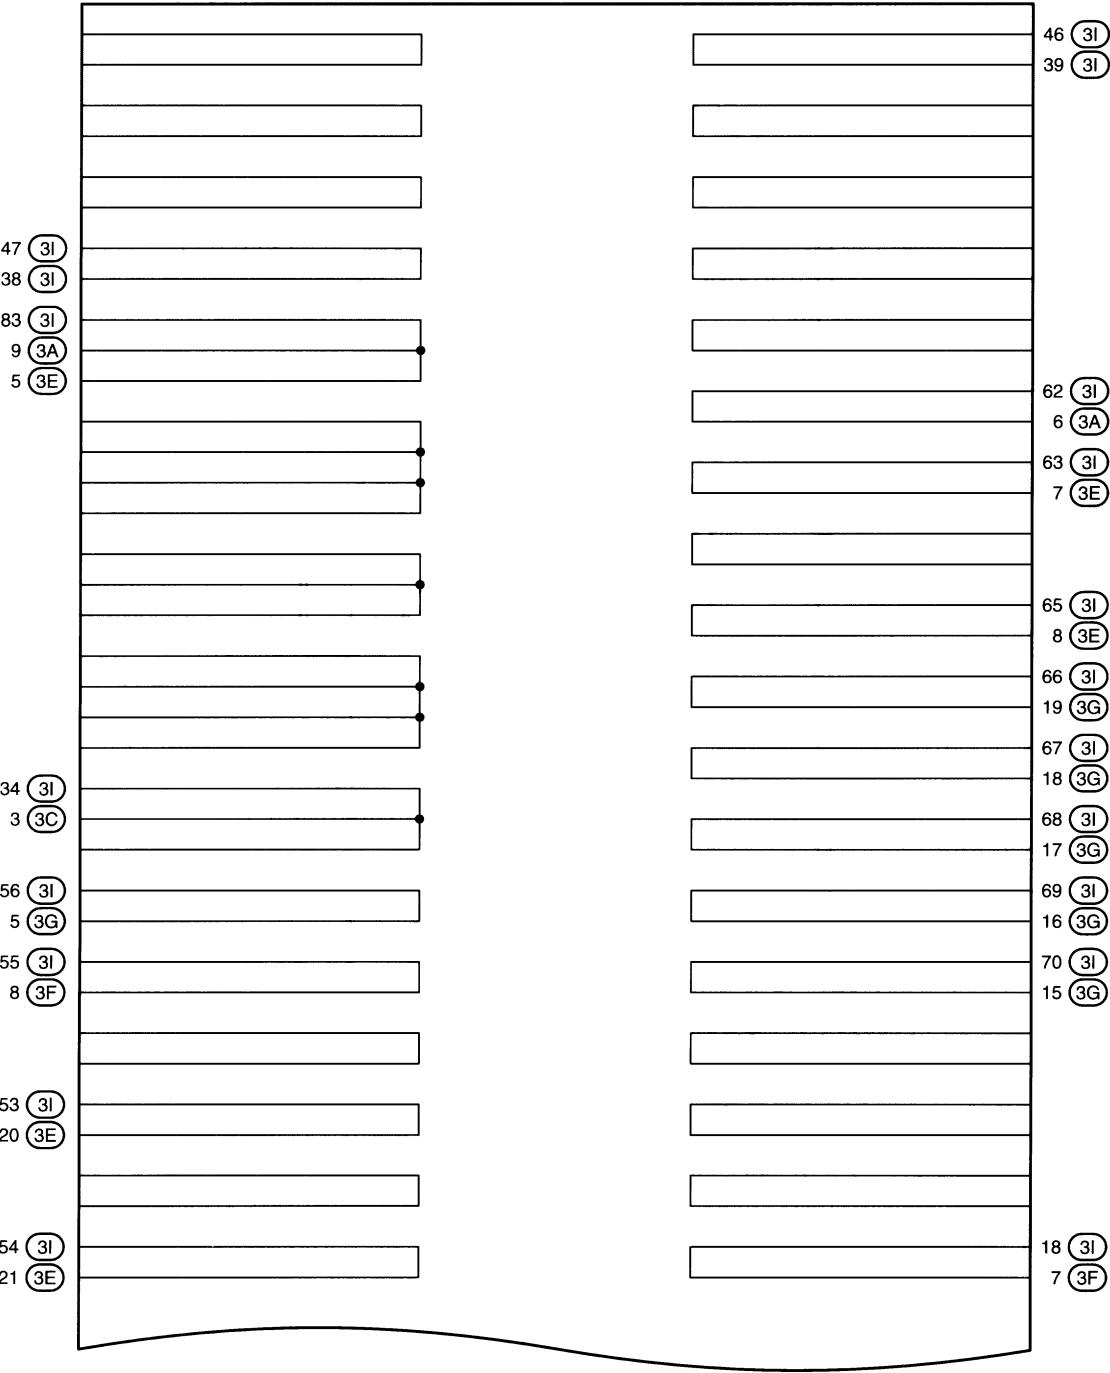

Cont. Next Page

Cont'd

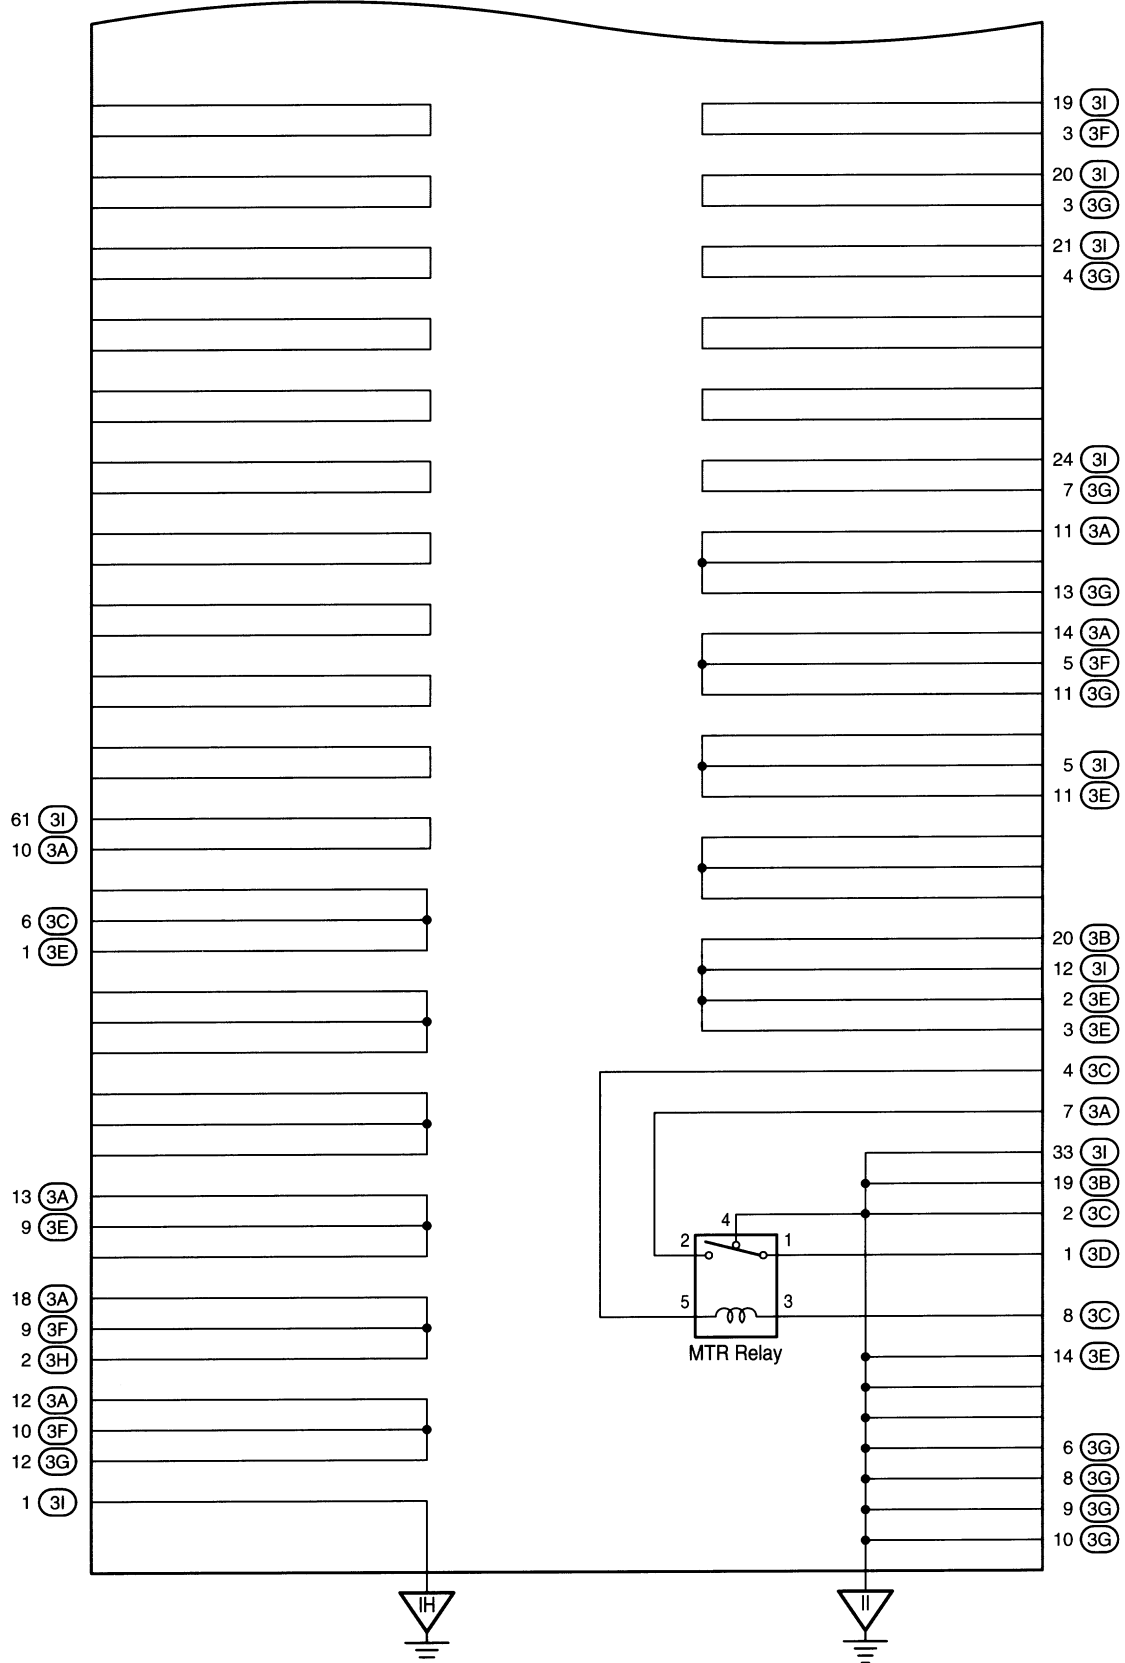

F RELAY LOCATIONS

Fusible Link Block

Near the Battery (See Page 18)

