


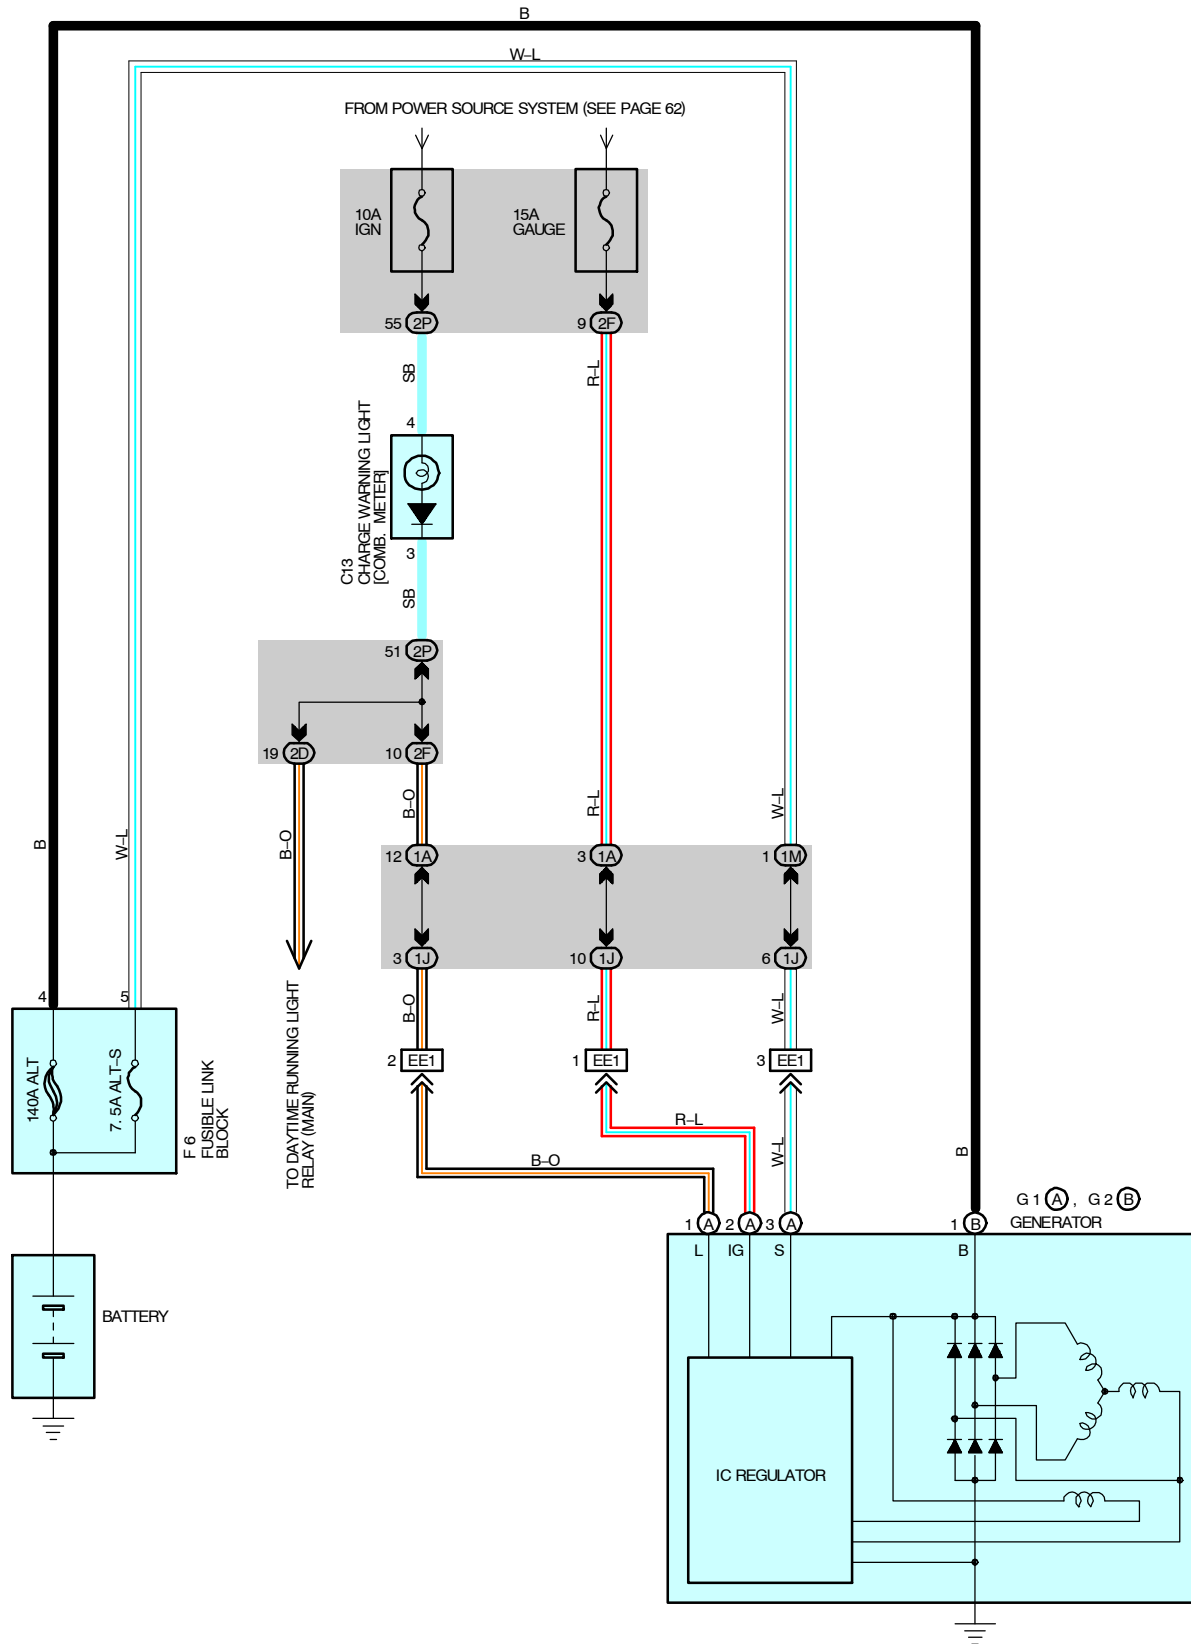

SERVICE HINTS

G1 GENERATOR

1-GROUND: **13.2–14.0** volts with engine running at **5000** rpm and **115°C (239°F)**

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C13	38	G1	A	36	
F6	36	G2	B	36	


○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1J	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1M	21	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)
2D	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2F	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	44	Engine Room Main Wire and Alternator Wire (Near the Battery)


C13

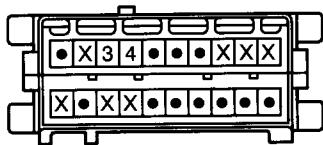

F6

(See Page 34)

G1 (A)
BLACK

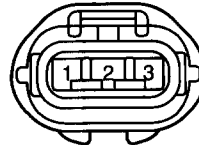

G2 (B)

