




# ILLUMINATION

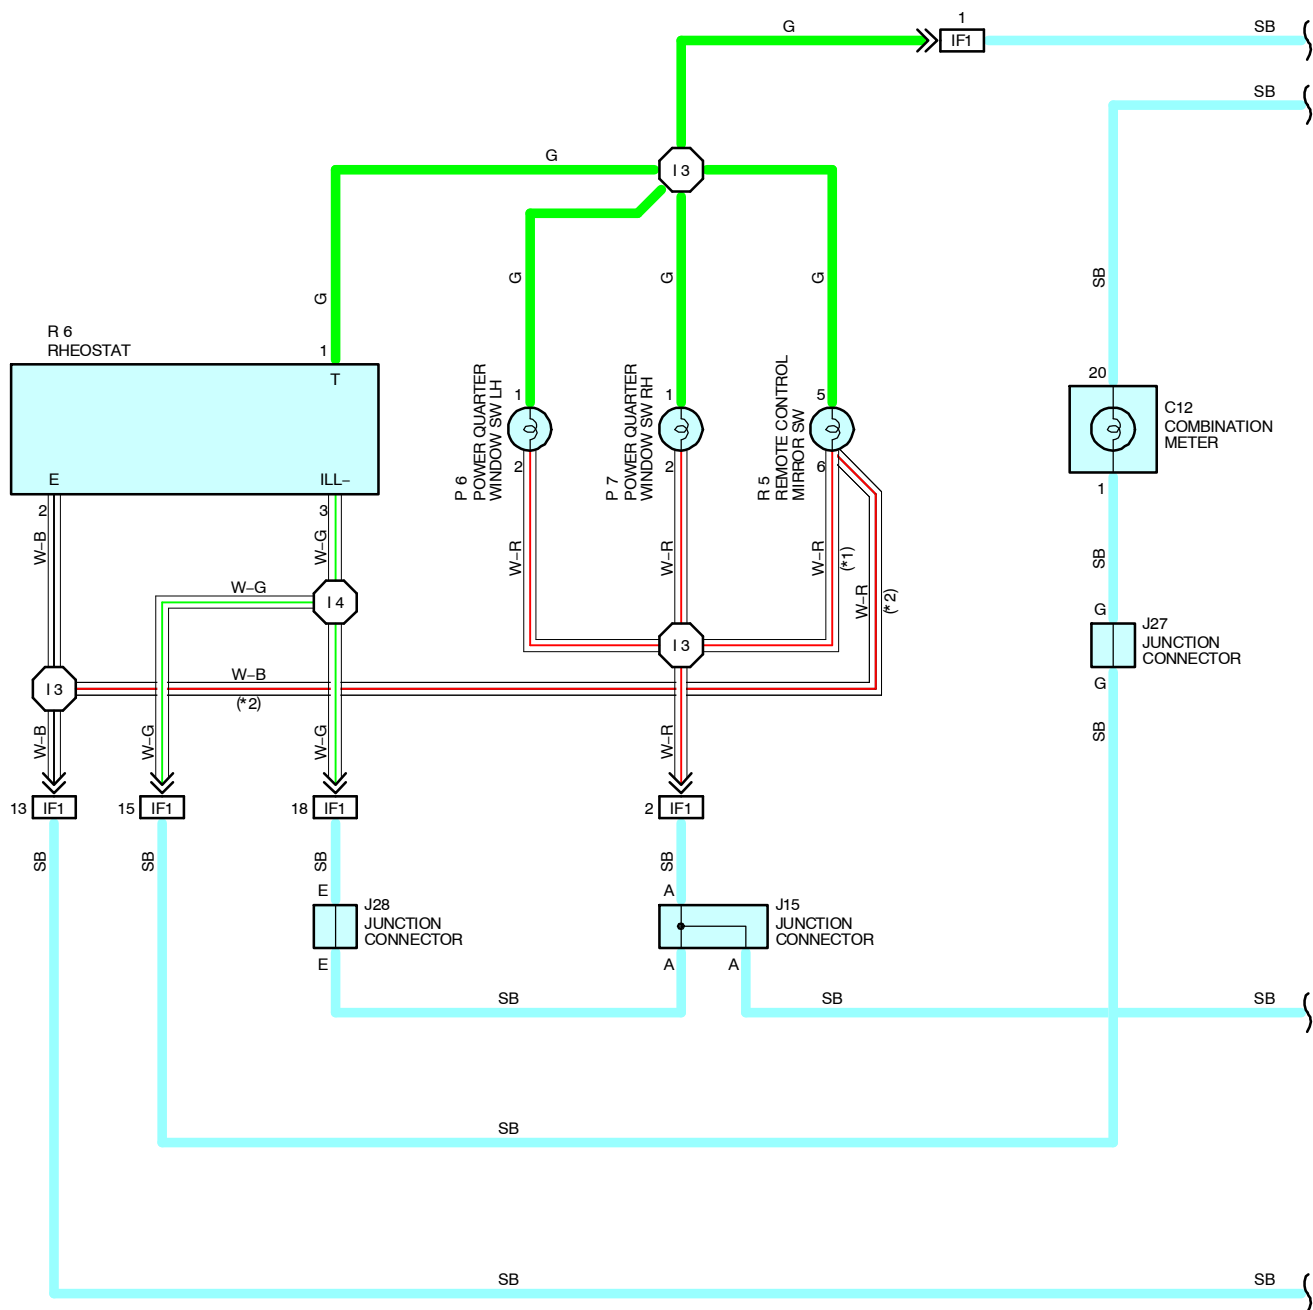

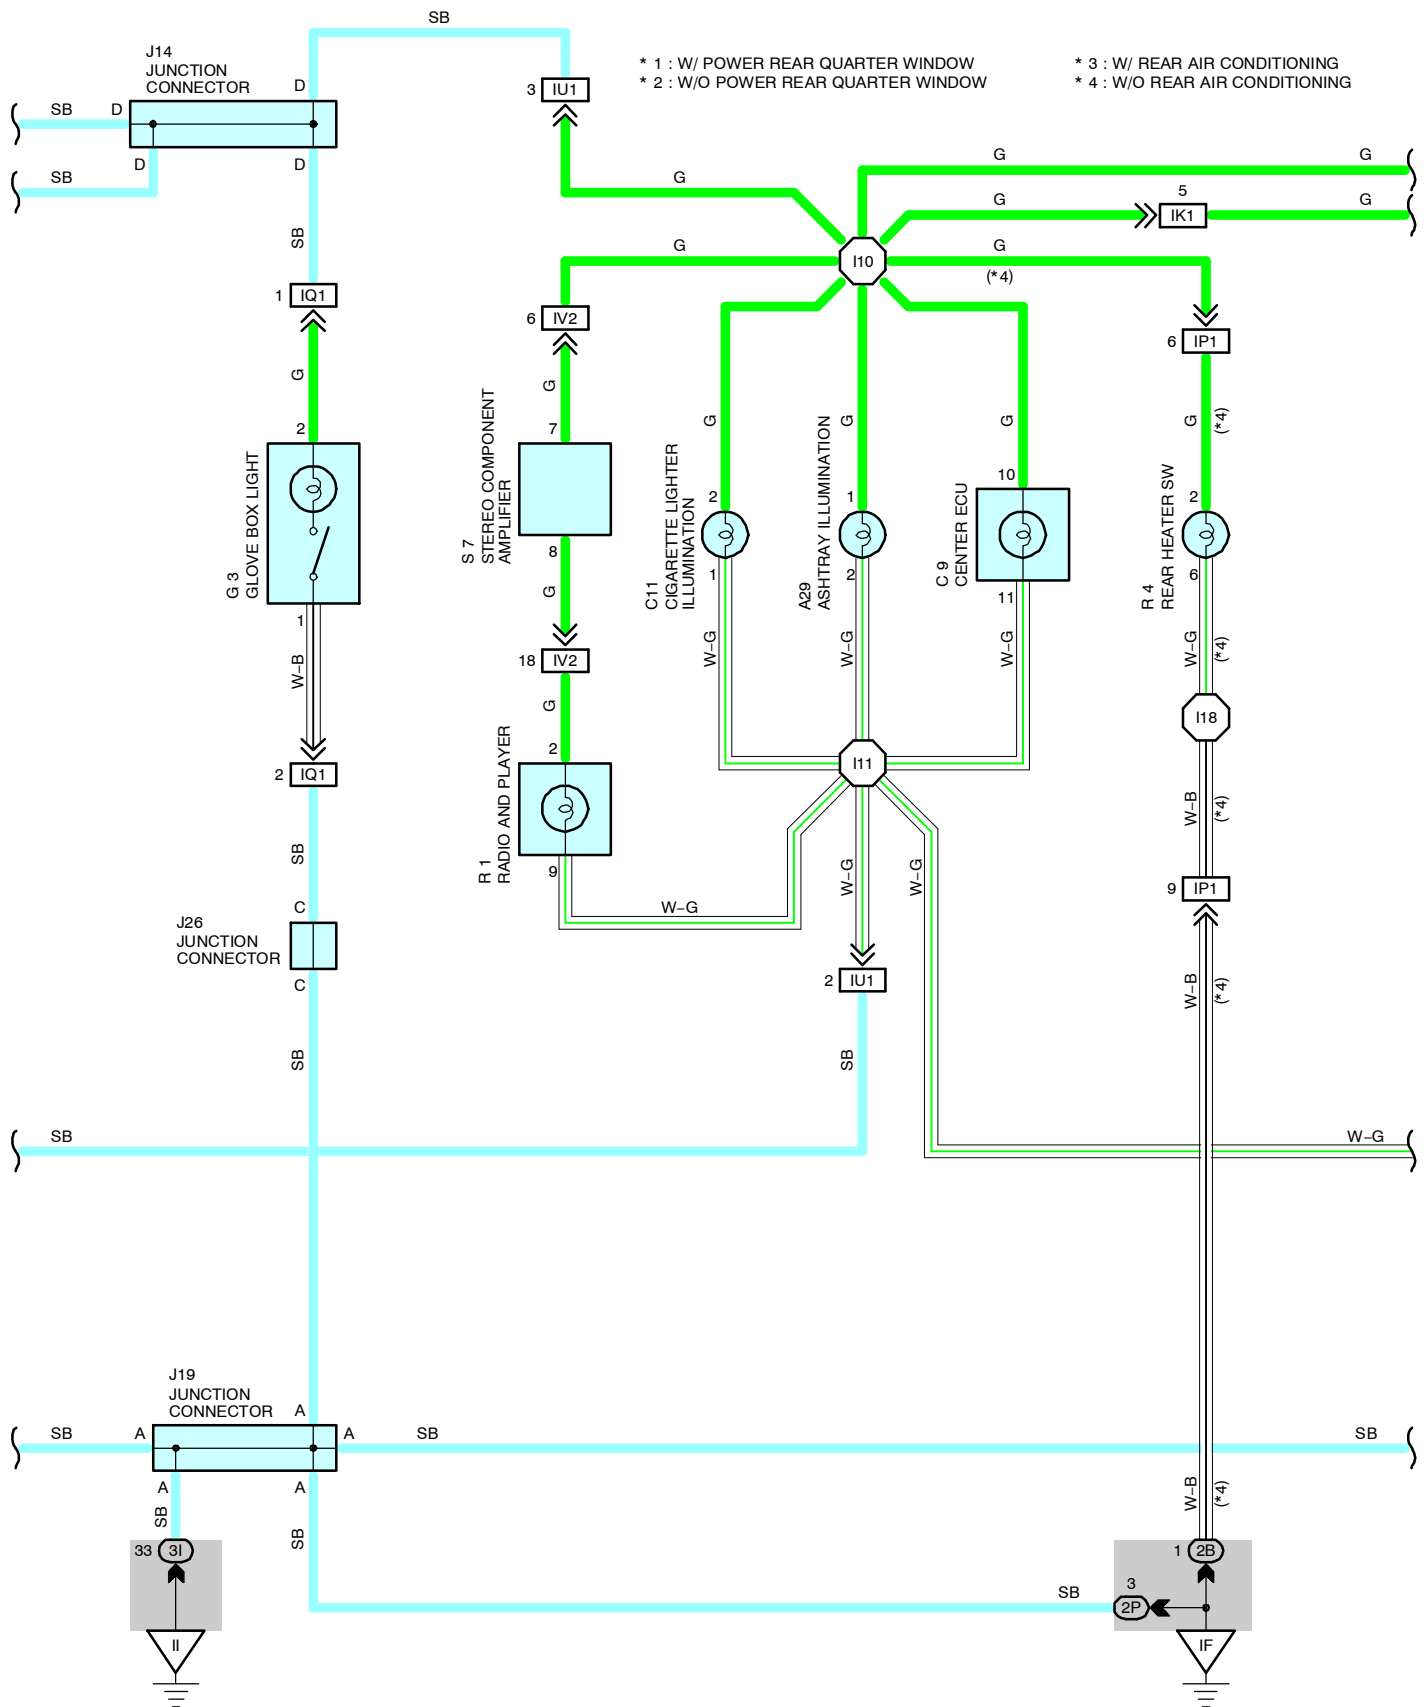

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

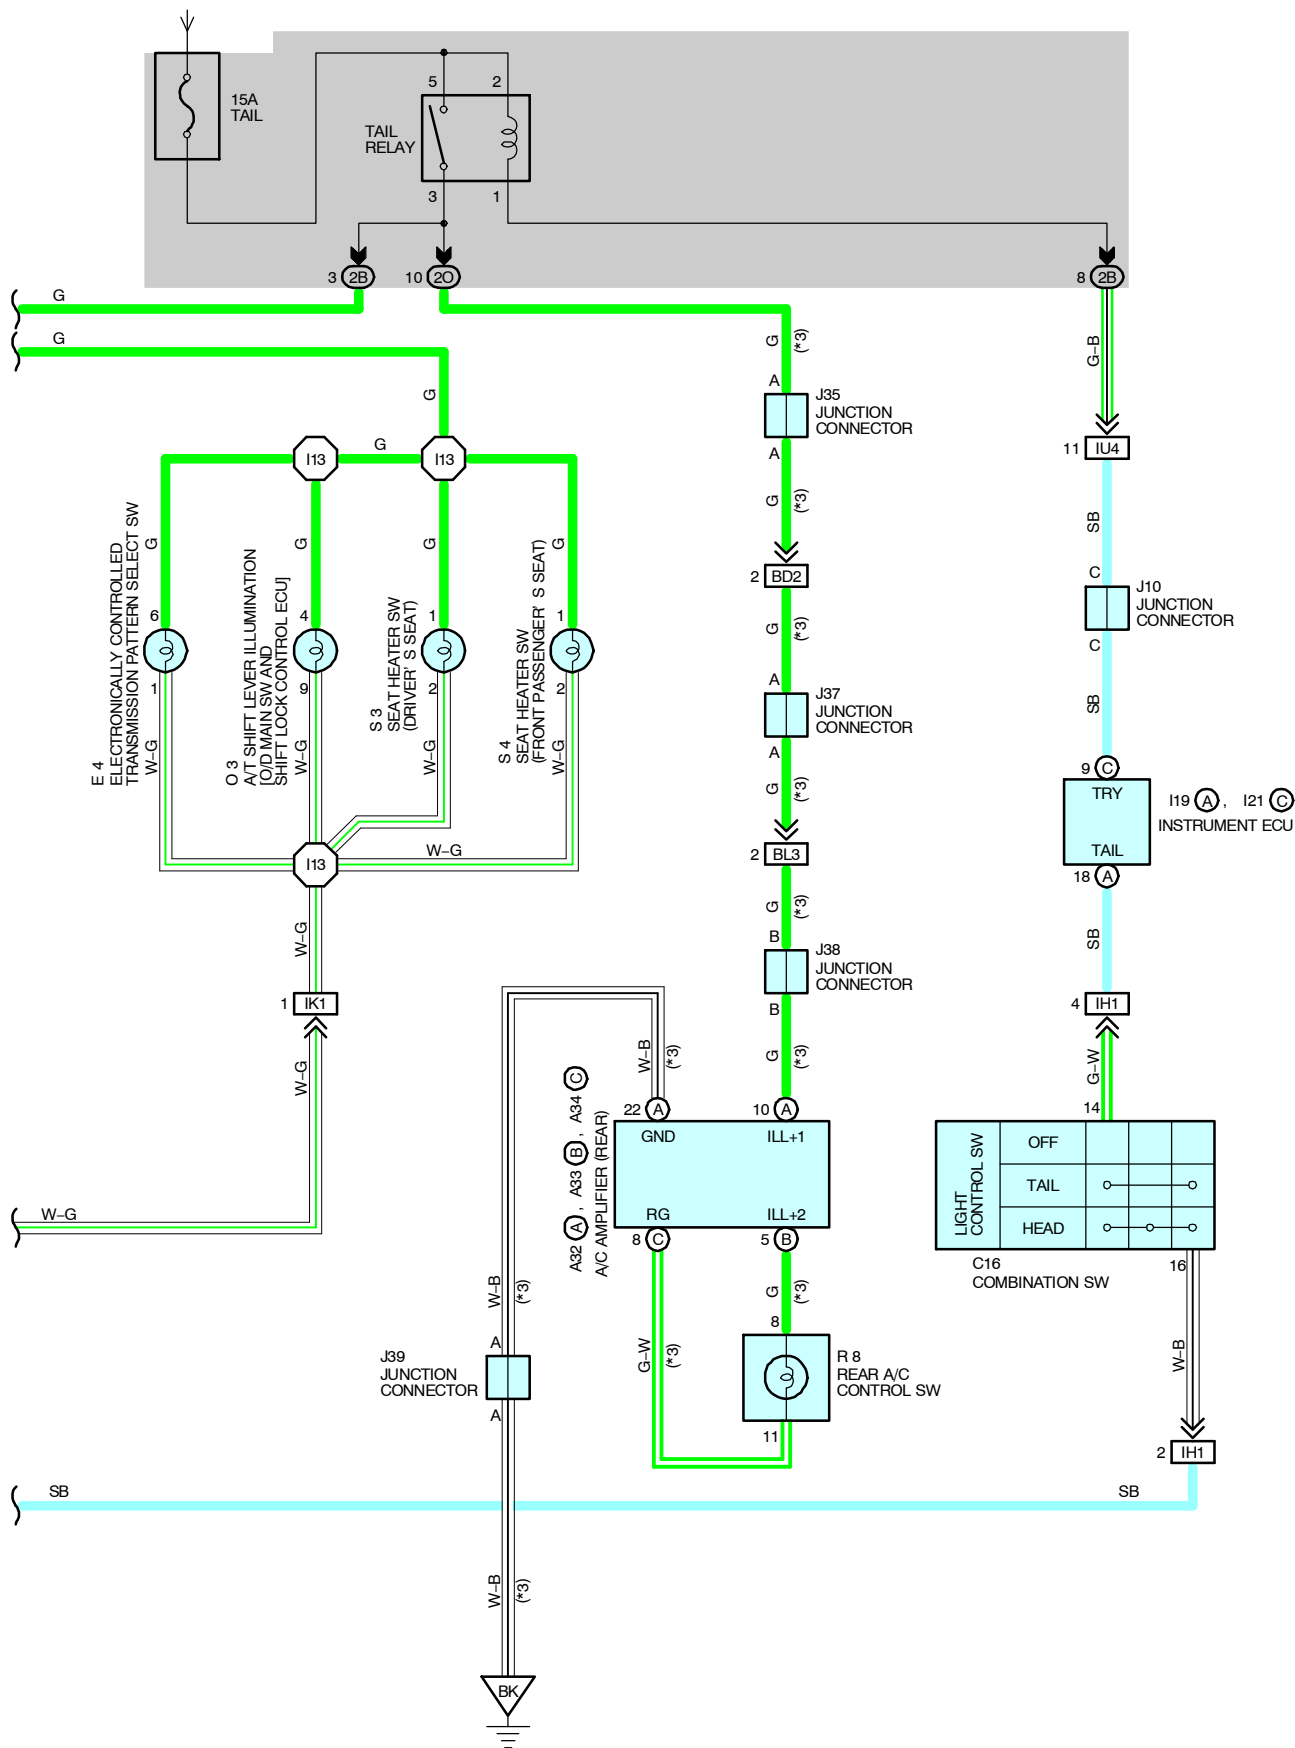

---

**SERVICE HINTS****TAIL RELAY**5-3 : Closed with light control SW at **TAIL** or **HEAD** position**C16 COMBINATION SW**14-16 : Closed with light control SW at **TAIL** or **HEAD** position**: PARTS LOCATION**

| Code | See Page             | Code | See Page           | Code | See Page           |
|------|----------------------|------|--------------------|------|--------------------|
| A29  | <a href="#">38</a>   | J10  | <a href="#">39</a> | P6   | <a href="#">39</a> |
| A32  | A <a href="#">40</a> | J14  | <a href="#">39</a> | P7   | <a href="#">39</a> |
| A33  | B <a href="#">40</a> | J15  | <a href="#">39</a> | R1   | <a href="#">39</a> |
| A34  | C <a href="#">40</a> | J19  | <a href="#">39</a> | R4   | <a href="#">39</a> |
| C9   | <a href="#">38</a>   | J26  | <a href="#">39</a> | R5   | <a href="#">39</a> |
| C11  | <a href="#">38</a>   | J27  | <a href="#">39</a> | R6   | <a href="#">39</a> |
| C12  | <a href="#">38</a>   | J28  | <a href="#">39</a> | R8   | <a href="#">41</a> |
| C16  | <a href="#">38</a>   | J35  | <a href="#">40</a> | S3   | <a href="#">39</a> |
| E4   | <a href="#">38</a>   | J37  | <a href="#">40</a> | S4   | <a href="#">39</a> |
| G3   | <a href="#">38</a>   | J38  | <a href="#">40</a> | S7   | <a href="#">41</a> |
| I19  | A <a href="#">38</a> | J39  | <a href="#">40</a> |      |                    |
| I21  | C <a href="#">38</a> | O3   | <a href="#">39</a> |      |                    |

**: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

| Code | See Page           | Junction Block and Wire Harness (Connector Location)                      |
|------|--------------------|---------------------------------------------------------------------------|
| 2B   | <a href="#">24</a> | Dash Wire and Cowl Side J/B LH (Left Kick Panel)                          |
| 2O   | <a href="#">24</a> | Floor Wire and Cowl Side J/B LH (Left Kick Panel)                         |
| 2P   | <a href="#">26</a> | Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)  |
| 3I   | <a href="#">30</a> | Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel) |

**: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location)                                  |
|------|--------------------|---------------------------------------------------------------------------------------------|
| IF1  | <a href="#">46</a> | Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel) |
| IH1  | <a href="#">48</a> | Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)                    |
| IK1  | <a href="#">48</a> | Console Box Wire and Dash Wire (Left Side of Front Console)                                 |
| IP1  | <a href="#">50</a> | Rear Console Box Wire and Dash Wire (Right Side of Rear Console)                            |
| IQ1  | <a href="#">50</a> | Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)                      |
| IU1  | <a href="#">50</a> | Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)                      |
| IU4  |                    |                                                                                             |
| IV2  | <a href="#">52</a> | Dash Wire and Floor No.2 Wire (Behind the Glove Box)                                        |
| BD2  | <a href="#">54</a> | Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)                               |
| BL3  | <a href="#">56</a> | Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)                  |

**: GROUND POINTS**

 
| Code | See Page           | Ground Points Location                      |
|------|--------------------|---------------------------------------------|
| IF   | <a href="#">46</a> | Set Bolt of Cowl Side J/B LH                |
| II   | <a href="#">46</a> | Set Bolt of Cowl Side J/B RH                |
| BK   | <a href="#">54</a> | Front Side Under the Front Passenger's Seat |

**: SPLICE POINTS**


| Code | See Page           | Wire Harness with Splice Points | Code | See Page           | Wire Harness with Splice Points |
|------|--------------------|---------------------------------|------|--------------------|---------------------------------|
| I3   | <a href="#">48</a> | Instrument Panel Wire           | I11  | <a href="#">48</a> | Dash Wire                       |
| I4   |                    |                                 | I13  | <a href="#">48</a> | Console Box Wire                |
| I10  | <a href="#">48</a> | Dash Wire                       | I18  | <a href="#">48</a> | Rear Console Box Wire           |

# ILLUMINATION


A29




A32 (A)

 


A33 (B)

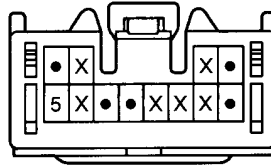

A34 (C)

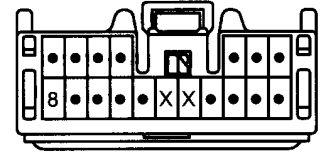


C9

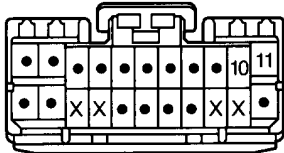


C11  
GRAY




C12  
GRAY

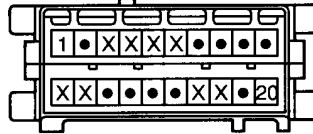

C16

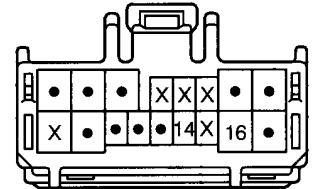


E4

 


G3




I19 (A)

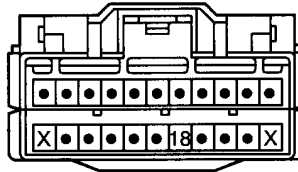

I21 (C)  
BLUE

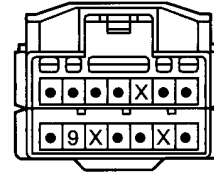


J10

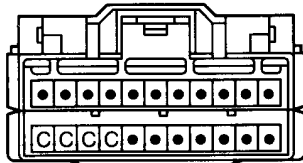


(Hint : See Page 7)

J14

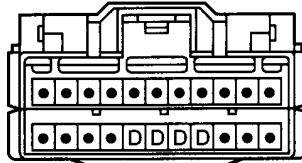


(Hint : See Page 7)

J15  
GRAY

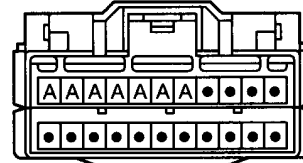


(Hint : See Page 7)

J19  
GRAY

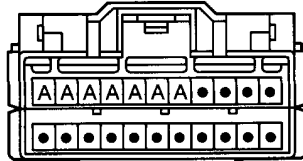


(Hint : See Page 7)

J26  
BLUE

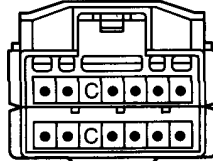


(Hint : See Page 7)

J27  
GRAY

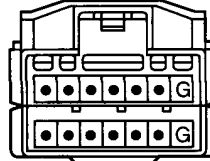


(Hint : See Page 7)

J28

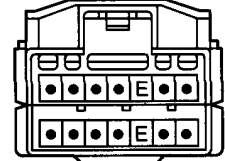


(Hint : See Page 7)

 J35  
GREEN




(Hint : See Page 7)

 J37  
GREEN




(Hint : See Page 7)

 J38  
BLUE




(Hint : See Page 7)

**J39**

 


(Hint : See Page 7)


**O3**

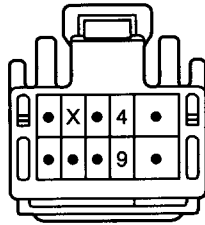


**P6**  
BLACK

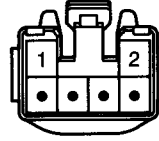


**P7**  
BLACK

 


**R1**

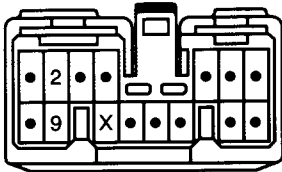


**R4**

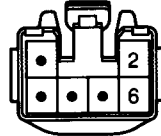

**R5**  
BLACK

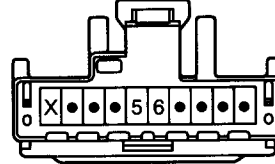


**R6**  
(w/ Rear Diff. Lock)

 


**R6**  
(w/o Rear Diff. Lock) GRAY




**R8**

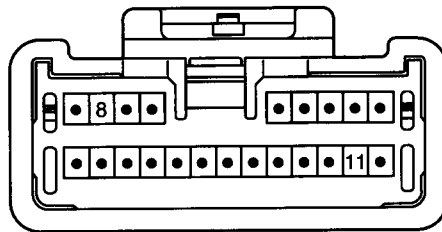

**S3**  
BLACK

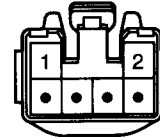

**S4**

 

**S7**  
GRAY

