

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	C 3	Crankshaft Position Sensor	90980-11162
A 2	A/C Condenser Fan Motor	90980-11237	C 4	Center Airbag Sensor Assembly	90980-11872
A 3	A/C Condenser Fan Relay	90980-10940	C 5	Center Diff. Lock Control Relay	90980-10801
A 4	A/C Dual Pressure SW	90980-11149	C 6	Center ECU	90980-11390
A 5	A/C Magnetic Clutch and Lock Sensor	90980-11016	C 7	Center ECU	90980-11391
A 6	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	90980-10943	C 8	Center ECU	90980-11408
A 7	A/T Oil Temp. Sensor	90980-11025	C 9	Center ECU	90980-11392
A 8	ABS Actuator	90980-11151	C10	Cigarette Lighter	90980-10760
A 9	ABS Actuator	90980-10895	C11	Cigarette Lighter Illumination	90980-11148
A10	ABS Actuator	90980-11413	C12	Combination Meter	82824-60060
A11	ABS Actuator	90980-11009	C13	Combination Meter	82824-60050
A12	ABS Speed Sensor Front LH	90980-10941	C14	Combination Meter	82824-60060
A13	ABS Speed Sensor Front RH	90980-11002	C15	Combination Meter	82824-60050
A14	Accel Position Sensor	90980-11150	C16	Combination SW	90980-11672
A15	Airbag Sensor Front LH	90980-11856	C17	Combination SW	90980-11581
A16	Airbag Sensor Front RH		C18	Combination SW	90980-11616
A17	Auto Antenna Motor	90980-11194	C19	Combination SW	90980-11594
A18	A/C Solar Sensor	90980-11919	D 1	Data Link Connector 1	90980-11195
A19	A/C Thermistor	90980-10825	D 2	Daytime Running Light Relay No.3	90980-10939
A20	ABS Deceleration Sensor	90980-10845	D 3	Daytime Running Light Relay No.3	90980-10940
A21	ABS ECU	90980-11390	D 4	Detection SW (Center Diff. Lock)	90980-11250
A22	ABS ECU	90980-11391	D 5	Detection SW (Transfer L Position)	
A23	ABS ECU	90980-11424	D 6	Detection SW (Transfer Neutral Position)	90980-11025
A24	Air Inlet Control Servo Motor	90980-11165	D 7	Data Link Connector 3	90980-98012
A25	Air Mix Control Servo Motor	90980-10797	D 8	Daytime Running Light Relay (Main)	90980-10819
A26	Air Vent Mode Control Servo Motor	90980-11165	D 9	Detection SW (Rear Diff. Lock)	90980-11156
A27	Airbag Squib (Front Passenger Airbag Assembly)	90980-11886	D10	Door Courtesy Light Front LH	90980-11148
A28	Airbag Squib (Steering Wheel Pad)	90980-10850	D11	Door Courtesy Light Front RH	
A29	Ashtray Illumination	90980-10825	D12	Door Courtesy Light Rear LH	
A30	Auto Antenna Control Relay	90980-10819	D13	Door Courtesy Light Rear RH	
A31	Automatic Light Control Sensor	90980-11633	D14	Door Courtesy SW Front LH	90980-10871
A32	A/C Amplifier (Rear)	90980-11502	D15	Door Courtesy SW Front RH	
A33	A/C Amplifier (Rear)	90980-11475	D16	Door Courtesy SW Rear LH	
A34	A/C Amplifier (Rear)	90980-11497	D17	Door Courtesy SW Rear RH	
A35	ABS Speed Sensor Rear LH	90980-11073	D18	Door Key Lock and Unlock SW LH	90980-11170
A36	ABS Speed Sensor Rear RH		D19	Door Key Lock and Unlock SW RH	
B 1	Blower Motor Controller	90980-10910	D20	Door Lock Control SW RH	90980-10601
B 2	Back Door Courtesy SW	90980-10039	D21	Door Lock Motor and Door Unlock Detection SW Front LH	90980-11150
B 3	Back Door Key Lock and Unlock SW	90980-11490	D22	Door Lock Motor and Door Unlock Detection SW Front RH	
B 4	Back Door Lock Motor and Back Door Unlock Detection SW	90980-11150	D23	Door Lock Motor and Door Unlock Detection SW Rear LH	
B 5	Buckle SW LH	90980-11211	D24	Door Lock Motor and Door Unlock Detection SW Rear RH	
B 6	Buckle SW RH		E 1	Electronically Controlled Transmission Solenoid	90980-10891
C 1	Camshaft Position Sensor	90980-10947	E 2	Engine Coolant Temp. Sensor	90980-10737
C 2	Center Diff. Lock Control Motor	90980-11024			

Note: Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Code	Part Name	Part Number	Code	Part Name	Part Number
E 3	Engine Hood Courtesy SW	90980-10554	I13	Injector No.5	90980-11153
E 4	Electronically Controlled Transmission Pattern Select SW	90980-10933	I14	Injector No.6	
E 5	Engine Control Module	90980-11421	I15	Injector No.7	
E 6	Engine Control Module	90980-11476	I16	Injector No.8	
E 7	Engine Control Module	90980-11586	I17	Ignition Key Cylinder Light	90980-10906
E 8	Engine Control Module	90980-11637	I18	Ignition SW	90980-11615
E 9	Engine Control Module	90980-11638	I19	Instrument ECU	90980-11927
F 1	Front Fog Light LH	90980-11660	I20	Instrument ECU	90980-11914
F 2	Front Fog Light RH		I21	Instrument ECU	90980-11925
F 3	Front Turn Signal and Side Marker Light LH	90980-11020	J 1	Junction Connector	-
F 4	Front Turn Signal and Side Marker Light RH		J 2	Junction Connector	
F 5	Front Wiper Motor		J 3	Junction Connector	
F 6	Fusible Link Block	-	J 4	Junction Connector	
F 7	Fuel Control SW	90980-10860	J 5	Junction Connector	
F 8	Front Door Speaker LH	90980-10935	J 6	Junction Connector	
F 9	Front Door Speaker RH		J 7	Junction Connector	
F10	Front Interior Light and Rear Personal Light	90980-10365	J 8	Junction Connector	
F11	Front Personal Light	90980-10935	J 9	Junction Connector	90980-11927
F12	Fuel Pump and Sender	90980-11077	J10	Junction Connector	
F13	Fuel Pump Control ECU	90980-10862	J11	Junction Connector	
G 1	Generator	90980-11349	J12	Junction Connector	90980-11925
G 2	Generator	90980-09212	J13	Junction Connector	90980-11927
G 3	Glove Box Light	90980-11098	J14	Junction Connector	
H 1	Headlight LH (High)	90980-11659	J15	Junction Connector	
H 2	Headlight LH (Low)	90980-11660	J16	Junction Connector	-
H 3	Headlight RH (High)	90980-11659	J17	Junction Connector	90980-11927
H 4	Headlight RH (Low)	90980-11660	J18	Junction Connector	
H 5	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869	J19	Junction Connector	
H 6	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	J20	Junction Connector	
H 7	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-10869	J21	Junction Connector	-
H 8	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028	J22	Junction Connector	
H 9	Horn LH	90980-10619	J23	Junction Connector	
H10	Horn RH		J24	Junction Connector	
H11	High Mounted Stop Light	90980-11211	J25	Junction Connector	
I 1	Ignition Coil and Igniter No.1	90980-11885	J26	Junction Connector	90980-11925
I 2	Ignition Coil and Igniter No.2		J27	Junction Connector	
I 3	Ignition Coil and Igniter No.3		J28	Junction Connector	
I 4	Ignition Coil and Igniter No.4		J29	Junction Connector	
I 5	Ignition Coil and Igniter No.5		J30	Junction Connector	-
I 6	Ignition Coil and Igniter No.6		J31	Junction Connector	
I 7	Ignition Coil and Igniter No.7		J32	Junction Connector	
I 8	Ignition Coil and Igniter No.8		J33	Junction Connector	
I 9	Injector No.1	90980-11153	J34	Junction Connector	
I10	Injector No.2		J35	Junction Connector	
I11	Injector No.3		J36	Junction Connector	
I12	Injector No.4		J37	Junction Connector	

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
J38	Junction Connector	-	P27	Power Seat Motor (Driver's Seat Rear Vertical Control)	90980-10825
J39	Junction Connector		P28	Power Seat Motor (Driver's Seat Reclining Control)	
J40	Junction Connector		P29	Power Seat Motor (Driver's Seat Slide Control)	
J41	Junction Connector		P30	Power Seat Motor (Front Passenger's Seat Front Vertical Control)	
K 1	Knock Sensor 1	90980-11166	P31	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)	
K 2	Knock Sensor 2	90980-10825	P32	Power Seat Motor (Front Passenger's Seat Reclining Control)	
K 3	Key Interlock Solenoid		P33	Power Seat Motor (Front Passenger's Seat Slide Control)	90980-11264
L 1	License Plate Light LH	90980-11148	R 1	Radio and Player	
L 2	License Plate Light RH		R 2	Rear Diff. Lock Control ECU	90980-10801
L 3	Lumbar Support Control SW (Driver's Seat)	90980-10601	R 3	Rear Diff. Lock SW	90980-10631
M 1	Mass Air Flow Meter	90980-11317	R 4	Rear Heater SW	90980-10797
M 2	Moon Roof Control ECU	90980-10997	R 5	Remote Control Mirror SW	90980-11657
M 3	Moon Roof Control SW	90980-10789	R 6	Rheostat	90980-10908
N 1	Noise Filter (Ignition)	90980-10843	R 7	Room Temp. Sensor (Front)	90980-10825
O 1	O/D Direct Clutch Speed Sensor	90980-11156	R 8	Rear A/C Control SW	90980-11503
O 2	Oil Pressure Sender	90980-11363	R 9	Rear Air Mix Control Servo Motor	90980-11319
O 3	O/D Main SW and Shift Lock Control ECU	90980-11614	R10	Rear Combination Light LH	90980-11587
P 1	Park/Neutral Position SW, A/T Indicator Light SW and Back-Up Light SW	90980-11332	R11	Rear Combination Light LH	90908-10908
P 2	Parking Light LH	90980-11156	R12	Rear Combination Light RH	
P 3	Parking Light RH		R13	Rear Combination Light RH	90908-11587
P 4	Power Outlet (Front)	90980-10760	R14	Rear Cooler Blower Motor	90980-10214
P 5	Power Outlet (Rear Console Box)	90980-10860	R15	Rear Cooler Magnetic Valve	90980-10860
P 6	Power Quarter Window SW LH	90980-10797	R16	Rear Cooler Power Transistor	90980-10171
P 7	Power Quarter Window SW RH	90980-10996	R17	Rear Cooler Relay	90980-10175
P 8	Parking Brake SW	90980-10871	R18	Rear Diff. Lock Motor	90980-11194
P 9	Power Outlet (Luggage Compartment)	90980-10860	R19	Rear Door Speaker LH	90980-10935
P10	Power Vent Window Motor LH		R20	Rear Door Speaker RH	
P11	Power Vent Window Motor RH		R21	Rear Evaporator Temp. Sensor	90980-10825
P12	Power Window Master SW	90980-11791	R22	Rear Heater Blower Motor	90980-10860
P13	Power Window Master SW	90980-11165	R23	Rear Heater Blower Resistor	90980-10916
P14	Power Window Motor Front LH	90980-11599	R24	Rear Heater Fan Relay	90980-10171
P15	Power Window Motor Front RH	90980-11003	R25	Rear Heater Power Transistor	
P16	Power Window Motor Rear LH		R26	Rear Inlet Air Temp. Sensor	90980-11369
P17	Power Window Motor Rear RH		R27	Rear Interior Light	90980-10935
P18	Power Window SW Front RH	90980-10789	R28	Rear Window Defogger	90980-11097
P19	Power Window SW Rear LH		R29	Rear Window Defogger	
P20	Power Window SW Rear RH		R30	Rear Wiper Motor	90980-10795
P21	Pretensioner LH	90980-11862	R31	Rear Wiper Relay	90908-10797
P22	Pretensioner RH		R32	Remote Control Mirror LH	90980-11573
P23	Power Seat Control SW (Driver's Seat)	90980-10803	R33	Remote Control Mirror RH	
P24	Power Seat Control SW (Front Passenger's Seat)		R34	Room Temp. Sensor (Rear)	90980-11918
P25	Power Seat Motor (Driver's Seat Front Vertical Control)	90980-10825			
P26	Power Seat Motor (Driver's Seat Lumbar Support Control)				

Note: Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

