


POWER REAR QUARTER WINDOW

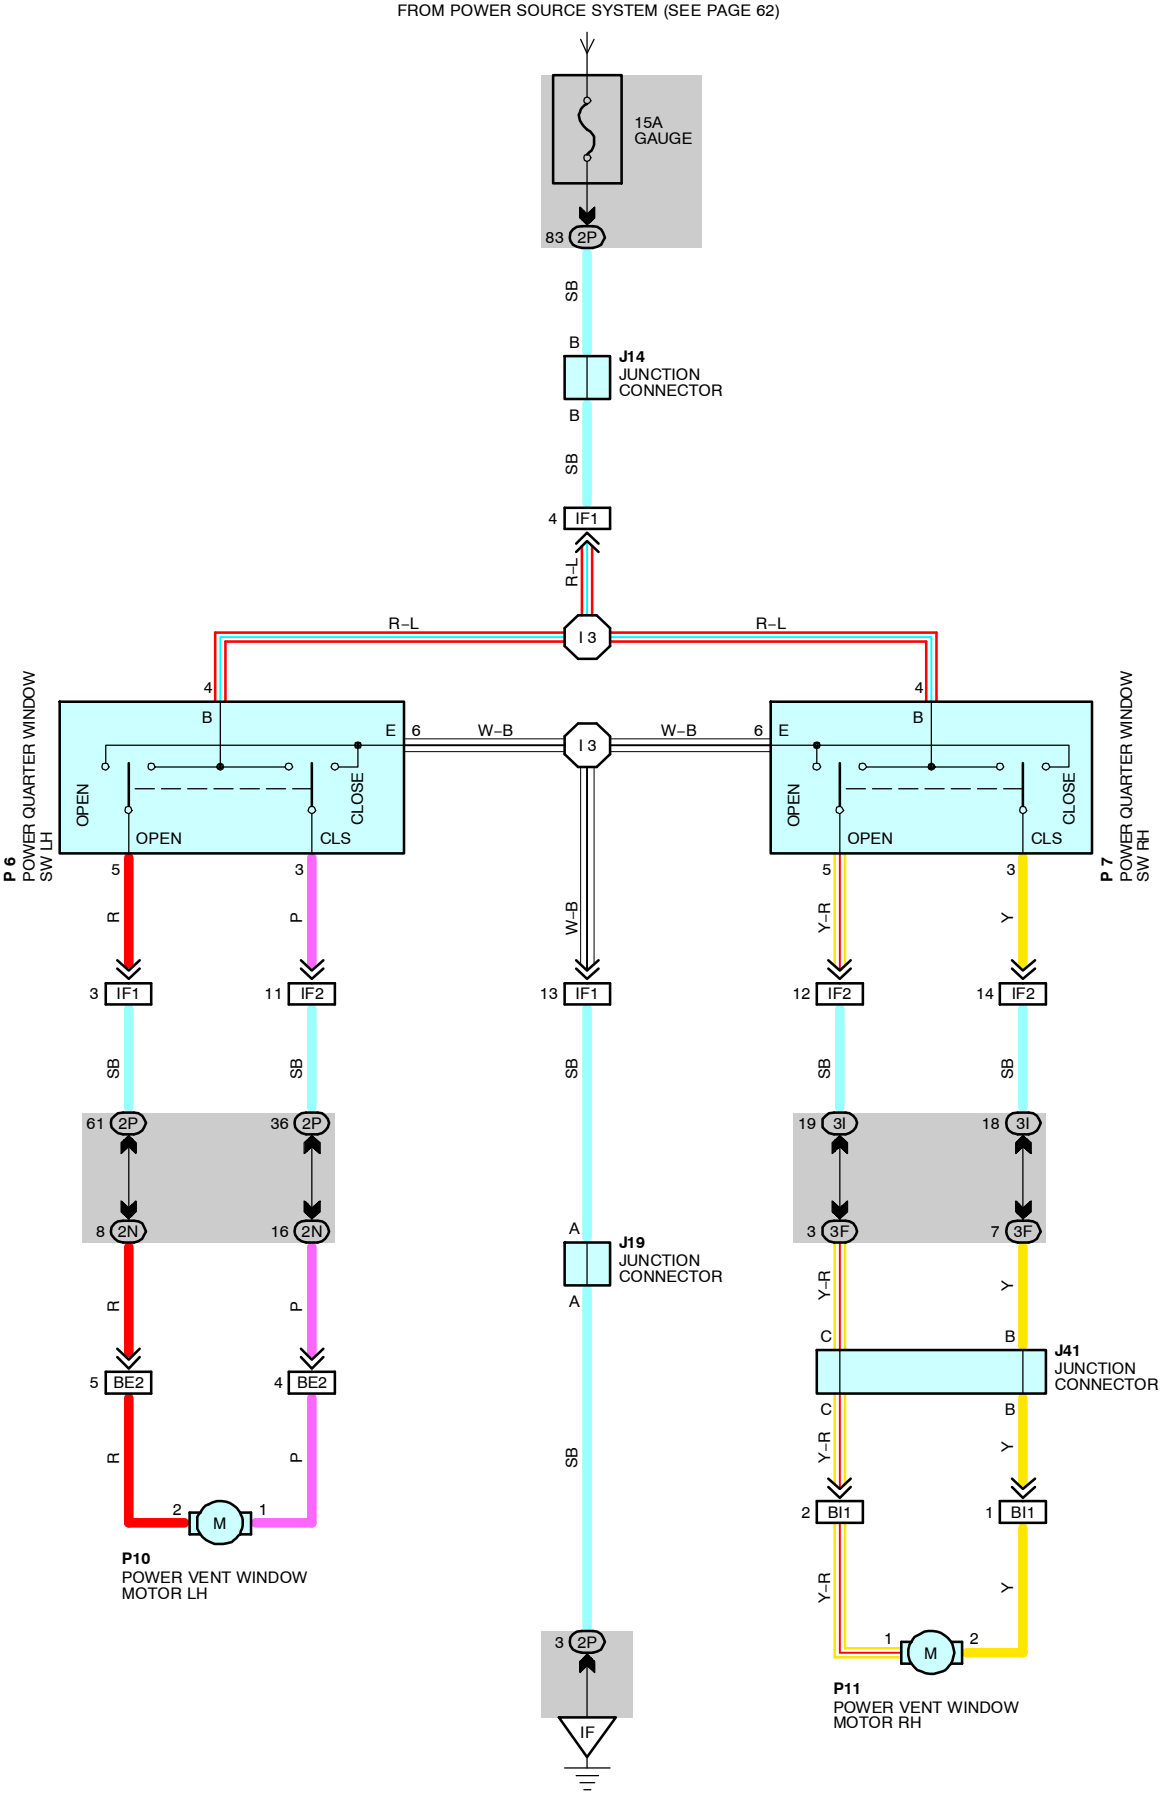

SERVICE HINTS

P6 POWER QUARTER WINDOW SW LH

4-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
 6-GROUND : Always continuity

P7 POWER QUARTER WINDOW SW RH

4-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
 6-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J14	39	P6	39	P11	41
J19	39	P7	39		
J41	40	P10	41		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2N	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3F	30	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	46	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
BE2	54	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BI1	56	Roof No.2 Wire and Floor No.2 Wire (Right Side Rear Quarter Panel)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH

○ : SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	48	Instrument Panel Wire			

J14

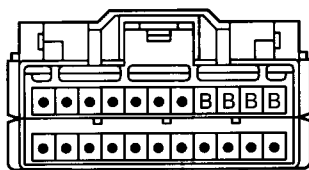


(Hint : See Page 7)

J19
GRAY

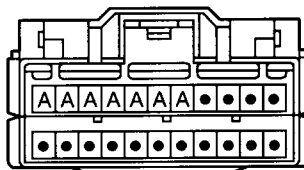


(Hint : See Page 7)

 J41
BLUE




(Hint : See Page 7)

P6
BLACK

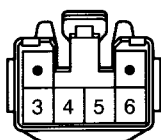

P7
BLACK

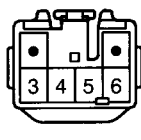

P10



P11

