



POWER SEAT

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

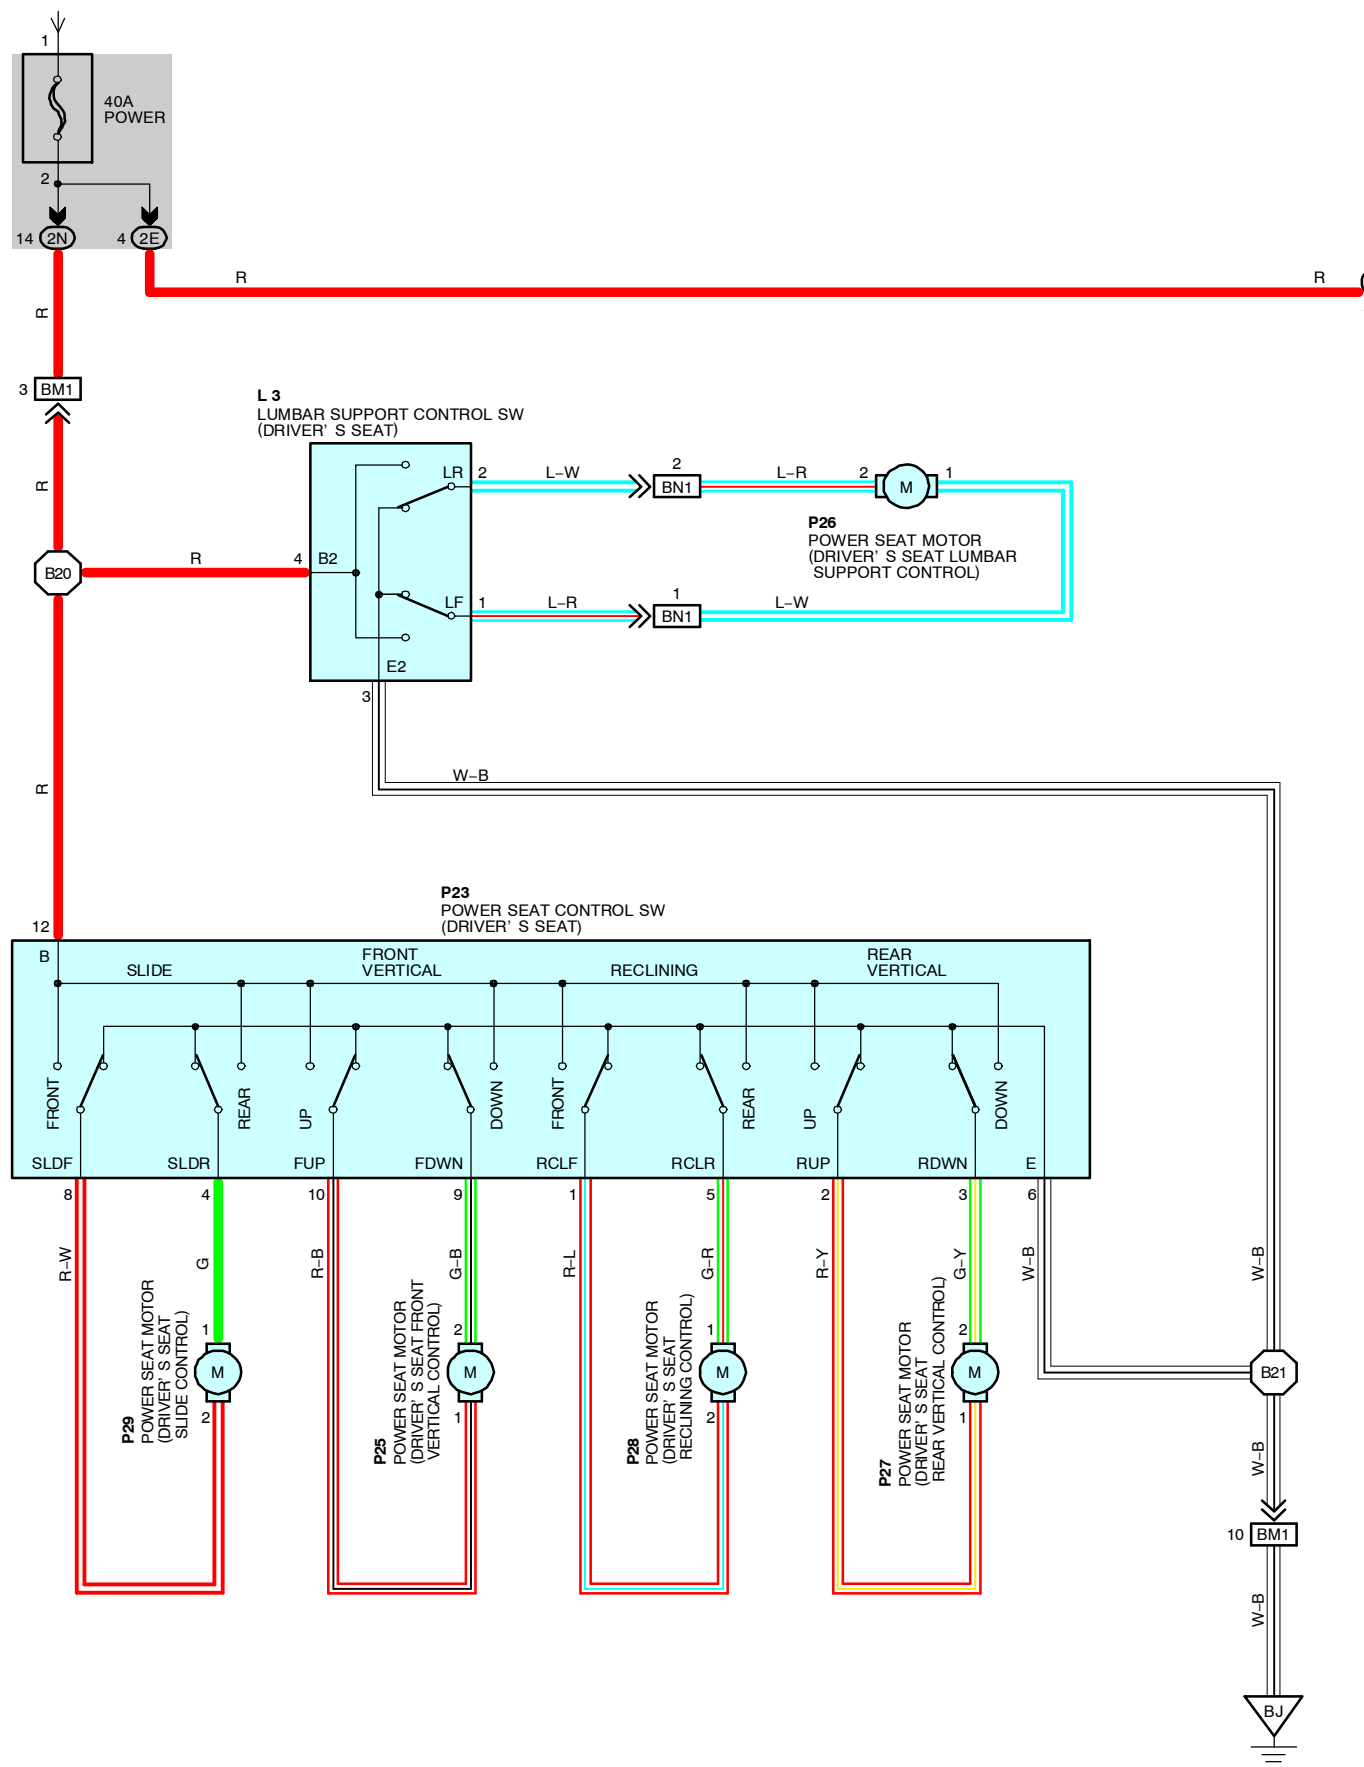

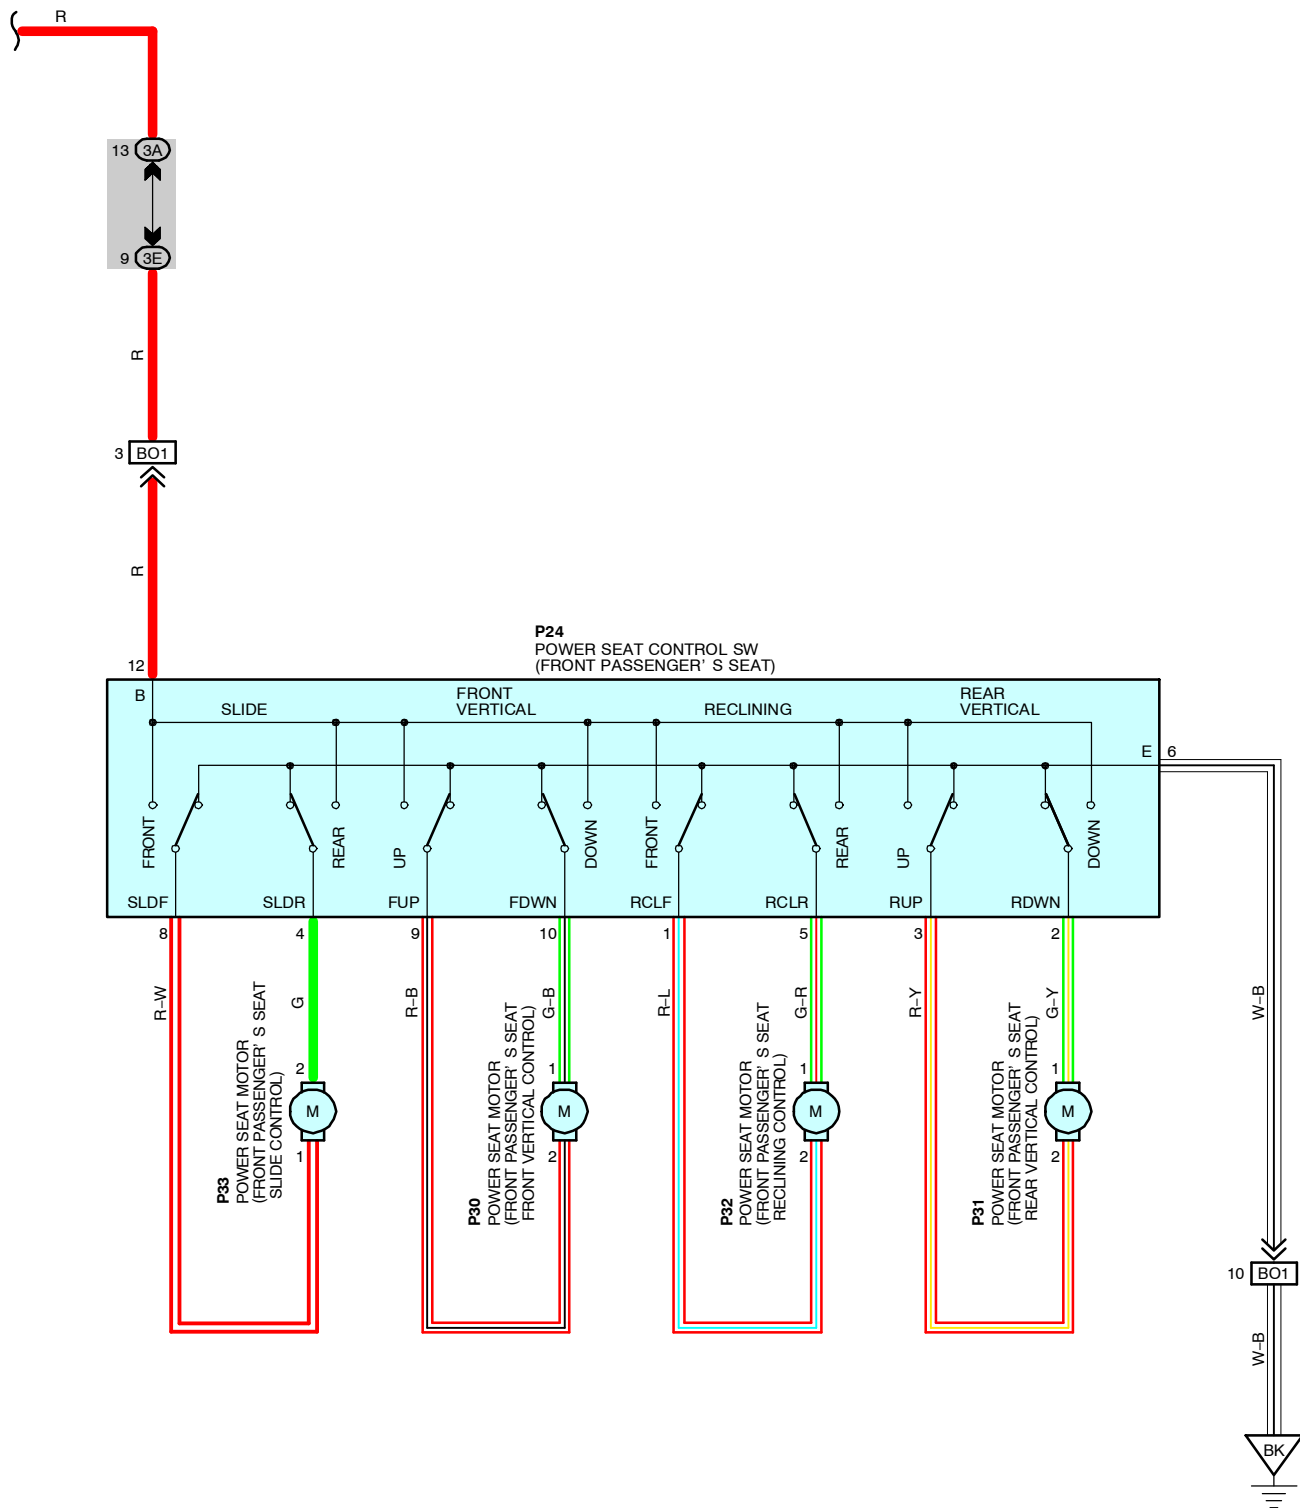

POWER SEAT

SERVICE HINTS

P23 POWER SEAT CONTROL SW (DRIVER'S SEAT)

- 12-1 : Closed with driver's seat at front reclining operation
- 12-5 : Closed with driver's seat at rear reclining operation
- 12-10 : Closed with driver's seat at front vertical up operation
- 12-9 : Closed with driver's seat at front vertical down operation
- 12-2 : Closed with driver's seat at rear vertical up operation
- 12-3 : Closed with driver's seat at rear vertical down operation
- 12-8 : Closed with driver's seat at front slide operation
- 12-4 : Closed with driver's seat at rear slide operation
- 6-GROUND : Always continuity

P24 POWER SEAT CONTROL SW (FRONT PASSENGER'S SEAT)

- 12-1 : Closed with front passenger's seat at front reclining operation
- 12-5 : Closed with front passenger's seat at rear reclining operation
- 12-10 : Closed with front passenger's seat at front vertical up operation
- 12-9 : Closed with front passenger's seat at front vertical down operation
- 12-2 : Closed with front passenger's seat at rear vertical up operation
- 12-3 : Closed with front passenger's seat at rear vertical down operation
- 12-8 : Closed with front passenger's seat at front slide operation
- 12-4 : Closed with front passenger's seat at rear slide operation
- 6-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
L3	42	P26	42	P30	42
P23	42	P27	42	P31	42
P24	42	P28	42	P32	42
P25	42	P29	42	P33	42

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2E	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2N	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
3A	30	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	30	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BM1	58	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BN1	58	Seat No.2 Wire and Front Seat LH Wire (Rear Side Under the Driver's Seat)
BO1	58	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)

: GROUND POINTS

Code	See Page	Ground Points Location
BJ	54	Under the Driver's Seat
BK	54	Front Side Under the Front Passenger's Seat


: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B20	58	Front Seat LH Wire	B21	58	Front Seat LH Wire


L3



 
P23



P24

 

P25
ORANGE

 


P26




P27
BLUE



 
P28




P29

 


P30
ORANGE

 

P31
BLUE

 

P32

 

P33

