


REMOTE CONTROL MIRROR

* 1 : W/ POWER REAR QUARTER WINDOW
* 2 : W/O POWER REAR QUARTER WINDOW

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

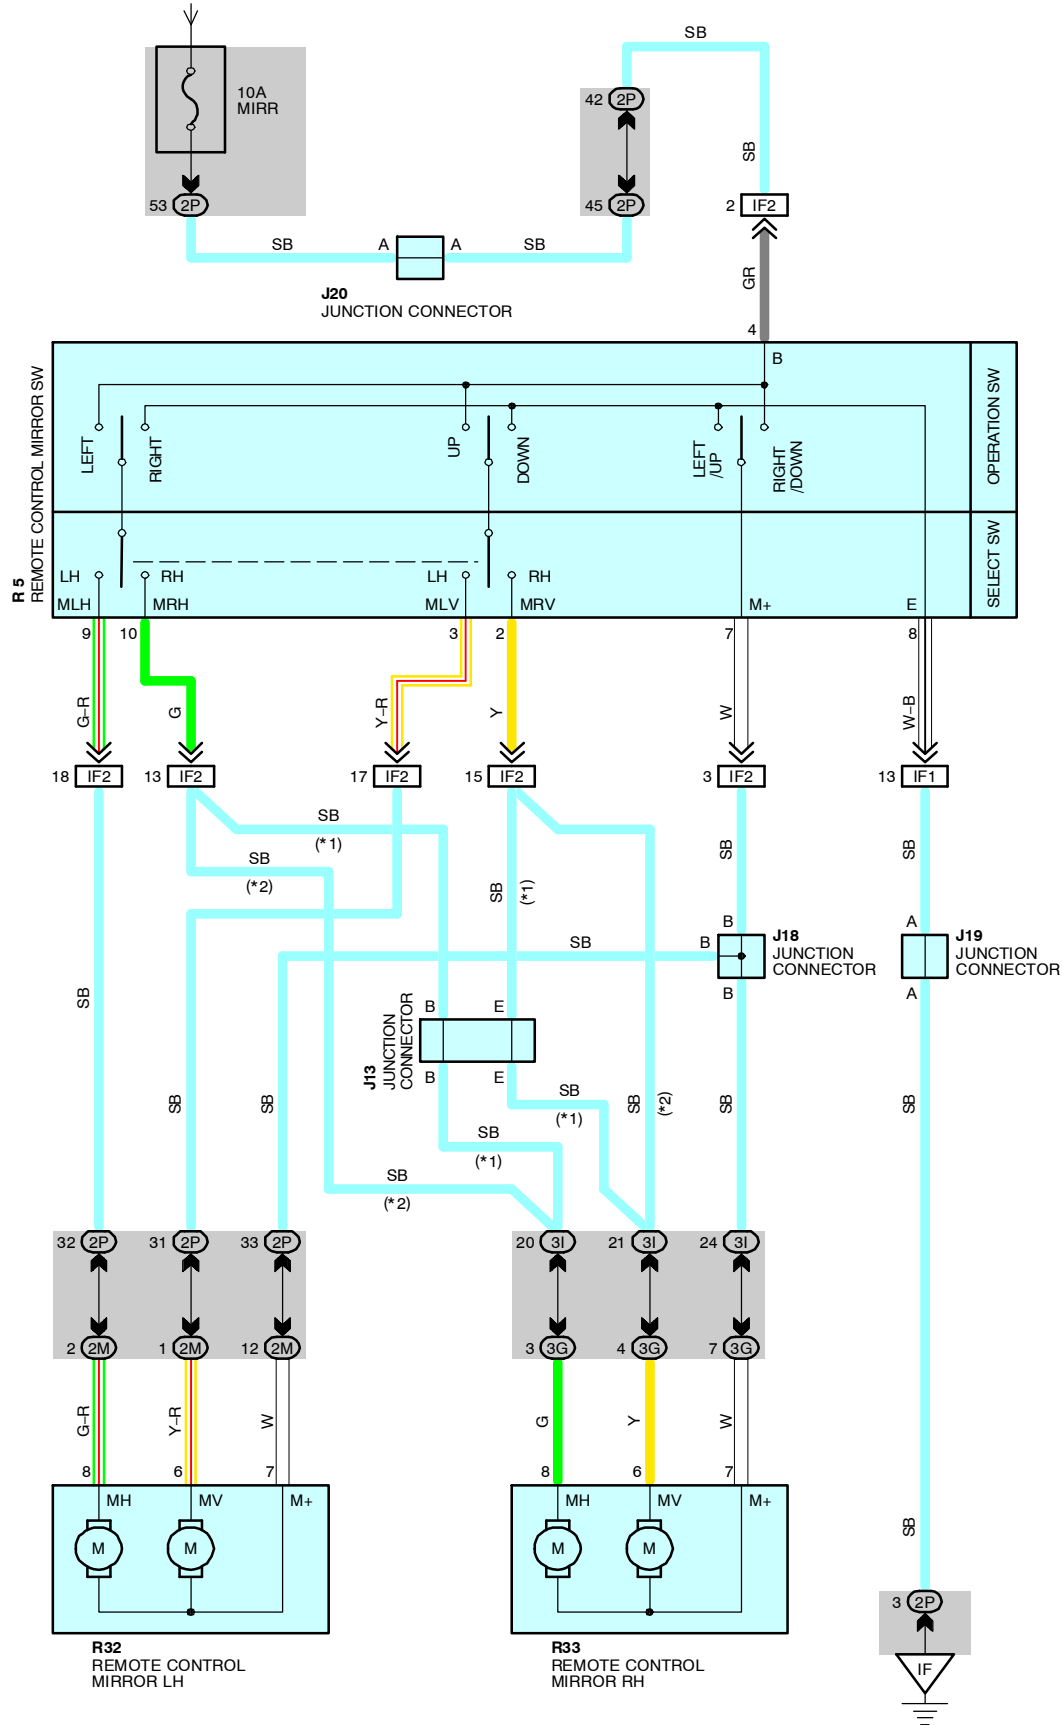

SERVICE HINTS

R5 REMOTE CONTROL MIRROR SW

- 7-8 : Continuity with the operation SW at **UP** or **LEFT** position
- 4-7 : Continuity with the operation SW at **RIGHT** or **DOWN** position
- 4-9 : Continuity with the operation SW at **LEFT** position and the select SW at **LH** position
- 4-3 : Continuity with the operation SW at **UP** position and the select SW at **LH** position
- 8-10 : Continuity with the operation SW at **RIGHT** position and the select SW at **RH** position
- 2-8 : Continuity with the operation SW at **DOWN** position and the select SW at **RH** position
- 4-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- 8-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J13	39	J20	39	R33	41
J18	39	R5	39		
J19	39	R32	41		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2M	24	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3G	30	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	46	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		

: GROUND POINTS

Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH


REMOTE CONTROL MIRROR

J13
GRAY

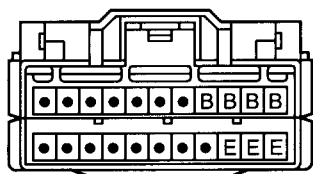


(Hint : See Page 7)

J18
GRAY

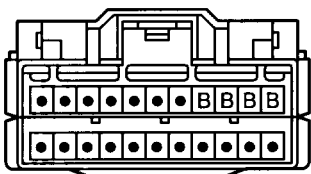


(Hint : See Page 7)

J19
GRAY

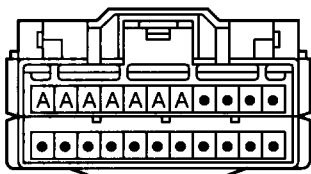


(Hint : See Page 7)

J20

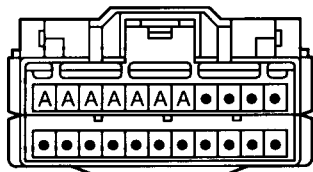


(Hint : See Page 7)

R5
BLACK

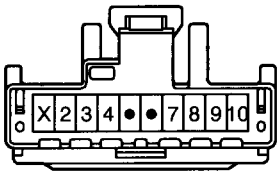

R32

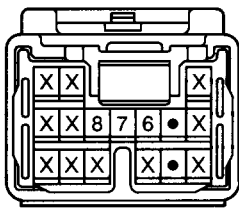

R33

