


244

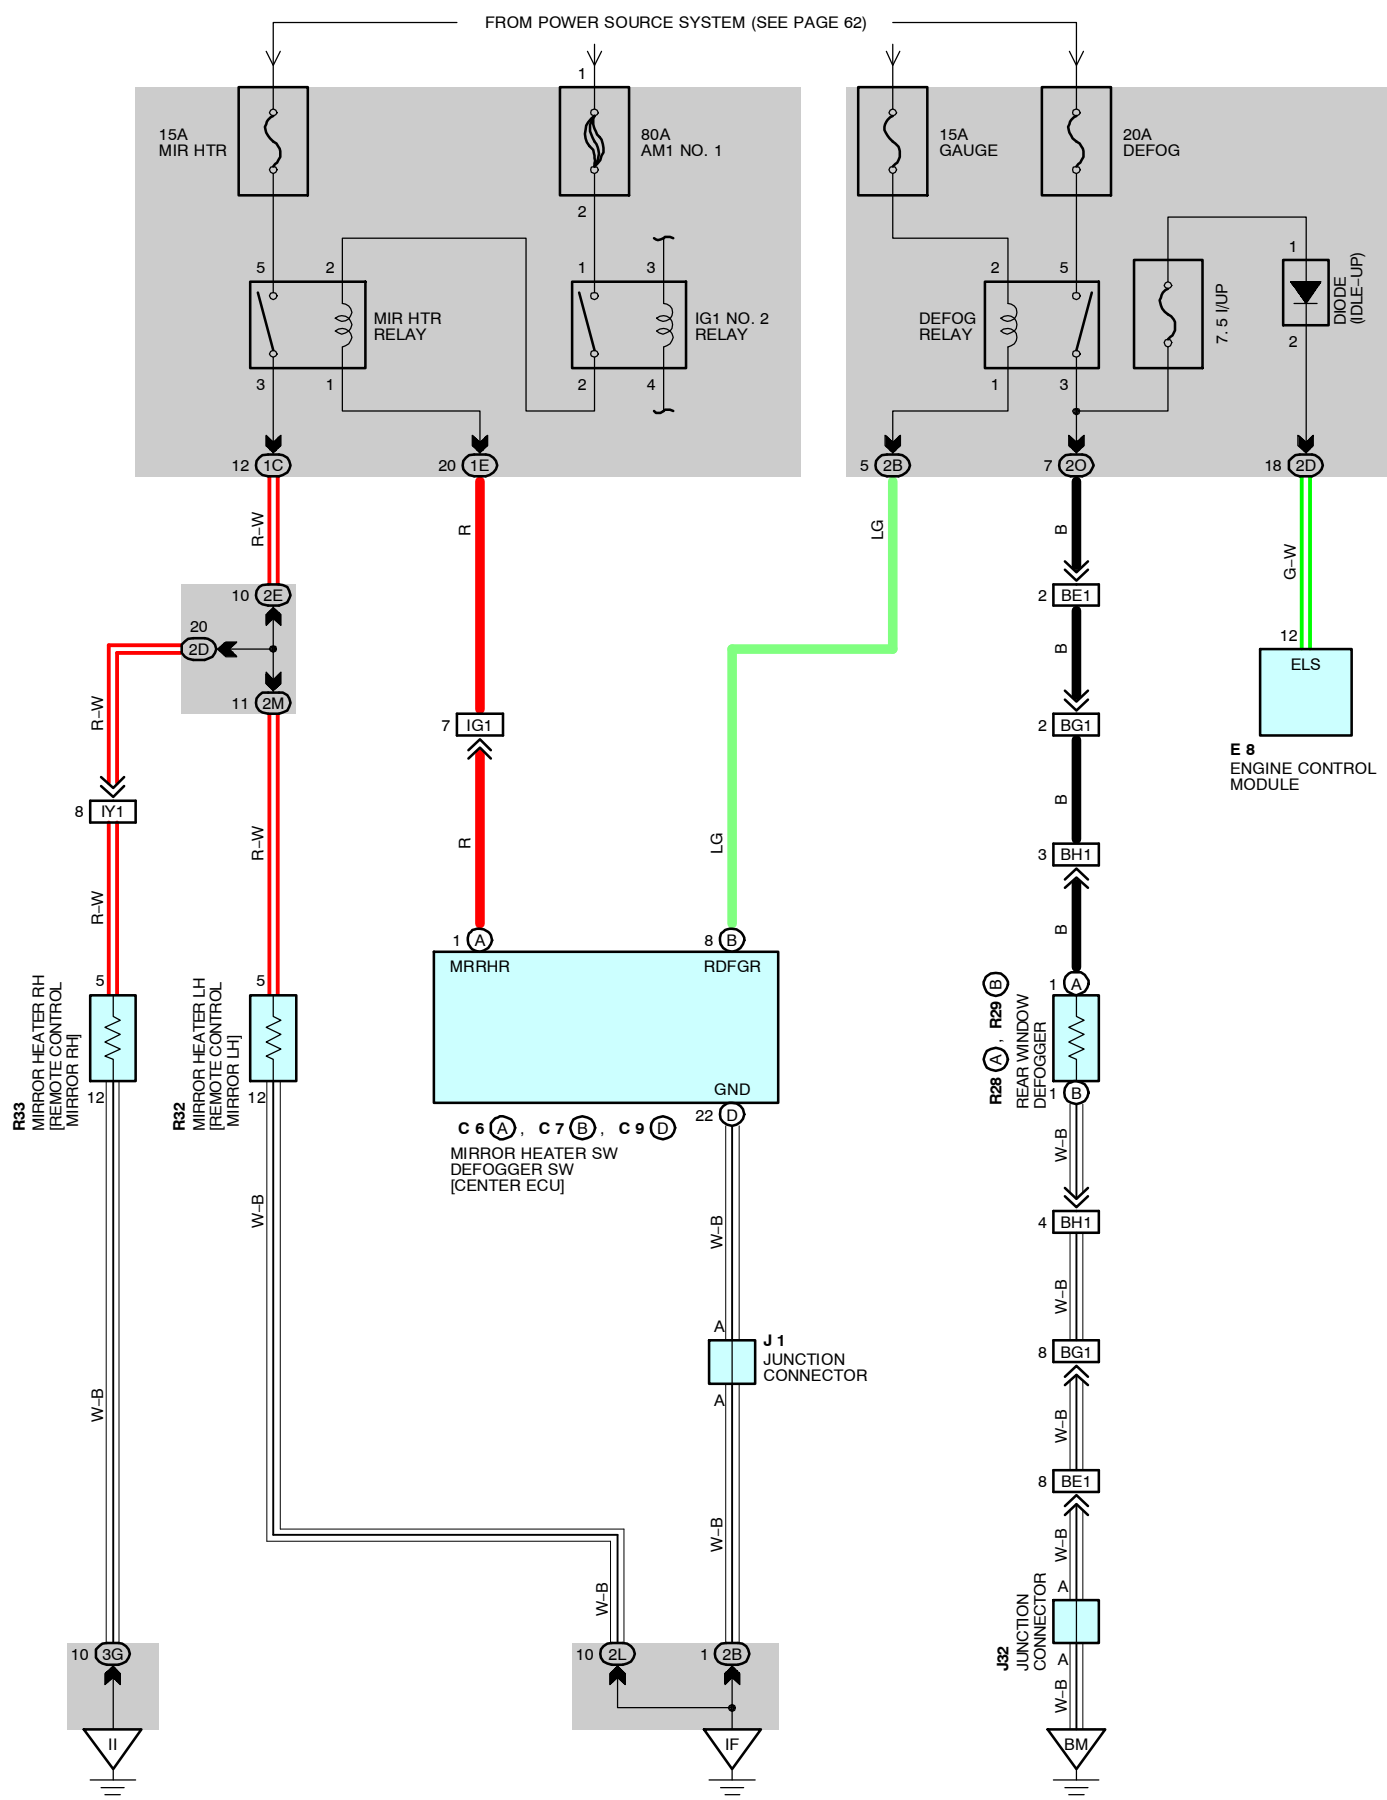

SERVICE HINTS

DEFOG RELAY

5-3 : Closed with ignition SW at **ON** or **ST** position and defogger SW on

MIR HTR RELAY

5-3 : Closed with ignition SW at **ON** or **ST** position and mirror heater SW on



: PARTS LOCATION

Code		See Page	Code		See Page	Code	See Page
C6	A	38	J1		39	R32	41
C7	B	38	J32		40	R33	41
C9	D	38	R28	A	41		
E8		38	R29	B	41		



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2E	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	24	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2M		
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
3G	30	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	48	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IY1	52	Front Door RH Wire and Dash Wire (Right Kick Panel)
BE1	54	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BG1	56	Pillar No.1 Wire and Luggage Room Wire (Left Rear Side Roof Panel)
BH1	56	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)




: GROUND POINTS


Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH
II	46	Set Bolt of Cowl Side J/B RH
BM	54	Left Rear Side Quarter Panel

REAR WINDOW DEFOGGER AND MIRROR HEATER


C6 (A)

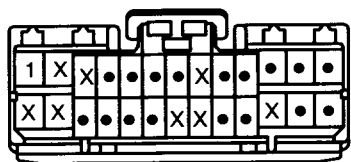


C7 (B)

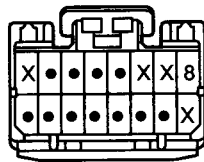


C9 (D)

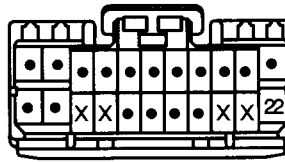

E8

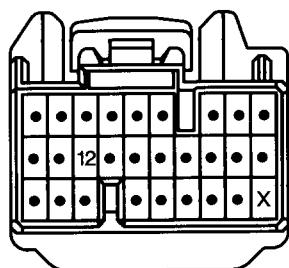


J1

 

(Hint : See Page 7)

 J32



(Hint : See Page 7)


R28 (A)



R29 (B)



R32

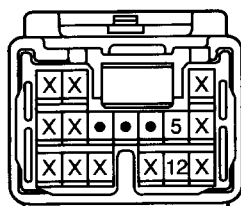**R33**