



TURN SIGNAL AND HAZARD WARNING LIGHT

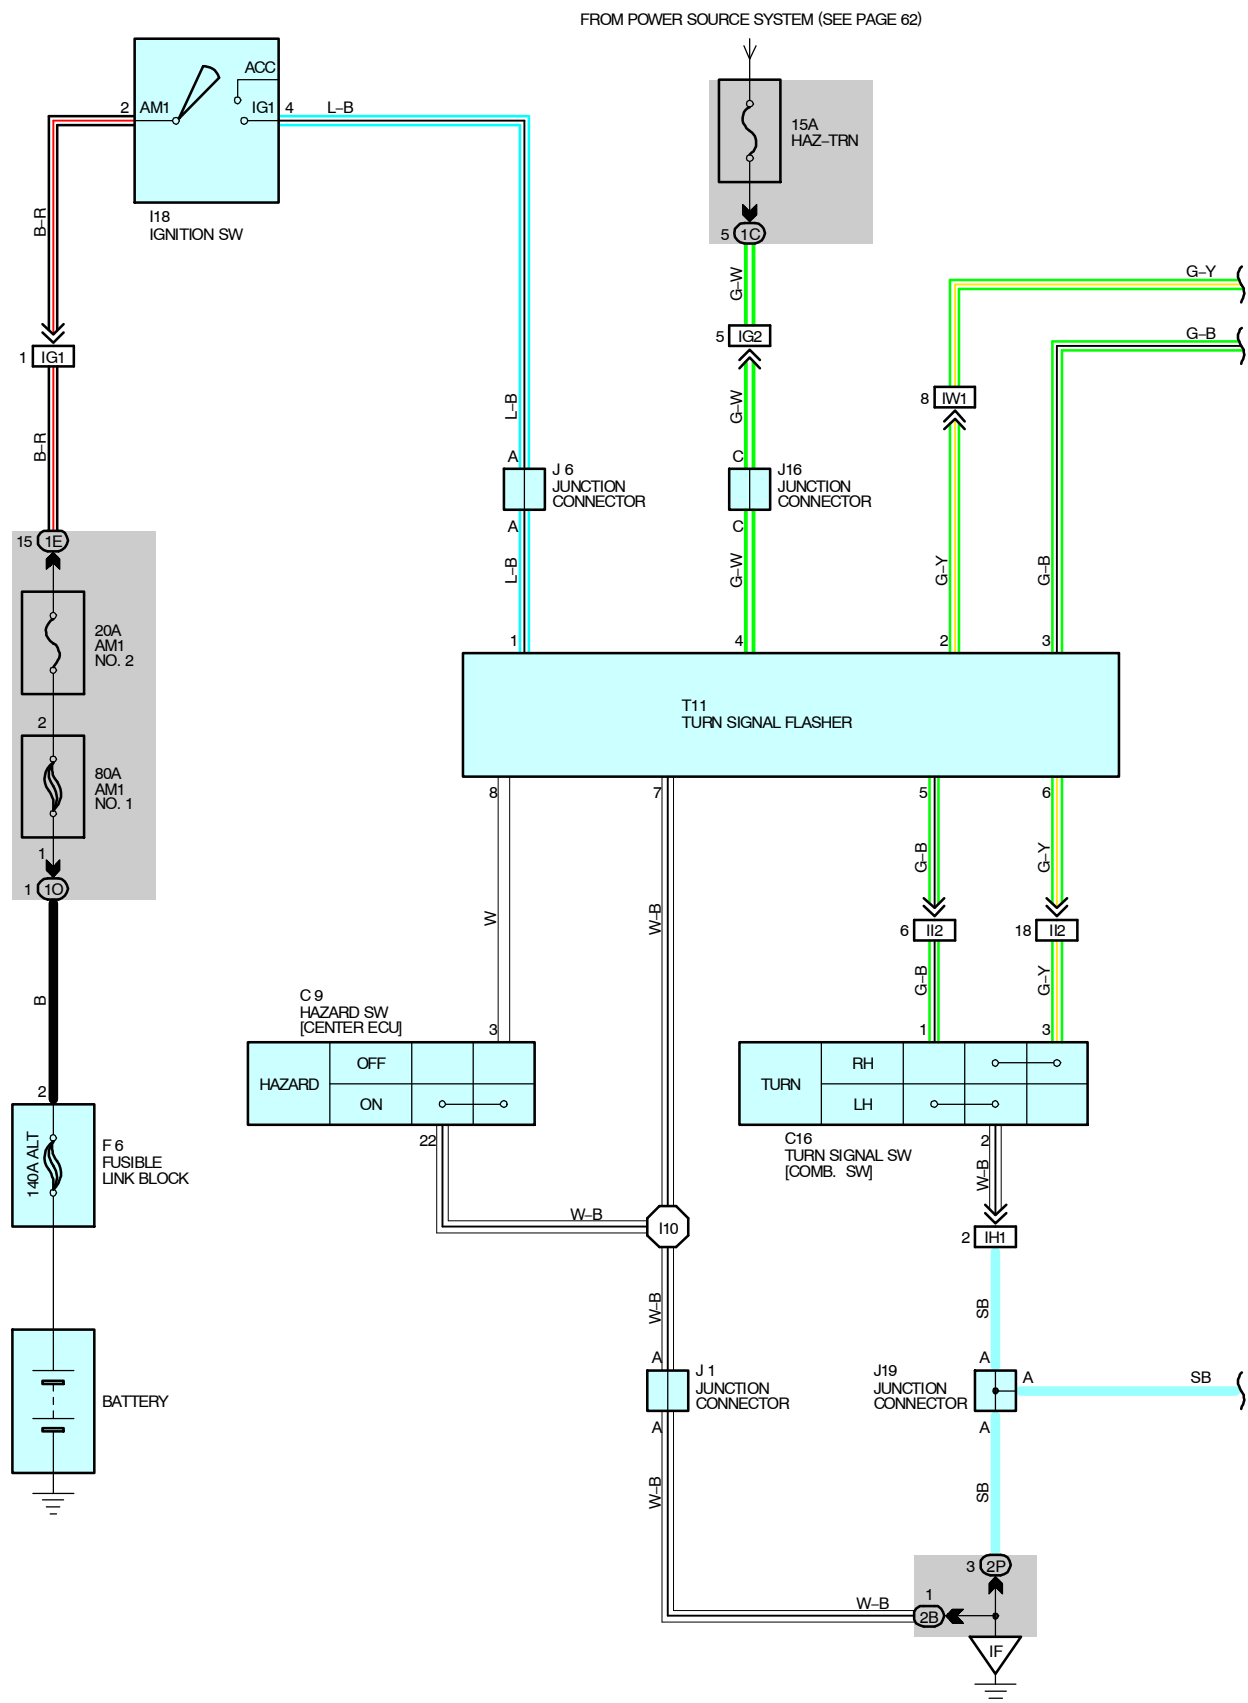

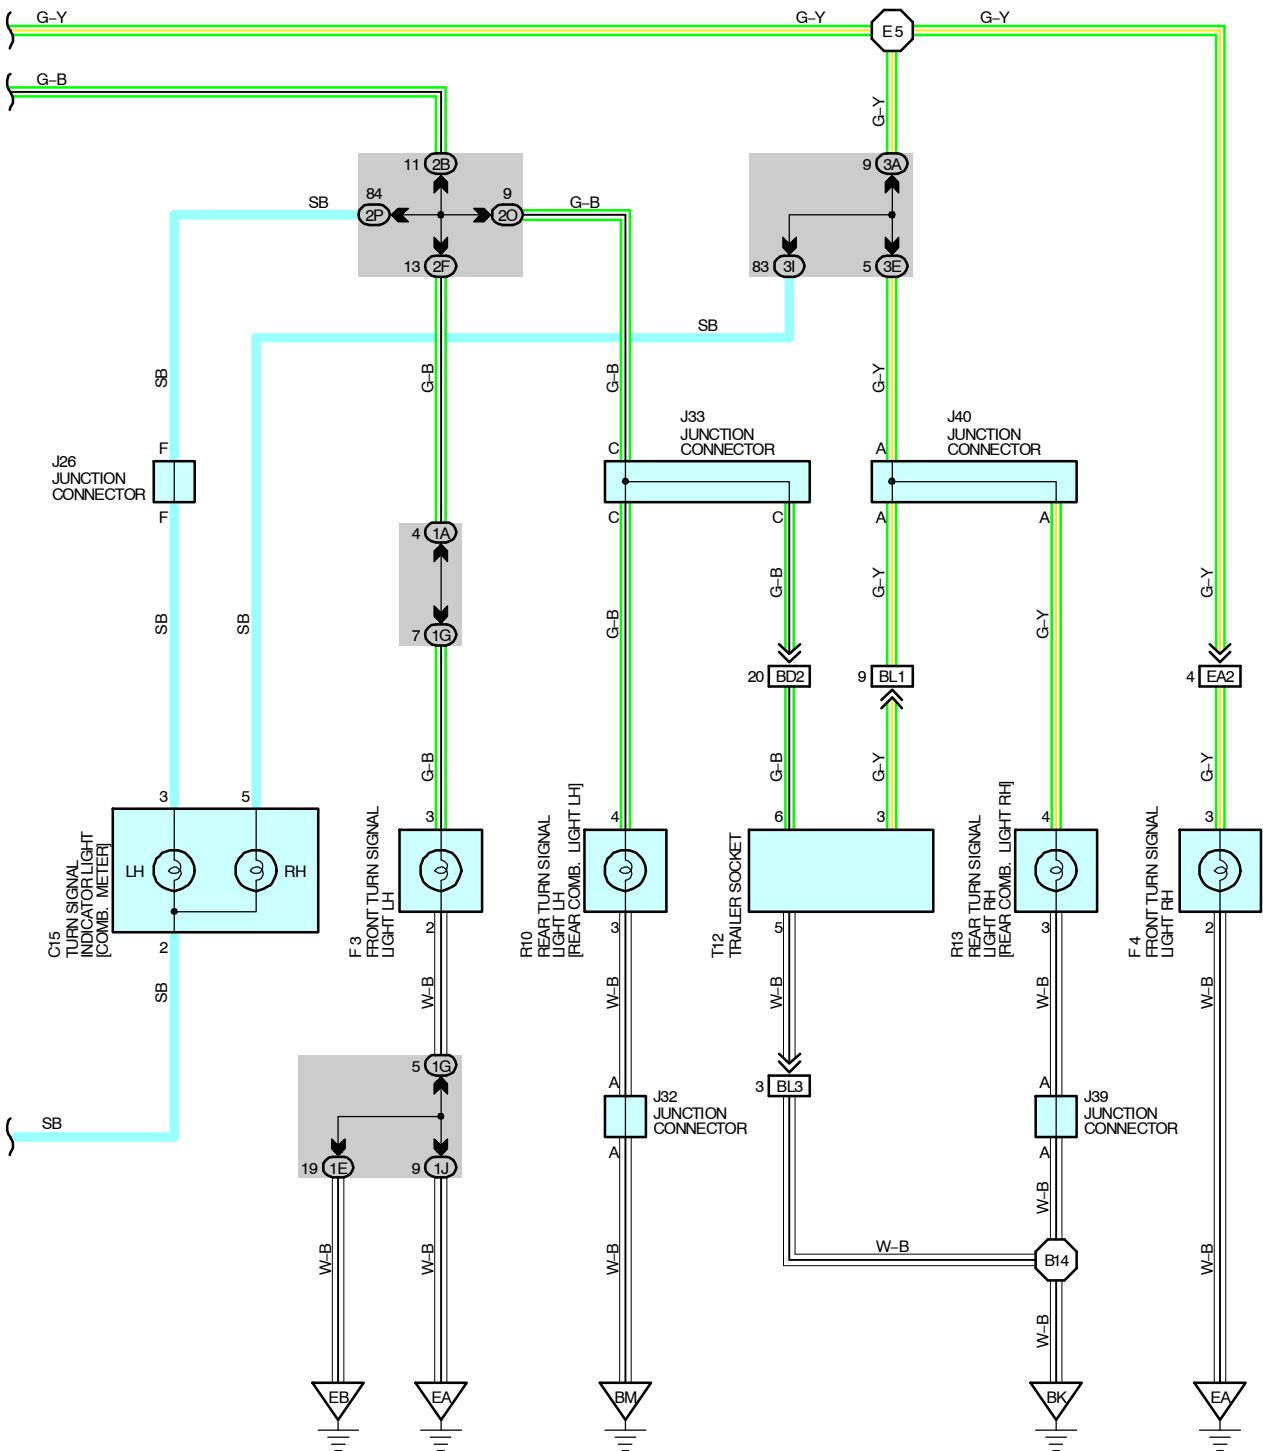

TURN SIGNAL AND HAZARD WARNING LIGHT

SERVICE HINTS

T11 TURN SIGNAL FLASHER

- 4-GROUND : Always approx. 12 volts
- 1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 7-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C9	38	J1	39	J39	40
C15	38	J6	39	J40	40
C16	38	J16	39	R10	41
F3	36	J19	39	R13	41
F4	36	J26	39	T11	39
F6	36	J32	40	T12	41
I18	38	J33	40		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1G	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
1O	21	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2F	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3A	30	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	30	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	44	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
IG1	48	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IG2		
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
II2	48	Column Wire and Dash Wire (Near the Ignition SW)
IW1	52	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
BD2	54	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BL1	56	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BL3		

▽ : GROUND POINTS


Code	See Page	Ground Points Location
EA	44	Front Right Side of Fender Apron
EB		
IF	46	Set Bolt of Cowl Side J/B LH
BK	54	Front Side Under the Front Passenger's Seat
BM	54	Left Rear Side Quarter Panel




: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E5	44	Engine Room No.2 Wire	B14	56	Floor No.2 Wire
I10	48	Dash Wire			


C9

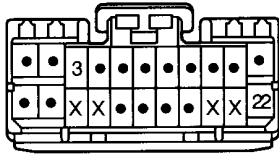

C15

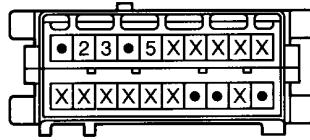

C16

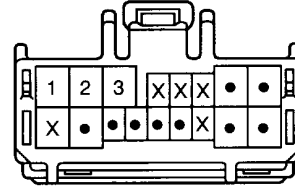

F3
GRAY




F4
GRAY




F6

(See Page 34)

I18

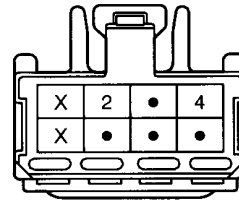


J1

 


(Hint : See Page 7)

 J6
BLUE




(Hint : See Page 7)

 J16
BLUE




(Hint : See Page 7)

J19
GRAY

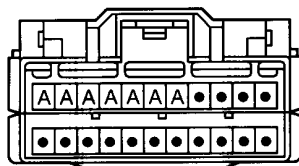


(Hint : See Page 7)

J26
BLUE

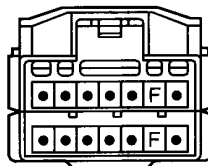


(Hint : See Page 7)

 J32




(Hint : See Page 7)

 J33
BLUE




(Hint : See Page 7)

 J39




(Hint : See Page 7)

 J40
BLUE




(Hint : See Page 7)

R10

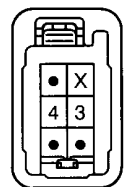

R13

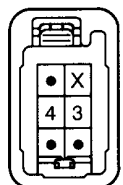

T11
BLACK



T12
GRAY

