


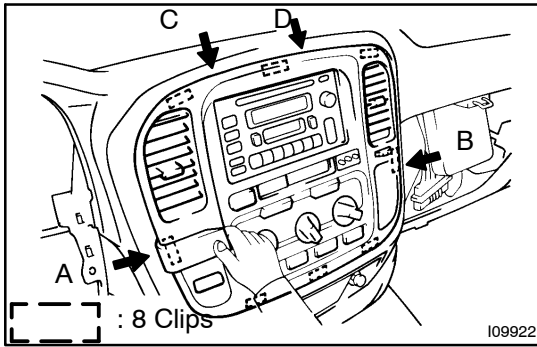

REMOVAL

REMOVE A/C CONTROL ASSEMBLY

- Using a moulding remover, remove the center cluster in order "A", "B", "C", "D", as shown in the illustration.
- Disconnect the connector.