



AIR OUTLET SERVOMOTOR INSPECTION

AC1J5-02

- 1. REMOVE LOWER NO. 1 PANEL
(See page [BO-92](#))

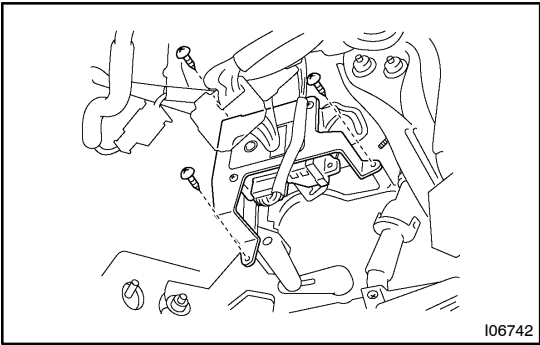

- 2. REMOVE AIR OUTLET SERVOMOTOR
 - (a) Disconnect the connector.
 - (b) Remove the 3 screws and servomotor.

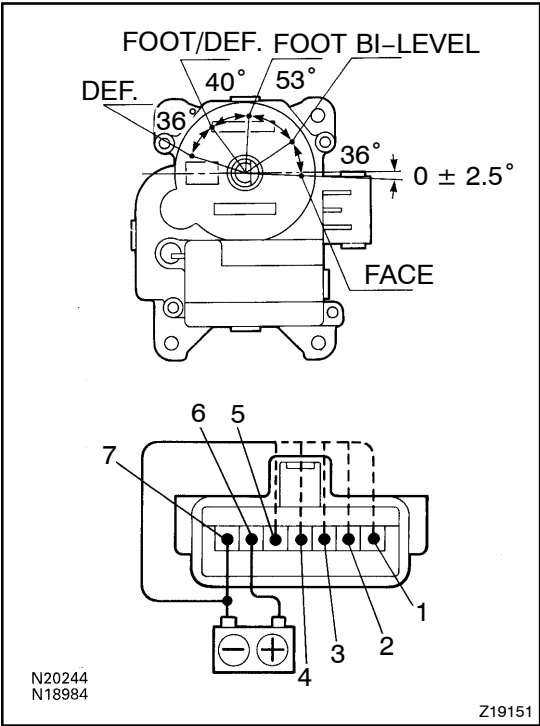

- 3. INSPECT AIR OUTLET SERVOMOTOR OPERATION
 - (a) Connect the positive (+) lead from the battery to terminal 6 and the negative (-) lead to terminal 7.
 - (b) Connect the negative (-) lead from the battery to each terminal and check that the shaft rotates at each position, as shown in the chart.

Connected terminal	Position
5	DEF.
4	FOOT/DEF.
3	FOOT
2	B/L
1	FACE

If operation is not as specified, replace the servomotor.

- 4. INSTALL AIR OUTLET SERVOMOTOR
 - (a) Install the servomotor with the 3 screws.
 - (b) Connect the connector.