


BLOWER RESISTOR (for Rear Heater)


AC1J3-02

INSPECTION

1. REMOVE FRONT SEATS
2. REMOVE REAR CONSOLE END COVER
3. REMOVE REAR HEATER CONTROL ASSEMBLY
(See page [AC-94](#))
4. REMOVE REAR CONSOLE BOX
5. REMOVE FRONT CONSOLE BOX COVER
6. REMOVE LOWER CENTER CLUSTER FINISH PANEL
7. REMOVE FRONT DOOR SCUFF PLATES
8. REMOVE COWL SIDE TRIMS
9. REMOVE REAR DOOR SCUFF PLATES
10. REMOVE CENTER PILLAR GARNISHES
11. REMOVE BLOWER RESISTOR
- (a) Slide the floor carpet backward.

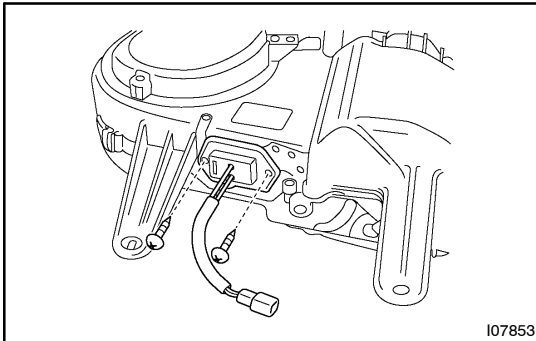

- (b) Disconnect the connector.
- (c) Remove the 2 screws and blower resistor.

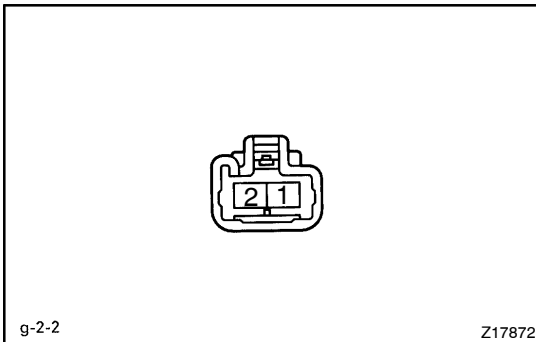

12. INSPECT BLOWER RESISTOR RESISTANCE

Measure resistance between terminals.

Standard resistance: $3.2 \pm 0.2 \Omega$

If resistance is not as specified, replace the blower resistor.

13. INSTALL BLOWER RESISTOR

- (a) Install the blower resistor with 2 screws.
- (b) Connect the connector.
- (c) Install the floor carpet.

14. INSTALL CENTER PILLAR GARNISHES

15. INSTALL REAR DOOR SCUFF PLATES

16. INSTALL COWL SIDE TRIMS

17. INSTALL FRONT DOOR SCUFF PLATES

18. INSTALL LOWER CENTER CLUSTER FINISH PANEL

19. INSTALL FRONT CONSOLE BOX COVER

20. INSTALL REAR CONSOLE BOX

21. INSTALL REAR HEATER CONTROL ASSEMBLY

(See page [AC-97](#))

22. INSTALL REAR CONSOLE END COVER

23. INSTALL FRONT SEATS