

INSPECTION

1. INSPECT AIR INLET SERVOMOTOR CIRCUIT (See page [DI-660](#))
2. INSPECT AIR INLET DAMPER POSITION SENSOR CIRCUIT (See page [DI-655](#))