


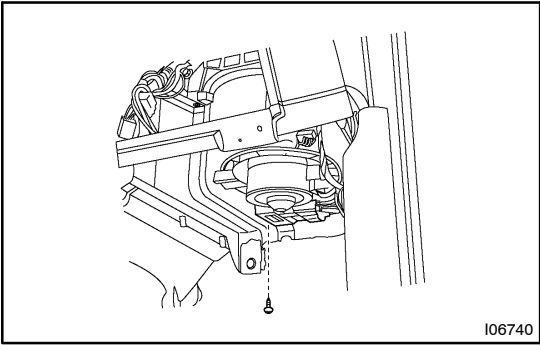


BLOWER MOTOR CONTROL RELAY INSPECTION

AC1J2-02

1. REMOVE BLOWER MOTOR CONTROL RELAY

- (a) Disconnect the connectors.
- (b) Remove the screw and relay.

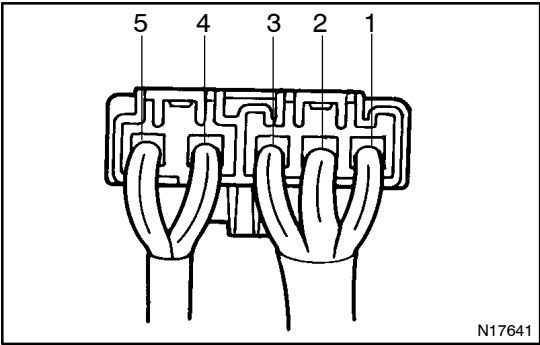

2. INSPECT BLOWER MOTOR CONTROL RELAY

Connect the connector to the relay and inspect the wire harness side connector from the back side as shown in the chart.

Test condition:

- Turn ignition switch to ON
- Blower speed: HI

Tester connection	Condition	Specified condition
1 – Ground	Constant	Continuity
2 – Ground	Constant	Battery positive voltage
3 – Ground	Constant	Battery positive voltage
4 – 5	Constant	Battery positive voltage

If circuit is not as specified, replace the relay.

3. INSTALL BLOWER MOTOR CONTROL RELAY

- (a) Install the relay with the screw.
- (b) Connect the connectors.