


HEATER MAIN RELAY INSPECTION

AC1J9-02


1. REMOVE FRONT DOOR SCUFF PLATE RH
2. REMOVE COWL SIDE TRIM RH

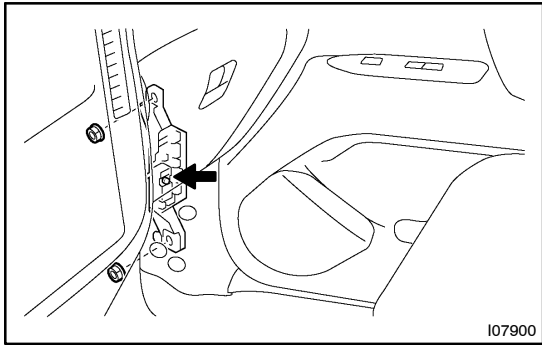

I07900

3. REMOVE HEATER MAIN RELAY


- (a) Disconnect the connectors.
- (b) Remove the 2 No. 3 junction block set nuts.
- (c) Loosen the connector set bolt and disconnect the connector.
- (d) Pull out the No. 3 junction block.

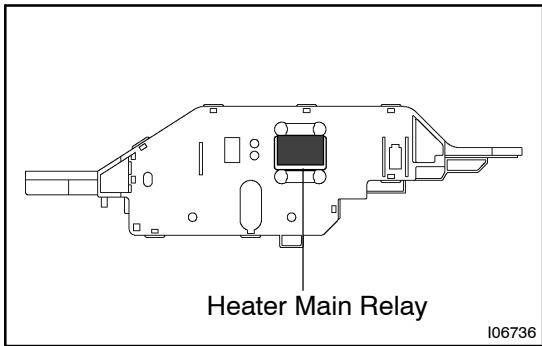

Heater Main Relay

I06736

- (e) Remove the heater main relay from No. 3 junction block.

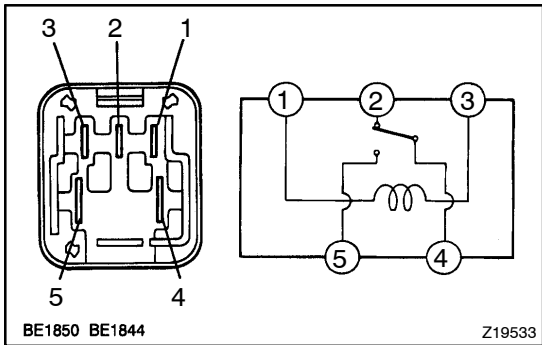

BE1850 BE1844

Z19533

4. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 4 3 - 1	Continuity
Apply B+ between terminals 1 and 3.	5 - 4	Continuity

If continuity is not as specified, replace the relay.

5. INSTALL HEATER MAIN RELAY

- (a) Install the heater main relay to No. 3 junction block.
- (b) Connect the connector and tighten the bolt.
- (c) Install the 2 No. 3 junction block set nuts.
- (d) Connect the connectors.

6. INSTALL COWL SIDE TRIM RH

7. INSTALL FRONT DOOR SCUFF PLATE RH