



REAR HEATER HI RELAY INSPECTION

AC1JB-02

1. REMOVE FRONT SEATS
2. REMOVE REAR HEATER CONTROL ASSEMBLY
(See page [AC-94](#))
3. REMOVE REAR CONSOLE BOX
4. REMOVE FRONT CONSOLE BOX COVER
5. REMOVE LOWER CENTER CLUSTER FINISH PANEL
6. REMOVE FRONT DOOR SCUFF PLATES
7. REMOVE COWL SIDE TRIMS
8. REMOVE REAR DOOR SCUFF PLATES
9. REMOVE CENTER PILLAR GARNISHES
10. SLIDE FLOOR CARPET BACKWARD

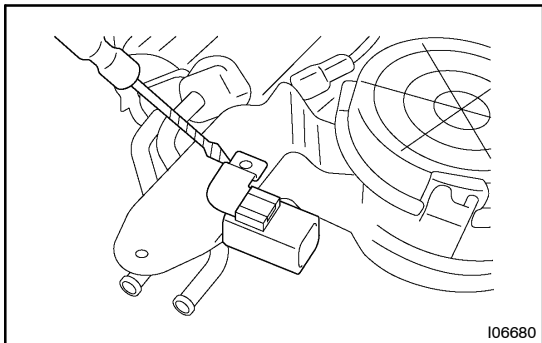

11. REMOVE REAR HEATER RELAY
 - (a) Disconnect the connector.
 - (b) Using a screwdriver, release the claw and remove the relay.

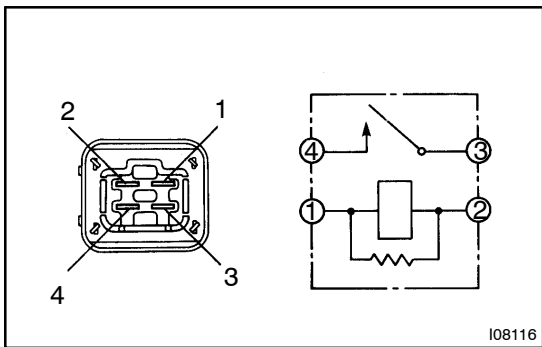

12. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 3	Continuity
Apply B+ between terminals 1 and 2.	3 - 4	Continuity

If continuity is not as specified, replace the relay.

13. INSTALL REAR HEATER RELAY
 - (a) Install the relay to rear heater unit.
 - (b) Connect the connector.
14. INSTALL FLOOR CARPET
15. INSTALL CENTER PILLAR GARNISHES
16. INSTALL COWL SIDE TRIMS
17. INSTALL FRONT DOOR SCUFF PLATES
18. INSTALL LOWER CENTER CLUSTER FINISH PANEL
19. INSTALL FRONT CONSOLE BOX COVER
20. INSTALL REAR CONSOLE BOX
21. INSTALL REAR HEATER CONTROL ASSEMBLY
(See page [AC-97](#))
22. INSTALL FRONT SEATS