


REMOVAL

1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all the coolant.

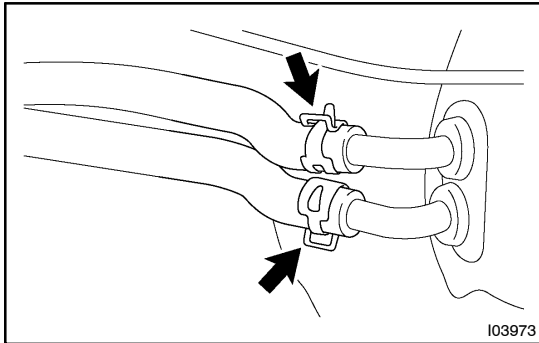

2. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- Using pliers, grip the claws of the clip and slide the clip along the hose.
- Disconnect the water hoses.

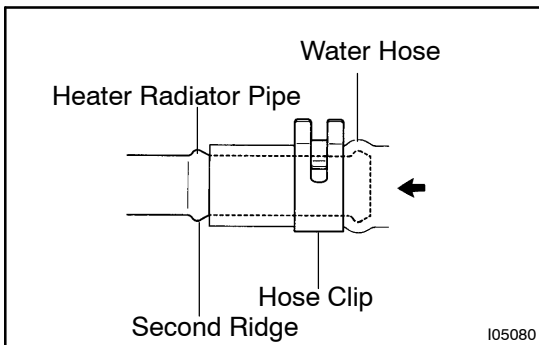

HINT:

At the time of installation, please refer to the following item.

- Push the water hose on to the heater radiator pipe as far as the second ridge on the pipe.
- Install the hose clip in the position, as shown in the illustration.

3. REMOVE FRONT SEATS

4. REMOVE REAR HEATER CONTROL ASSEMBLY (See page [AC-94](#))

5. REMOVE REAR CONSOLE BOX

6. REMOVE FRONT CONSOLE BOX COVER

7. REMOVE LOWER CENTER CLUSTER FINISH PANEL


8. REMOVE FRONT DOOR SCUFF PLATES

9. REMOVE COWL SIDE TRIMS

10. REMOVE REAR DOOR SCUFF PLATES


11. REMOVE CENTER PILLAR GARNISHES

12. SLIDE FLOOR CARPET BACKWARD

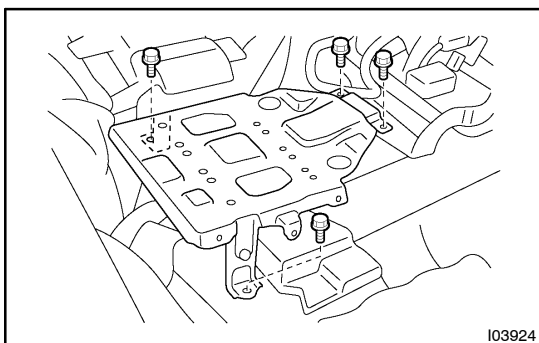


13. REMOVE COOLER BRACKET

Remove the 4 bolts and bracket.

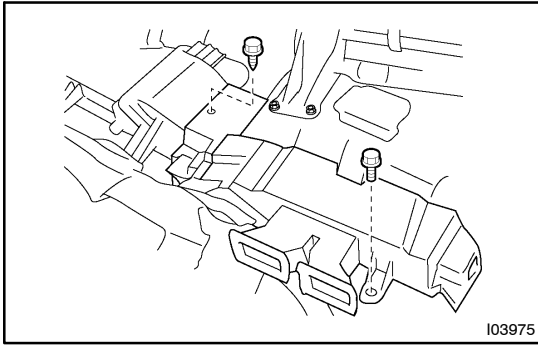**14. REMOVE REAR HEATER DUCT**

Remove the bolt, screw and duct.

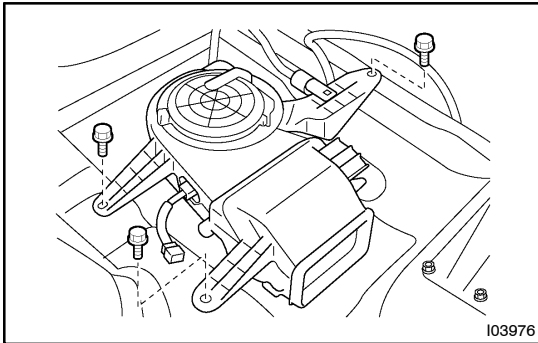**15. REMOVE REAR HEATER UNIT**

- (a) Disconnect the connector.
- (b) Remove the 3 bolts and heater unit.