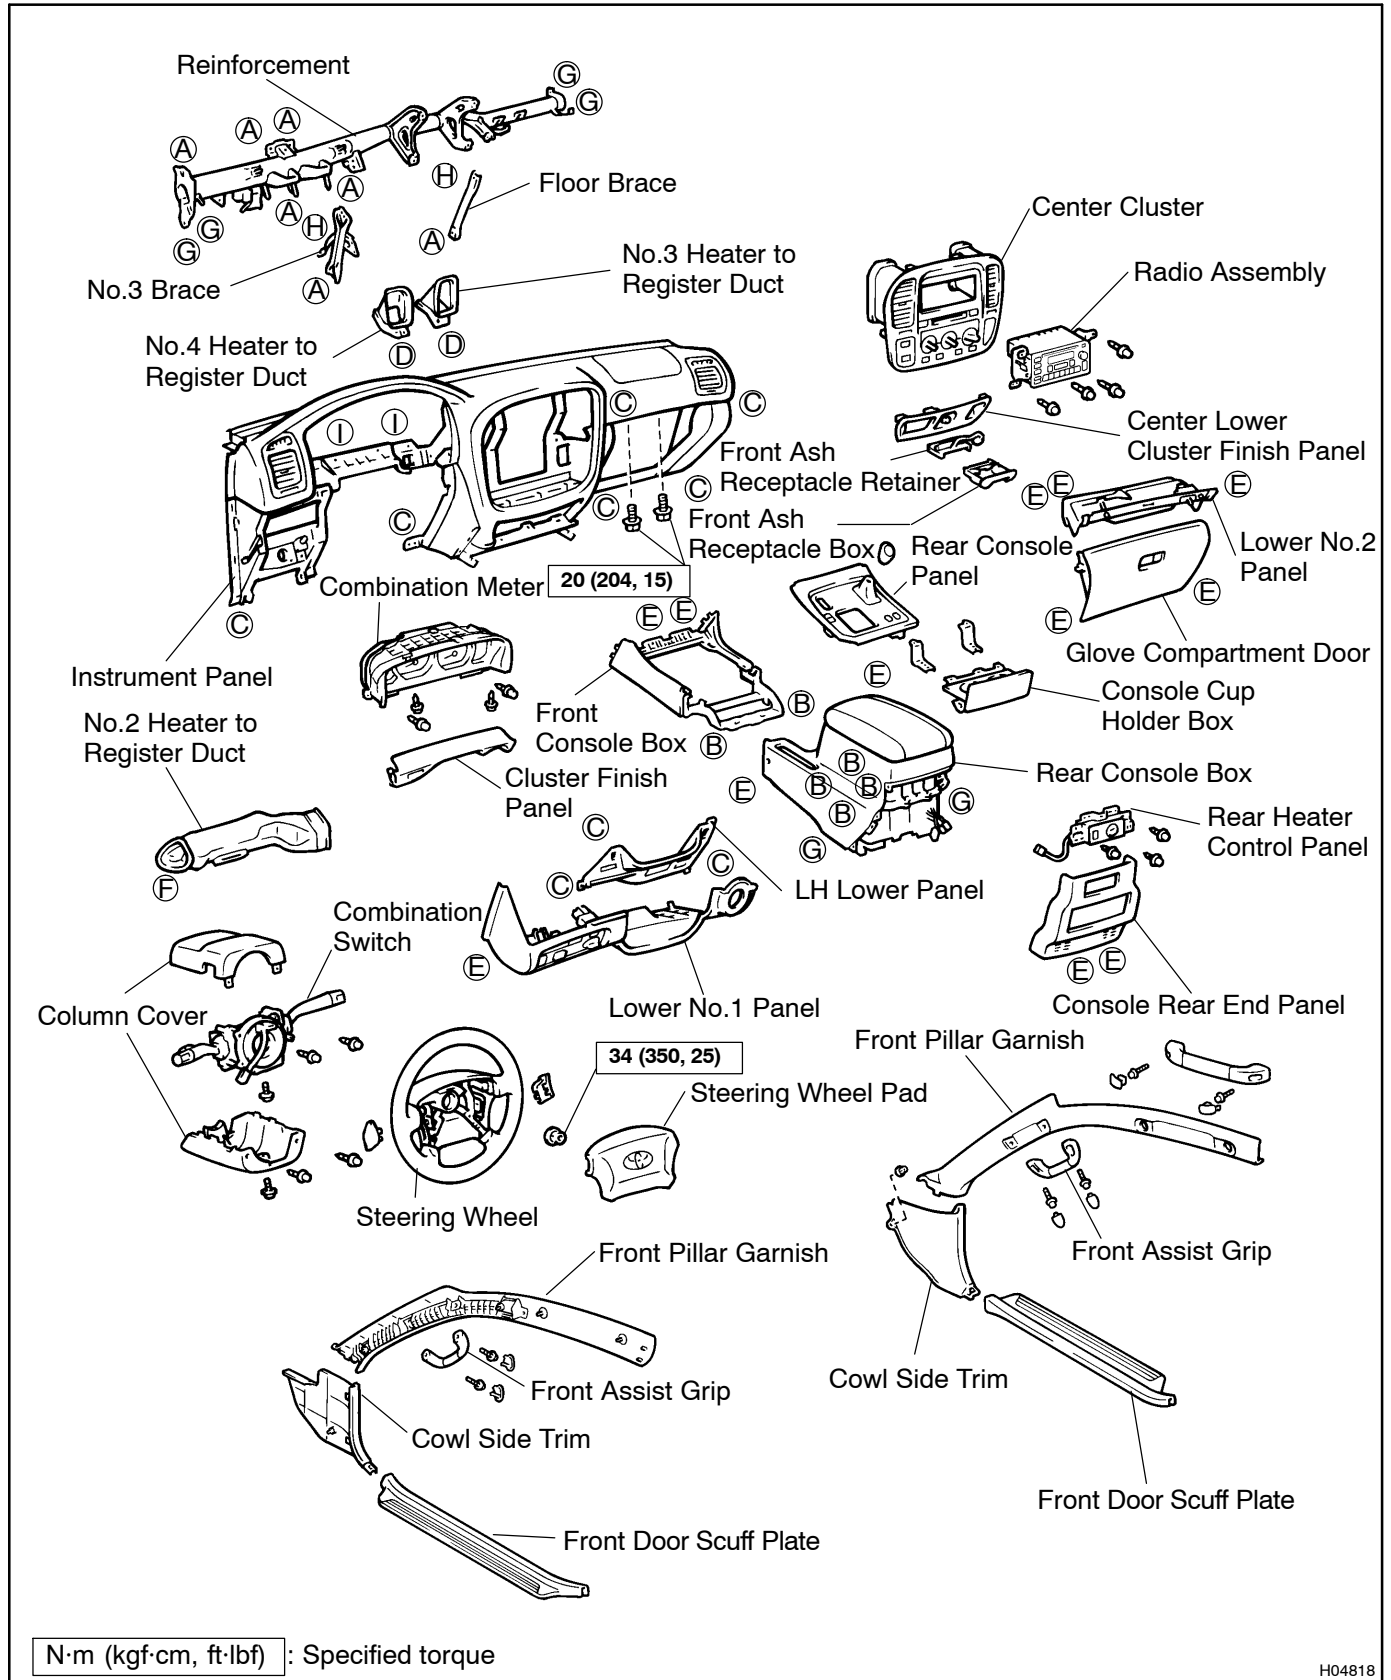
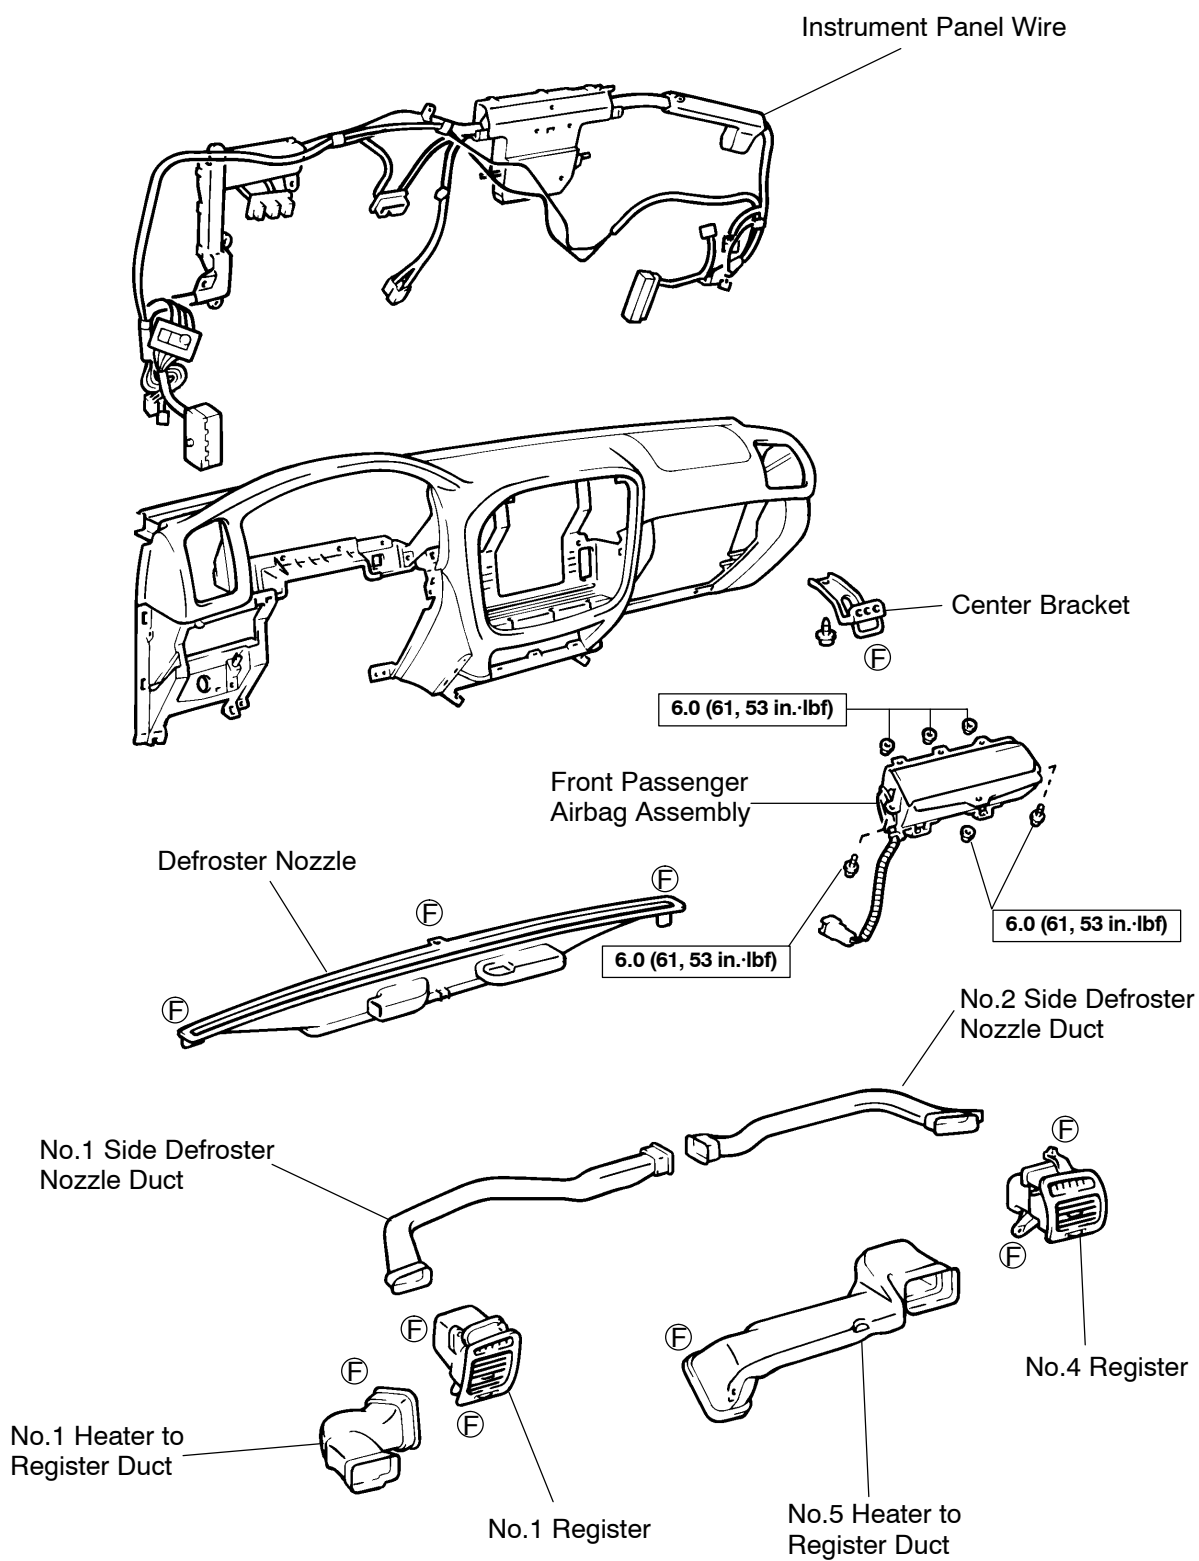


INSTRUMENT PANEL COMPONENTS

BO1KK-02



H04818

 
 
 
 
 
 
 
 
 


N·m (kgf·cm, ft·lbf) : Specified torque

H04819

HINT:

Screw shapes and sizes are indicated in the table below. The codes ("A" – "I") correspond to those indicated on the previous page.

mm (in.)								
	Shape	Size		Shape	Size		Shape	Size
(A)		$\varnothing = 8$ (0.31) L = 16 (0.63)	(B)		$\varnothing = 6$ (0.24) L = 18 (0.71)	(C)		$\varnothing = 6$ (0.24) L = 16 (0.63)
(D)		$\varnothing = 6$ (0.24) L = 16 (0.63)	(E)		$\varnothing = 5$ (0.20) L = 16 (0.63)	(F)		$\varnothing = 5$ (0.20) L = 14 (0.55)
(G)		$\varnothing = 5$ (0.20) L = 14 (0.55)	(H)		$\varnothing = 8$ (0.31)	(I)		$\varnothing = 6$ (0.24)

H04082