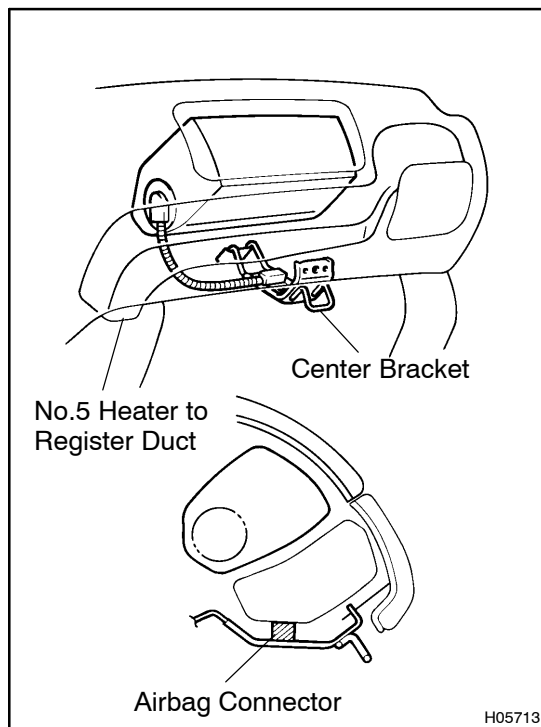


## INSTALLATION

1. INSTALL REINFORCEMENT
2. INSTALL NO.1 BRACE
3. INSTALL FLOOR BRACE
4. INSTALL NO.4 HEATER TO REGISTER DUCT
5. INSTALL NO.3 HEATER TO REGISTER DUCT
6. INSTALL ECM (See page [SF-61](#))



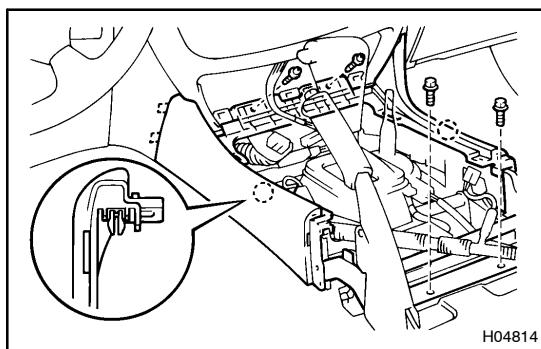
### 7. INSTALL INSTRUMENT PANEL

#### HINT:

- Install the airbag connector between the No.5 heater to register duct and center bracket temporarily, then install the instrument panel.
  - Remove the airbag connector before installing the lower No.2 panel.
- (a) Install the 6 bolts, 2 nuts and instrument panel, then connect the connectors.
  - (b) Install the 2 bolts to the front passenger airbag assembly.  
**Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)**
  - (c) Connect the junction connectors.

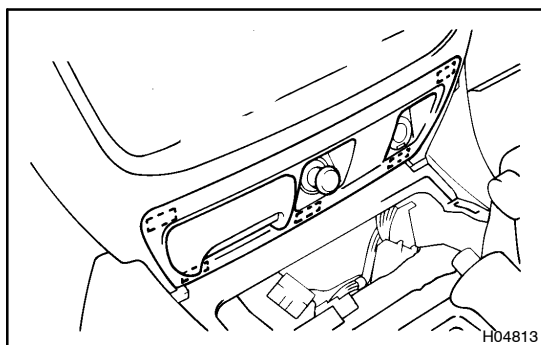
#### HINT:

The connectors can be connected by tightening the bolts.



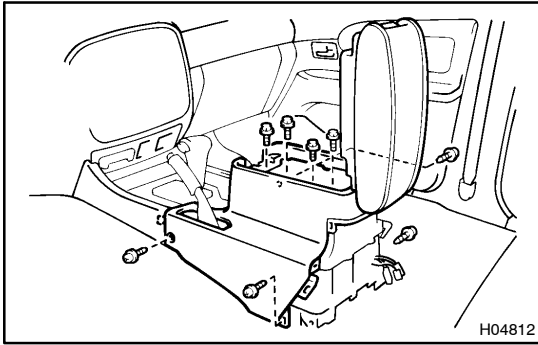
### 8. INSTALL FRONT CONSOLE BOX

Install the front console box with the 2 bolts and 2 screws.



### 9. INSTALL CENTER LOWER CLUSTER FINISH PANEL

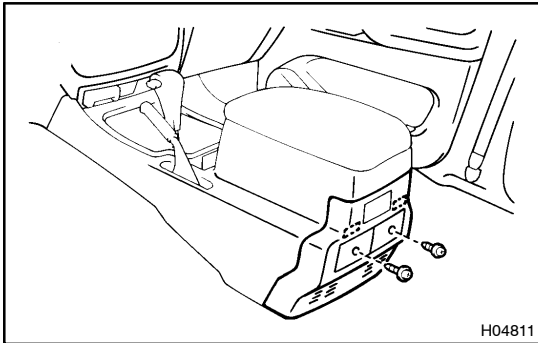
Connect the connector, then install the center lower cluster finish panel.

**10. INSTALL REAR CONSOLE BOX**

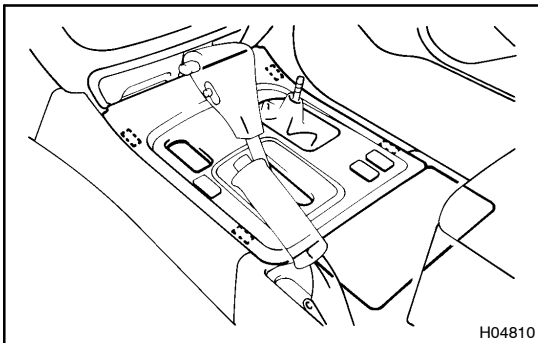
Install the rear console box with the 4 bolts and 4 screws.

**11. w/o Rear cooler:****INSTALL REAR HEATER CONTROL PANEL**

Install the rear heater control panel with the 3 screws, then connect the connector and control cable.

**12. INSTALL CONSOLE REAR END PANEL**

Install the console rear end panel with the 2 screws.

**13. INSTALL REAR CONSOLE PANEL**

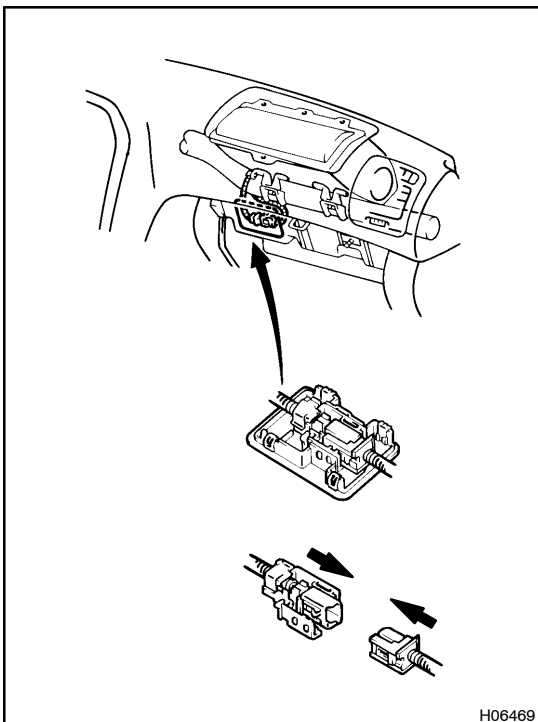
Install the rear console panel, then install the transfer shift lever knob.

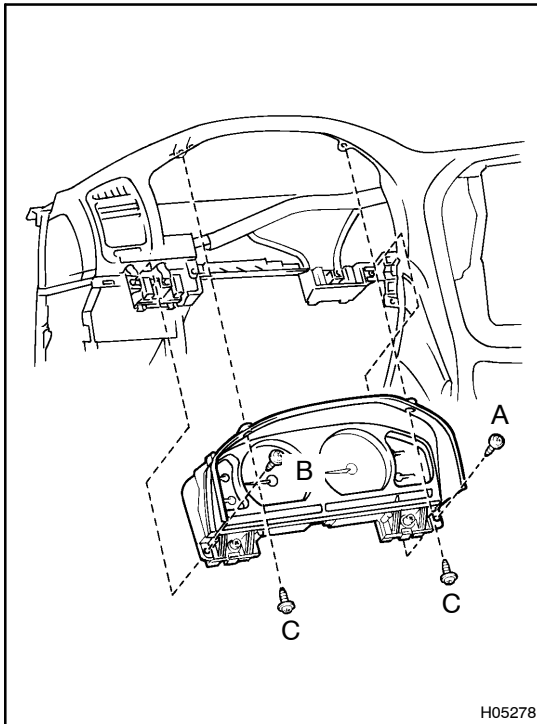
**14. INSTALL RADIO ASSEMBLY****15. INSTALL CENTER CLUSTER**

Connect the connectors, then install the center cluster.

**16. INSTALL LOWER NO.2 PANEL**

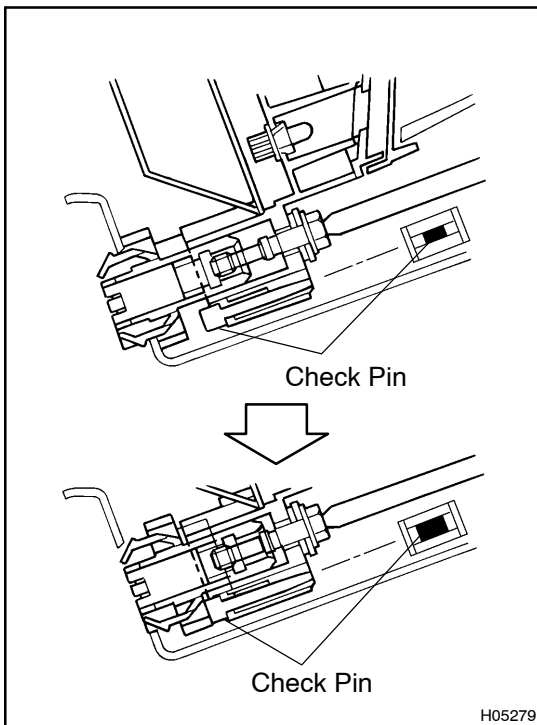
Install the lower No.2 panel with the 3 screws.

**17. CONNECT AIRBAG CONNECTOR (See page [RS-35](#))****18. INSTALL GLOVE COMPARTMENT DOOR**



### 19. INSTALL COMBINATION METER

- Check that the set-in connectors are connected in the installation holes on the instrument panel securely.
- Place the combination meter on the instrument panel.
- Install the combination meter by tightening the screws, "A", "B" and "C" in the order.



- Tighten the connection bolts.

#### HINT:

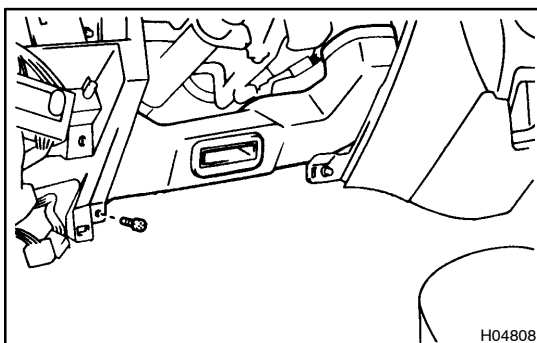
- When connection completes, the bolts turn vainly, causing turning noise.
- Check this noise and that the connection check pins protrude from the lower side of the connection bolts.

#### NOTICE:

Follow the procedures in order of (c) and (d). Otherwise, set-in connectors on the wire harness side and connectors on the meter side might not be connected properly.

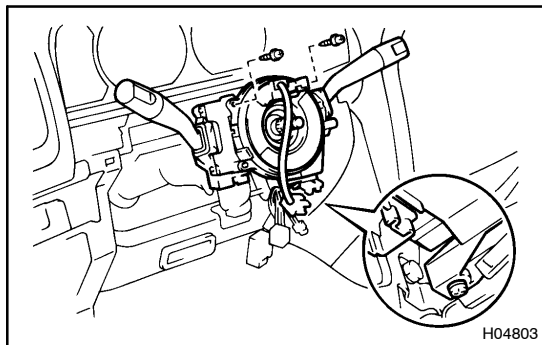
### 20. INSTALL STEERING COLUMN

(See page [SR-22](#) or [SR-35](#))



### 21. INSTALL NO.2 HEATER TO REGISTER DUCT

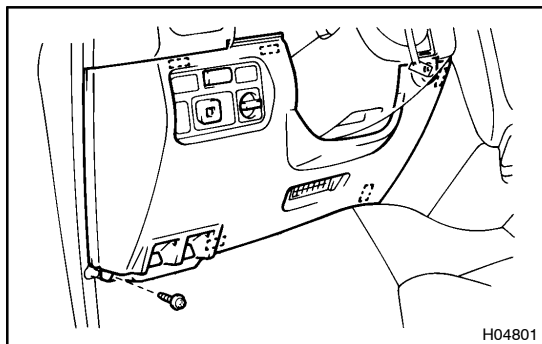
Install the No.2 heater to register duct with the screw.

**22. INSTALL COMBINATION SWITCH**

- (a) Install the combination switch with the 3 screws.
- (b) Install the clamp, then connect the connectors.

**23. INSTALL COLUMN COVERS**

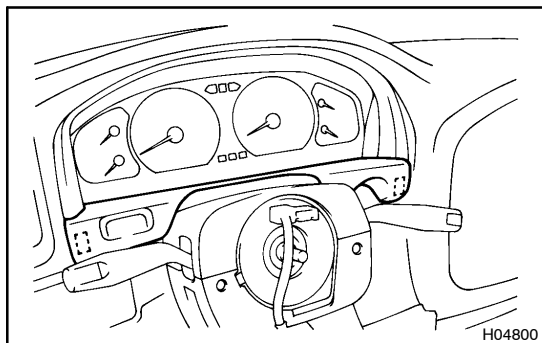
Install the column covers with the 3 screws.

**24. INSTALL LH LOWER PANEL****25. INSTALL LOWER NO.1 PANEL**

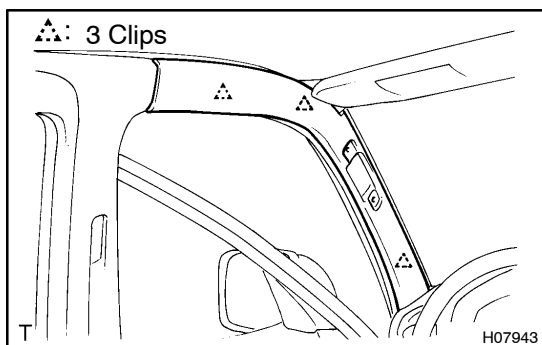
Connect the connector, then install the lower No.1 panel with the screw.

**26. INSTALL HOOD LOCK AND FUEL LID CONTROL CABLE LEVER**

- (a) Install the fuel lid control cable lever with the 2 screws.
- (b) Install the hood lock control cable with the 2 screws.

**27. INSTALL CLUSTER FINISH PANEL****28. INSTALL STEERING WHEEL**

(See page [SR-22](#) or [SR-35](#))

**29. INSTALL FRONT PILLAR GARNISH**

- (a) Install the front pillar garnish.
- (b) Employ the same manner described above to the other side.
- (c) Driver's side:  
Install the assist grip with the 2 screws, then install the 2 assist grip plugs.
- (d) Passenger's side:  
Install the 2 assist grips with the 4 screws, then install the 4 assist grip plugs.

**30. INSTALL FRONT DOOR OPENING TRIMS****31. INSTALL COWL SIDE TRIMS****32. INSTALL FRONT DOOR SCUFF PLATES**