


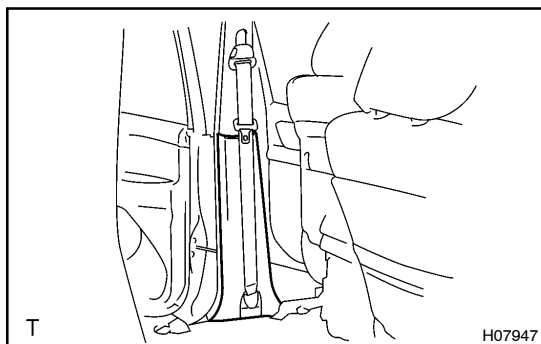

## INSPECTION

### 1. PRETENSIONER IS NOT ACTIVATED

- (a) Perform a diagnostic system check (See page [DI-344](#)).
- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
  - Check for cuts and cracks in, or marked discoloration of the center pillar lower garnish.
  - Check for cuts and cracks in wire harness, and for chipping in connectors.
  - Check for deformation of the center pillar.

### CAUTION:

**For removal and installation of the front seat outer belt, see page [BO-142](#) and [BO-151](#).**

**Be sure to follow the correct procedure.**

### 2. PRETENSIONER IS ACTIVATED

- (a) Perform a diagnostic system check (See page [DI-344](#)).
- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
  - Check for deformation of the center pillar.
  - Check for damage on the connector and wire harness.

