


PARKING BRAKE LEVER ON-VEHICLE INSPECTION

1. CHECK PARKING BRAKE LEVER TRAVEL

Pull the parking brake lever all the way up, and count the number of clicks.

**Parking brake lever travel at 196 N (20 kgf, 44 lbf):
4 – 6 clicks**

If incorrect, adjust the parking brake.

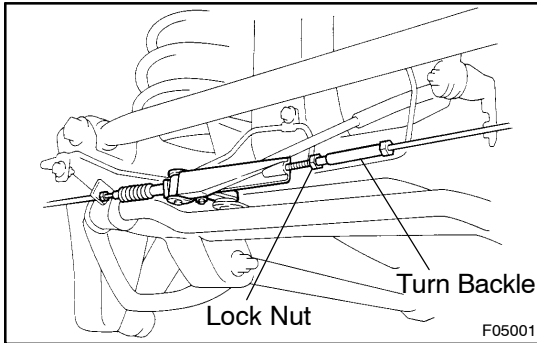


2. IF NECESSARY, ADJUST PARKING BRAKE

HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted. For shoe clearance adjustment see page [BR-38](#).

- Loosen the lock nut and turn the turn backle until the lever travel is correct.
- Tighten the lock nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

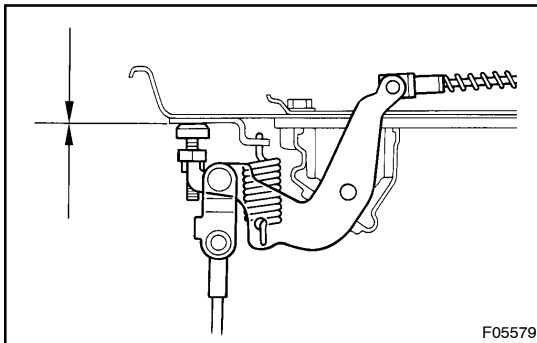

3. CHECK BELLCRANK

- Check that the adjusting bolt on the bellcrank is not apart from the backing plate.
- When the adjusting bolt on the bellcrank is apart from the backing plate adjust the parking brake cable once again.