


DTC	RrDEF, M2	Air Inlet Damper Control Servomotor Circuit
------------	------------------	--

CIRCUIT DESCRIPTION


The air inlet damper control servomotor is controlled by the A/C amplifier and moves the air inlet damper to the desired position.

Blinking light	Detection item	Trouble Area
RrDEF M2	Air inlet damper position sensor value does not change even if A/C amplifier operated air inlet damper control servomotor.	• Air inlet damper position sensor • Harness or connector between air inlet damper control servomotor assembly and A/C amplifier • A/C amplifier

WIRING DIAGRAM

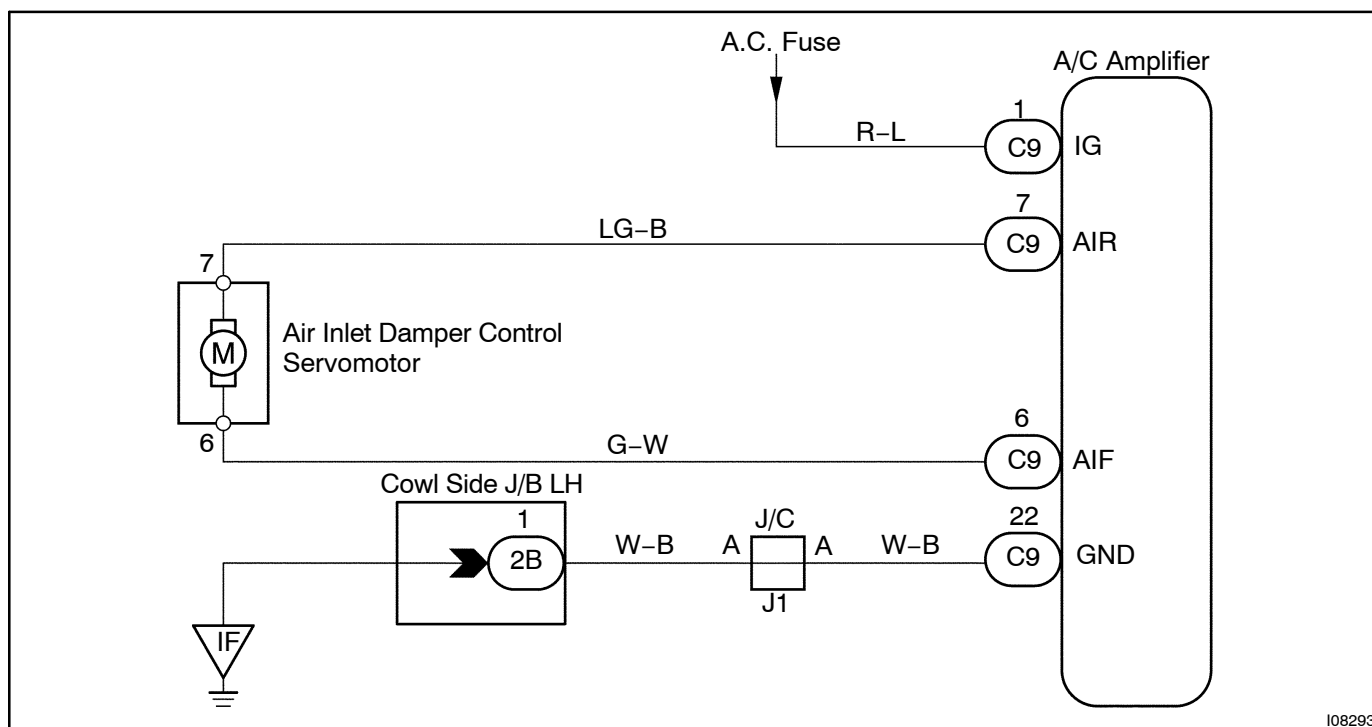

I08293

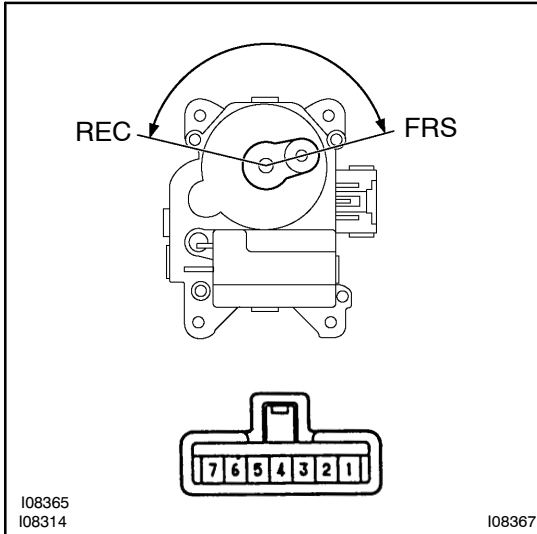INSPECTION PROCEDURE**1 Check air inlet damper control servomotor.****PREPARATION:**

- (a) Remove air inlet servomotor (See page [AC-46](#)).
- (b) Disconnect the air inlet damper control servomotor assembly connector.

CHECK:

Connect positive (+) lead to terminal 7 and negative (–) lead to terminal 6.

OK:

The lever moves smoothly to REC position.

CHECK:

Connect positive (+) lead to terminal 6 and negative (–) lead to terminal 7.

OK:

The lever moves smoothly to FRS position.

NG

Replace air inlet damper control servomotor assembly.

OK**2 Check harness and connector between A/C amplifier and air inlet damper control servomotor (See page [IN-34](#)).****NG**

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.